

**Support Bulletin-SB-26-10056**

**Date-4.21.2026**

**Title: 3CS ECU Update Info**

**Product Line: FAS**

**Model: Any 3CS(small) ECU**

**Level: Public**

**Author(s):Bo Downing**

**Revision Letter:** [Click or tap here to enter text.](#)



**Overview:** If you have multiple 3CS ECU's on a system, you can have issues if you are updating software. Only update one ECU at a time by unplugging any other 3CS ECU on the Bus.

**Links to Supporting Info:**

Check out the [Link](#) on how to use the GEN 2 ECU updater which is required for the 3CS ECU.

[Gen 2 ECU Updater Video](#)

**Solution:**

Steps:

1. Identify the ECU that needs to be updated.
2. Unplug any other 3CS ECUs on the Bus.
3. Complete software update with the Gen 2 ECU Updater to the correct ECU.
4. Plug all ECUs back in.
5. Make sure after updating the ECU to delete object pool and check that the correct software is on the ECU.

**If you have multiple ECUs that need updating you will have to follow the step for each ECU.**

**3CS ECU- Used on Sentinel 1000, GFX, and RFX Systems.**



**SENTINEL**™

**GFX**™  
Hydraulic Row Cleaners

**RFX**™  
Row Unit Suspension