




396-4109Y1

Instructions for switching the polarity on the Run/Hold Finger Switch

Part Number: 501-1000 Finger Type Work Switch Assembled with Magnetic Mount (3-pin MP150 Shroud)


Remove two flat head screws along with the bottom enclosure, exposing the three terminals of the switch. (see below)

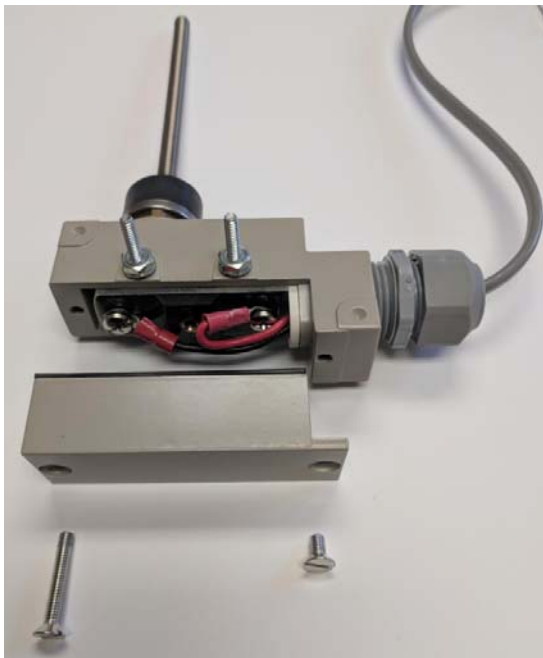

After you are finished switching the polarity of the switch, re-install bottom enclosure and screws. Make sure rubber gasket stays in place.



Normally Closed Circuit Configuration
(All Switches come setup normally closed. When switch is actuated, circuit is broken)

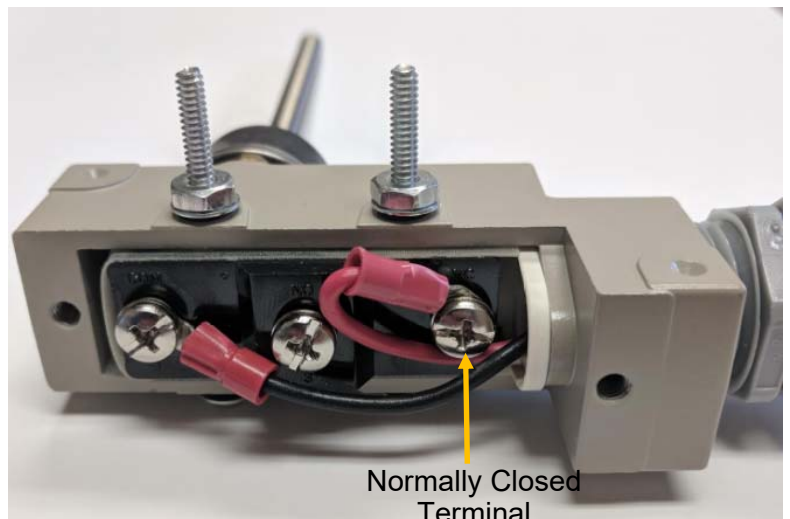

Normally Open Circuit Configuration
(Move Red Wire to middle terminal. When switch is actuated, circuit is completed)

