

RAVEN

Simply improving your position.<sup>SM</sup>

# Installation & Operation Manual



**Envizio Pro™ & Envizio Pro II™**  
(Software Version 3.2)

## ***Disclaimer***

---

While every effort has been made to ensure the accuracy of this document, Raven Industries assumes no responsibility for omissions and errors. Nor is any liability assumed for damages resulting from the use of information contained herein.

Raven Industries shall not be responsible or liable for incidental or consequential damages or a loss of anticipated benefits or profits, work stoppage or loss, or impairment of data arising out of the use, or inability to use, this system or any of its components. Raven Industries shall not be held responsible for any modifications or repairs made outside our facilities, nor damages resulting from inadequate maintenance of this system.

As with all wireless and satellite signals, several factors may affect the availability and accuracy of wireless and satellite navigation and correction services (e.g. GPS, GNSS, SBAS, etc.). Therefore, Raven Industries cannot guarantee the accuracy, integrity, continuity, or availability of these services and cannot guarantee the ability to use Raven systems, or products used as components of systems, which rely upon the reception of these signals or availability of these services. Raven Industries accepts no responsibility for the use of any of these signals or services for other than the stated purpose.

Calibration Reference Sheet .....	ix
Unit Definitions and Conversions .....	x
Unit of Measure Definitions .....	x
Unit of Measure Conversions .....	x
<b>Chapter 1    <i>Important Safety Information</i>.....</b>	<b>1</b>
Safety Information .....	1
Hydraulic Safety .....	2
Electrical Safety .....	2
<b>Chapter 2    <i>Introduction</i>.....</b>	<b>3</b>
Envizio Pro and Envizio Pro II Features .....	4
Speed Compensated Product Control and Datalogging .....	4
On-Screen Guidance .....	4
Internal DGPS Receiver .....	5
Optional Features .....	6
Front Panel .....	6
Resistive Touch Screen Technology .....	7
Icon Based Operation .....	7
Rear Panel .....	8
Care and Use .....	9
Technical Specifications .....	9
<b>Chapter 3    <i>Installation</i>.....</b>	<b>11</b>
Overview of the Installation Process .....	11
Kit Contents .....	12
Mounting the Field Computer .....	16
Cable Platforms and Connections .....	17
Generation 1 Cable Connections .....	17
Generation 2 Cable Connections .....	19
DGPS Antenna .....	20
Installing Optional Equipment .....	22
Boom Sense Wire (Interface Cable Only) .....	22
AccuBoom™ .....	23
Lightbar .....	23
TM-1 Tilt Module .....	23
SmarTrax™ and SmartSteer™ .....	24
Serial Console .....	24
AutoBoom™ .....	25
CANbus Network Connection .....	25

**Chapter 4    *CAN Networking and Diagnostics* ..... 27**

- CAN Diagnostics ..... 30
  - Node Version Information ..... 31
  - Readdressing the Nodes ..... 31
  - Reset CANbus Defaults ..... 32
  - Restart CAN Communication ..... 32
  - Additional Node Options ..... 32
- Programming CANbus Nodes ..... 33
- CAN Troubleshooting ..... 34
  - CAN Node Off-line Errors ..... 34

**Chapter 5    *Startup, Initial Setup and Setup Wizards*..... 35**

- Overview ..... 35
  - Initial Setup ..... 35
- Startup ..... 36
  - Touch Screen Calibration ..... 37
- Initial Setup Wizard ..... 38
  - Region ..... 38
  - Guidance Width ..... 38
  - Offsets ..... 39
  - Control Interface ..... 41
  - Serial Port Configuration ..... 44
- Setup Wizards ..... 44
  - Setup Wizard Menu ..... 44
- Section Setup Wizard ..... 46
  - Using the Section Setup Wizard ..... 46
- Product Control Setup Wizard ..... 49
  - Using the Product Control Setup Wizard ..... 49
- AutoBoom™ Setup Wizard ..... 52
  - Using the AutoBoom™ Setup Wizard ..... 52

**Chapter 6    *Basic Operation*..... 53**

- Overview ..... 53
- Home Screen ..... 53
  - GPS Status ..... 54
  - Wireless Communications Status ..... 55
  - Information ..... 55
  - Closing Jobs and Power Down ..... 55
- Job Files ..... 57
  - Overview ..... 57
- Starting a Job ..... 57
  - Setting up a Job ..... 58

Guidance Screen .....	64
Guidance Features .....	64
Using Guidance Patterns .....	65
Product Control Features .....	70
Menu .....	75
Home .....	75
Guidance Views .....	75
A-B Path Tools .....	76
Field Review Mode .....	78
Field Review Mode Tools .....	79
Field Boundaries .....	81
Field Boundary Tools .....	82
Prescription Maps and Variable Rates .....	84
Loading Rx Maps .....	84
Applying Rx Maps .....	85
Using Prescription Maps .....	86
System Alarms .....	87
Alarms Area .....	87
Audible Alarms .....	88
<b>Chapter 7   Tools Menu .....</b>	<b>89</b>
Accessing and Navigating the Tools Menu .....	89
Wizard Menu .....	90
System Menu .....	90
GPS Menu .....	90
Computer Menu .....	90
Vehicle Menu .....	91
Show All .....	91
Navigation .....	91
On-Screen Keyboard .....	92
System Menu .....	93
Control Interface .....	93
Product Control Options .....	94
Boom Master Options .....	96
Serial Port Configuration .....	97
CAN Diagnostics .....	98
Product Control .....	98
Application Type .....	99
Speed .....	99
Valve .....	101
Calibration Settings .....	105
Volume and Area Settings .....	109
Feature Settings .....	110
Alarm Settings .....	112

**Table of Contents**

---

Section Assignments .....	114
AccuBoom™ .....	114
AutoBoom™ .....	114
Steering .....	115
GPS Menu .....	115
Reverse Sensing .....	115
GPS Health .....	116
Differential .....	119
Output .....	121
Source .....	122
Tilt Sensor .....	123
Computer Menu .....	124
Display .....	124
Region .....	126
Updates .....	127
File Maintenance .....	128
Web .....	128
Vehicle Menu .....	129
Guidance Width .....	129
Offsets .....	130
Boom Sections .....	132
Profiles .....	136
Show All .....	137
<b>Chapter 8     <i>Software Updates and File Maintenance</i></b> .....	<b>139</b>
Overview .....	139
File Maintenance .....	140
File Outputs .....	140
Performing File Maintenance .....	141
File Structure .....	143
ePro Directory .....	143
Updates .....	145
Applying Software Updates .....	146
<b>Chapter 9     <i>Using AccuBoom™</i></b> .....	<b>149</b>
Introduction .....	149
CAN Switch Box .....	149
AccuBoom™ Setup .....	150
On Override .....	150
Section Selection .....	151
Aggressiveness Factor .....	151
Master Pressure .....	152
Turn Off Percent .....	153

---

Look Ahead .....	153
Enable Zero Speed Override Popup .....	153
Enabling AccuBoom™ .....	154
AccuBoom™ Modes .....	156
Using Spray Zone Maps .....	157
Loading a Field Boundary .....	157
AccuBoom™ Mapping Tools .....	158
On-Screen Tools .....	158
Creating an AccuBoom™ Spray Zone Map .....	159
AccuBoom™ Spray Zone Map Examples .....	162
<b>Chapter 10 Using AutoBoom™ .....</b>	<b>165</b>
Introduction .....	165
PowerGlide Plus .....	165
UltraGlide .....	166
AutoBoom™ Operation .....	166
Status Display .....	166
AutoBoom™ Indicators .....	167
<b>Chapter 11 Troubleshooting .....</b>	<b>169</b>
Troubleshooting Information .....	169
General Issues .....	169
Setup Issues .....	170
Job Issues .....	170
Coverage Map Issues .....	171
Error Messages .....	171
Job Error Messages .....	171
GPS Error Messages .....	172
CAN Troubleshooting .....	173

## Appendices

Appendix A	<i>Calculating the Calibration Values</i> .....	175
Appendix B	<i>Testing Cables</i> .....	187
Appendix C	<i>Bogballe Calibrator Zurf Interface</i> .....	189
Appendix D	<i>Wireless Communications &amp; Remote Service</i> .....	195
Appendix E	<i>Updating CAN Nodes via the Envizio Pro or Envizio Pro II...</i> 201	
Appendix F	<i>Reference of Icons</i> .....	203



---

## *Calibration Reference Sheet*

Record the settings and calibration values used when programming the field computer and keep this sheet for future reference or when contacting a service technician.

Circle the setting selected on the field computer for the following options:

<b>UNITS</b>	US (Acres)	SI (Hectares)	Turf (1000 Square Feet)		
<b>SPEED SENSOR</b>	SP1 (Wheel Speed)		SP2 (Radar)		
<b>CONTROL TYPE</b>	Liquid Sprayer	Gran 1 (Single belt bed)	Gran 2 (Split belt bed, single encoder)	Gran 3 (Split belt bed, dual encoders)	Spinner RPM Control
<b>VALVE TYPE</b>	Standard Valve	Fast Valve	Fast Close Valve	PWM Valve	PWM Close Valve

Write down the calculated calibration values in the spaces provided.

Speed Cal	Boom Widths (Boom Cal)	Meter Cal	Rate Cal	Valve Cal	Volume in Tank/Bin
1.	1.	1.	1.	1.	1.
	2.	2.	2.	2.	2.
	3.	3.	3.	3.	3.
	4.	4.	4.	4.	4.
	5.				
	6.				
	7.				
	8.				
	9.				
	10.				

## Unit Definitions and Conversions

### Unit of Measure Definitions

Abbreviation	Definition	Abbreviation	Definition
GPM	Gallons per Minute	cm	Centimeters
lit/min	Liters per Minute	dm	Decimeters
dl/min	Deciliters per Minute	m	Meter
PSI	Pounds per Square Inch	MPH	Miles per Hour
kPa	Kilopascal	km	Kilometers
GPA	Gallons per Acre	km/h	Kilometers per Hour
lit/ha	Liters per Hectare	US	Volume per Acre
ml/ha	Milliliters per Hectare	SI	Volume per Hectare
GPK	Gallons per 1,000 Square Feet	TU	Volume per 1,000 Square Feet
mm	Millimeters	[ ]	Metric Numbers

### Unit of Measure Conversions

To convert the METER CAL value into the selected unit of measure, divide the original number printed on the Flow Meter label by the desired conversion value.

Fluid Ounces Conversion Formula	Liters Conversion Formula	Pounds Conversion Formula
$\frac{\text{Original METER CAL Number}}{128}$	$\frac{\text{Original METER CAL Number}}{3.785}$	$\frac{\text{Original METER CAL Number}}{\text{Weight of One Gallon of Product}}$

#### Liquid

- 1 U.S. gallon = 128 fluid ounces
- 1 U.S. gallon = 3.785 liters
- 1 U.S. gallon = 0.83267 imperial gallons
- 1 U.S. gallon = 8.34 pounds (water)

#### Area

- 1 square meter = 10.764 square feet
- 1 hectare = 2.471 acres or 10,000 square meters
- 1 acre = 0.405 hectares or 43,560 square feet
- 1 square mile = 640 acres or 258.9 hectares

#### Length

- 1 millimeter (mm) = 0.039 inches
- 1 centimeter (cm) = 0.393 inches
- 1 meter (m) = 3.281 feet
- 1 kilometer (km) = 0.621 miles
- 1 inch = 25.4 mm or 2.54 cm
- 1 mile = 1.609 km

#### Pressure

- 1 psi = 6.89 kPa
- 1 kPa = 0.145 psi

---

## CHAPTER

# 1

# *Important Safety Information*

---

## *Safety Information*

### **NOTICE**

Read this manual and the operation and safety instructions included with the implement and/or controller carefully before installing the Envizio Pro or Envizio Pro II field computer.

- Follow all safety information presented within this manual.
- If you require assistance with any portion of the installation or service of Raven equipment, contact a local Raven dealer for support.
- Follow all safety labels affixed to the system components. Be sure to keep safety labels in good condition and replace any missing or damaged labels. To obtain replacements for missing or damaged safety labels, contact a local Raven dealer.

When operating the machine after installing the Envizio Pro or Envizio Pro II field computer, observe the following safety measures:

- Be alert and aware of surroundings.
- Do not operate the field computer while under the influence of alcohol or an illegal substance.
- Remain in the operator's position in the machine at all times when the field computer is engaged.
- Determine and remain a safe working distance from other individuals. The operator is responsible for disabling the field computer when the safe working distance has been diminished.
- Ensure the field computer is disabled prior to starting any maintenance work on the machine or parts of the field computer.
- Follow all label instructions for proper chemical mixing, handling and container disposal methods.

### **DANGER**

Thoroughly bleed the nurse tank hose and all other system lines prior to disassembling the flow meter, fittings and hoses, especially in the case of anhydrous ammonia.

 **CAUTION**

## Hydraulic Safety

- Raven Industries recommends that appropriate protective equipment be worn at all times when working on any hydraulic system.
- Never attempt to open or work on a hydraulic system with the equipment running. Care should always be taken when opening a system that has been previously pressurized.
- When disconnecting the hydraulic hoses or purging is required, be aware that the hydraulic fluid may be extremely hot and under high pressure. Caution must be exercised.
- Any work performed on a hydraulic system must be done in accordance with the machine manufacturer's approved maintenance instructions.
- When installing hydraulics or performing diagnostics, maintenance or routine service, ensure that precautions are taken to prevent any foreign material or contaminants from being introduced into the machine's hydraulic system. Objects or materials that are able to bypass the machine's hydraulic filtration system will reduce performance and possibly damage the hydraulic valves.

## Electrical Safety

- Always verify that the power leads are connected to the correct polarity as marked. Reversing the power leads could cause severe damage to the equipment.
- Ensure that the power cable is the last cable to be connected.
- Disconnect the Envizio Pro or Envizio Pro II field computer before jump-starting the vehicle.
- Disconnect the Envizio Pro or Envizio Pro II field computer before welding any component of the machine.

## CHAPTER

# 2

## *Introduction*

Congratulations on the purchase of the Raven Envizio Pro or Envizio Pro II precision application management system! The Envizio Pro and Envizio Pro II field computers are multi-purpose tools offering the latest technology in precision ag with features including product application control, field map and application reports, as well as field guidance via an optional internal DGPS (Differential Global Positioning System) receiver.

**FIGURE 1. Raven Envizio Pro or Envizio Pro II Field Computers**



**Note:** *The Envizio Pro or Envizio Pro II field computers are also capable of interfacing with the Raven OmniRow, planter population, or SmartYield, yield monitor, systems. Contact a local Raven dealer for more information and purchasing assistance.*

This document will explain the following aspects of the Raven Envizio Pro and Envizio Pro II field computers:

- Installation
- Initial Setup and Calibration
- Basic Operation
- Updates and Feature Activation
- Advanced Features and Operation

## *Envizio Pro and Envizio Pro II Features*

The following descriptions offer a brief introduction to the capabilities of the Envizio Pro and Envizio Pro II field computers and some of the optional features available for use with each of these systems.

### Speed Compensated Product Control and Datalogging

The Envizio Pro and Envizio Pro II field computers are capable of controlling two products through product control nodes connected to a CANbus system. The field computer automatically adjusts the application rate of each product according to the speed of the vehicle, width and status of programmed sections and a programmed target rate.

With an optional multiple product key, the field computer may control up to four product nodes or control channels. With the optional variable rate application (VRA) feature, the field computer is also capable of controlling a single product according to a prescription map. To variable rate multiple products according to prescription maps, a multiproduct VRA key is also available.

**Note:** *A single product VRA key is required to successfully authorize the multiple product VRA key.*

The Envizio Pro and Envizio Pro II are also capable of monitoring and mapping applications controlled by another Raven serial console, such as the Raven SCS 440 or 460 consoles, via a serial connection. Variable rate capabilities of the field computer may also be used with a Raven serial console.

**Note:** *With the Raven SwitchPro™, the Envizio Pro or Envizio Pro II can replace an existing serial rate controller to add CANbus product control features using existing control hardware and cabling.*

A real-time, as-applied map is displayed on-screen while application information is logged and saved by the field computer. This job information can then be transferred to a USB flash drive, copied to a home or office PC and used to create printed reports and coverage maps.

### On-Screen Guidance

The Envizio Pro and Envizio Pro II field computers provide on-screen guidance in the form of a Course Direction Indicator (CDI) and on-screen lightbar. The on-screen navigation features Last Pass, Pivot, Fixed Contour and Straight Line guidance patterns. In addition, the field computer can output GPS information and simulated radar speed to an external Raven lightbar. See Chapter 5, *Startup, Initial Setup and Setup Wizards*, for more information regarding guidance patterns and the Guidance screen.

## Internal DGPS Receiver

Both the Envizio Pro and Envizio Pro II offer an internal Differential GPS (DGPS) receiver to reduce cab clutter and simplify transfer of the control system between vehicles for use during various operations such as planting, spraying and harvesting. A range of receiver options is available to fit into almost any existing system or to expand DGPS capabilities as field operations grow and change.

**Note:** *The internal receiver in either the Envizio Pro or Envizio Pro II may be disabled to allow an optional external receiver, such as a Raven Invicta or Phoenix series or virtually any new or existing DGPS receiver, to be connected to the system. Refer to Chapter 7, Tools Menu for details on configuring the field computer to operate with external DGPS receivers and lightbars.*

*Contact a local Raven dealer for more information about additional options or features available with the Envizio Pro or Envizio Pro II internal receiver.*

### Envizio Pro II

The Envizio Pro II features a dual frequency DGPS receiver which includes Satellite Based Augmentation System (SBAS) correction for use with the Wide Area Augmentation System (WAAS) or European Geostationary Navigation Overlay Service (EGNOS) as standard options. The NovAtel G11de<sup>®</sup> feature can be used either in conjunction with a SBAS correction signal as a position smoothing feature or as an independent correction source for areas with limited SBAS coverage. Both options are available as a standard feature of the internal dual frequency receiver.

**Note:** *An optional Global Navigation Satellite System (GLONASS) activation code is available to enhance the standard GPS satellite constellation.*

The Envizio Pro II internal receiver may be upgraded to receive Real-Time Kinematic (RTK) or a Continuously Operating Reference Station (CORS) network correction services to improve accuracy and repeatability for precision operations such as planting and strip tilling, or side dressing.

### Envizio Pro

The Envizio Pro features an internal DGPS receiver which includes Satellite Based Augmentation System (SBAS) correction for use with the Wide Area Augmentation System (WAAS) and European Geostationary Navigation Overlay Service (EGNOS) as standard options. In addition, an Extended Differential (e-Dif) activation key is also available.

**Note:** *Envizio Pro consoles without the internal DGPS receiver require an external DGPS receiver for operation.*



## Optional Features

Flexibility of the Raven Envizio Pro and Envizio Pro II means that each field computer can be integrated into many existing Raven product control systems. The field computer can be used to control chemical injection and anhydrous ammonia applications, planting and harvesting operations or be integrated into an existing serial control system for mapping and guidance features. The following list is an example of the various Raven systems or features may be added to the field computer to enhance or modify the control system for a specific operation:


- AccuBoom™ or AccuRow™ automatic boom or planter section control systems.
- OmniRow™ automatic planter population, singulation and section control system for complete crop input control.
- Glide Series AutoBoom™ automatic boom height management systems.
- SmarTrax™ or SmartSteer™ for automatic assisted steering systems.
- TM-1 Tilt Module offers tilt corrected DGPS guidance over rough and hilly terrain.
- Slingshot Field Hub™ for wireless communication and internet access and RTK or CORS GPS corrections via a cellular wireless service provider.
- SmartYield™ yield monitoring systems.
- SCS Sidekick™ or Sidekick Pro™ direct injection systems for automatic rate control of injected chemicals.
- AccuFlow and AccuFlow HP™ systems for application of anhydrous ammonia (NH<sub>3</sub>) products.

Contact a local Raven dealer for more information about these and other optional features and components available for use with the Envizio Pro or Envizio Pro II.

## Front Panel

The front panel of the Envizio Pro and Envizio Pro II features a touch screen for operator input, the power button and also provides convenient access to a USB port for file transfer and software updates.


FIGURE 2. Envizio Pro and Envizio Pro II User Interface

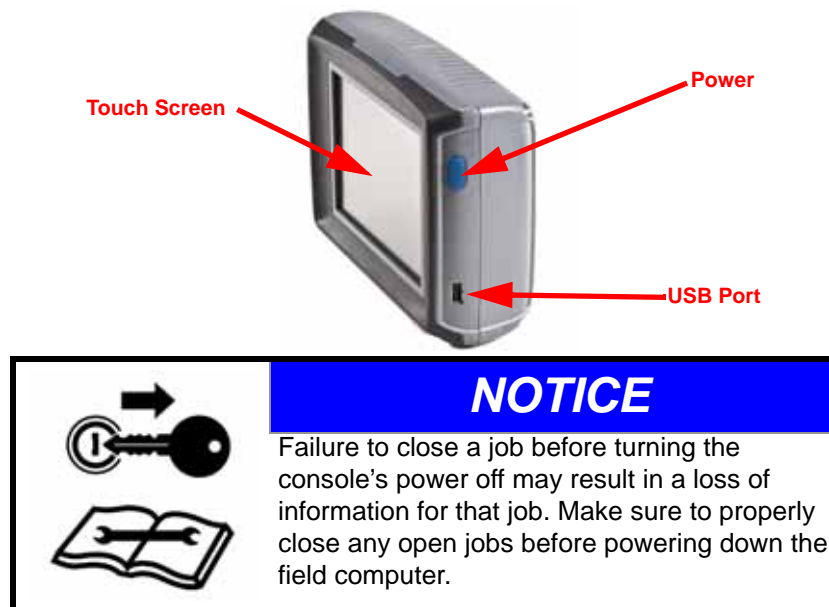



## Resistive Touch Screen Technology

Resistive touch screen technology offers clear visibility across a range of lighting conditions and even in direct sunlight while the touch screen functionality places menus and options literally at the operator's finger tips.

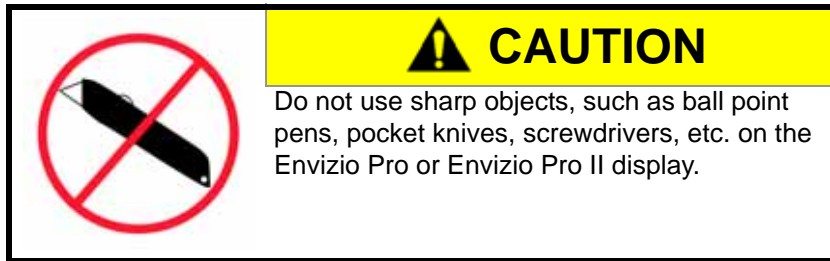

## Icon Based Operation

Operation of the field computer can be done at a glance due to the icon based interface. Easily recognizable icons allow the operator to quickly select features or use functions without diverting attention from other important operations.

### File Transfer

Memory within the field computer (512 MB) is used to store current job and application information. Application information for past jobs should be periodically transferred to a USB flash drive and copied to a home or office PC to view and more permanently store this information. Use a USB flash drive or "thumb drive," with at least 512 MB of memory for transferring these files. Storage devices can be purchased at many retail locations or a local Raven dealer.

**FIGURE 3. 1 GB USB Flash Drive (P/N 524-0002-065)**



**Note:** *Install the USB flash drive only when transferring files. Do not start the field computer with a flash drive connected or leave the "thumb drive" inserted during normal operation.*


## Rear Panel

The following is a brief overview of the connections and ports available on the back of the Envizio Pro and Envizio Pro II field computers.

The Rear Panel offers an additional USB Port as well as a port for connecting an optional wireless router for wireless communication. Signal is fed into the internal DGPS receiver through the antenna port located above the mounting posts.

The main and auxiliary interface connections are also located on the rear panel. These connections will be used to connect the field computer with the various components and hardware for the specific control system.

**FIGURE 4. Envizio Pro and Envizio Pro II Rear Panel Features and Connectors**

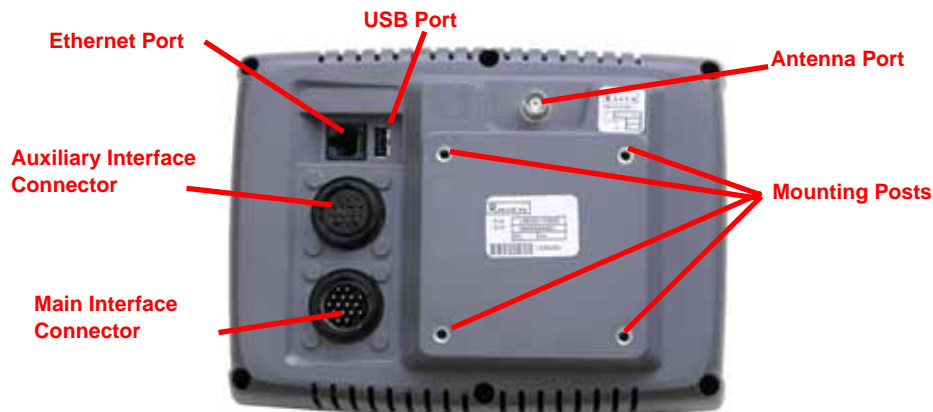

**Note:** *Envizio Pro field computers without the internal DGPS receiver will not feature an antenna port.*

The part number, serial number and revision letter, of the field computer are located on the tags located on the back of the console. Please have this information available when contacting customer support.

## Care and Use

Refer to the following guidelines for proper care and use of the Envizio Pro and Envizio Pro II field computer.

### CAUTION


- Do not apply any type of liquid or glass cleaner directly to the surface of the touch screen. Harsh chemicals may damage the touch screen. Clean the touch screen and console exterior as needed with a soft cloth dampened with glass cleaner. Apply the cleaner to the cloth and then wipe the screen gently.
- Do not use any type of pointed or sharp instrument on the touch screen. Only a fingertip or an approved stylus should be used.
- Do not expose the field computer to precipitation, condensation or other liquids. Store the computer in a dry environment when not in use.
- Mount the field computer securely and route cables to prevent tripping hazards and to keep the wires from pinching or breaking.
- When temperatures are expected to be 10° F [-12° C] or lower, remove the field computer from the vehicle and store it in a climate controlled environment.
- Always remove the field computer from power before jump starting or welding on any component of the vehicle. Jump starting or welding on the equipment will damage the field computer.

## Technical Specifications

		<b>U.S.</b>	<b>Metric</b>
<b>Dimensions</b>	Height	6.26 in.	15.9 cm
	Width	8.43 in.	21.41 cm
	Depth	3.46 in.	8.79 cm
	Diagonal (screen)	6.5 in.	16.51 cm
<b>Weight</b>		3.68 lbs.	1.67 kg
<b>Environmental</b>	Operating Temperature	32° F to 158° F	0° C to 70° C
	Storage Temperature	-4° F to 185° F	-20° C to 85° C
<b>Power</b>	Operating Voltage	9 VDC to 28 VDC Reverse Polarity Protected	
<b>Ports</b>	USB	2 (1 on front, 1 on back)	
	Ethernet	1 (Back)	
	Amp	2 (Back)	
<b>Mounting</b>	Plate/Arm	Vesa Plate with RAM Mounting Arm	
	Screws (Provided)	10-32 x 1/2" Long	


**Amp Connector Pin Definitions**

**Main Amp Connection**

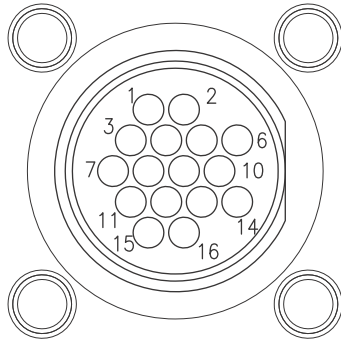

Main Amp Connector	
1.	Battery Negative
2.	Ext. Switch
3.	CAN Hi
4.	CAN Lo
5.	DGPS Receive
6.	DGPS Transmit
7.	DGPS CTS
8.	DGPS RTS
9.	Console Transmit
10.	Console Receive
11.	RS232 Ground
12.	Console CTS
13.	Console RTS
14.	+ 12 V Ignition
15.	+ 12 V Switched
16.	Battery Positive

**Auxiliary Amp Connection**

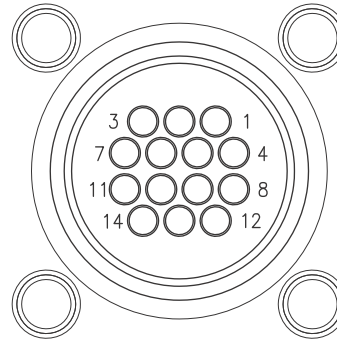

Auxiliary Amp Connector	
1.	DGPS Transmit (Corrections In)
2.	Ext. Switch
3.	CAN Hi
4.	CAN Lo
5.	DGPS Receive (To External Devices)
6.	DGPS Transmit (To External Devices)
7.	Auxiliary Receive
8.	Auxiliary Transmit
9.	Auxiliary CTS
10.	DGPS Receive (Corrections In)
11.	Auxiliary RTS
12.	RS232 Ground
13.	Not Used
14.	Radar Out

---

## CHAPTER

# 3

## *Installation*

---

### *Overview of the Installation Process*

The following is intended as an overview of the installation process. These instructions cover the basic installation of the Raven Envizio Pro or Envizio Pro II and necessary hardware. For additional instructions on installing optional hardware with the field computer, refer to the instructions provided with the optional component(s). Instructions for building a CAN (Controller Area Network) system can be found in Chapter 4, *CAN Networking and Diagnostics*.

Basic installation of the Envizio Pro or Envizio Pro II field computer is as follows:

1. Review kit contents
2. Mount the field computer
3. Mount the DGPS antenna

## Kit Contents

Before proceeding with installation of the Envizio Pro or Envizio Pro II system, review the following contents of the field computer kit.


### Envizio Pro II

TABLE 1. Envizio Pro II Kit Contents

		Envizio Pro II Kits			
		Envizio Pro II with SBAS	Envizio Pro II with RTK	Envizio Pro II with RTK and GLONASS	Envizio Pro II without Antenna
Components	Part Number	117-5010-001W <sup>a</sup>	117-5010-001K <sup>a</sup>	117-5010-001KG <sup>a</sup>	117-5010-001L
Envizio Pro II Field Computer	063-0173-258	1	1	1	1
MBA-6 (Helix) Antenna	063-0172-651	1	1	1	
Antenna Cable (20')	115-0171-787	1	1	1	
Aerial Antenna Mounting Plate (Optional)	063-0172-971	1	1	1	
Mounting Kit (includes Hardware)	117-0171-132	1	1	1	
Envizio Pro and Envizio Pro II Installation and Operation Manual	016-0171-148	1	1	1	1
Envizio Pro and Envizio Pro II Quick Reference Guide	016-0171-149	1	1	1	1

a. The kit letter indicates the included options for internal receiver correction source(s). 'W' kits are enabled for SBAS only; 'K' for RTK and 'KG' for RTK and GLONASS. 'L' kits include an SBAS only enabled receiver.



FIGURE 1. Envizio Pro II Kit Contents

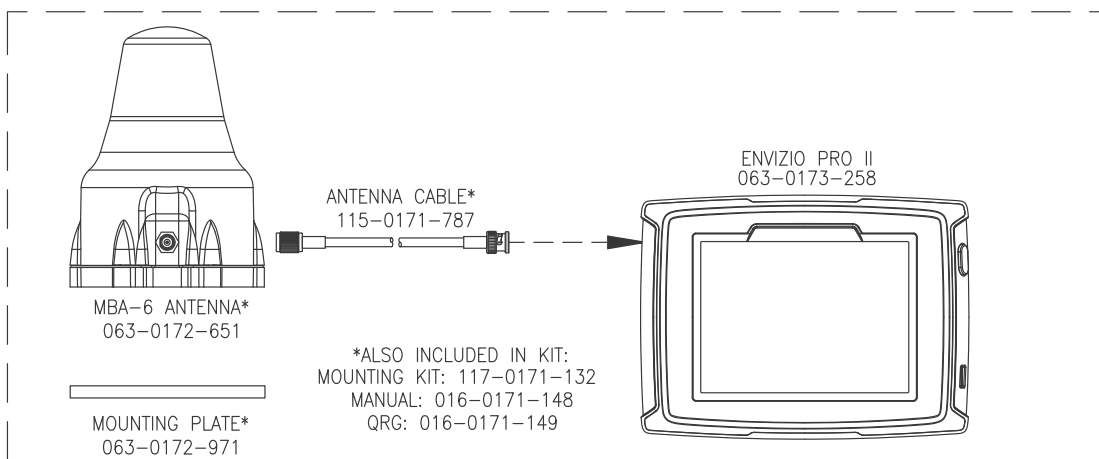

\*SUFFIX INDICATES INCLUDED OPTIONS:

- K - RTK AUTHORIZATION CODE, OEMV2 - 077-0180-062
- G - GLONASS AUTHORIZATION CODE, OEMV-1GR - 077-0180-061
- W - WAAS/SBAS
- L - LESS ANTENNA/CABLE/PLATE AND MOUNTING KIT

PURCHASE SEPARATELY:  
E-PRO SINGLE PRODUCT  
VRA AUTHORIZATION CODE:  
077-0180-031

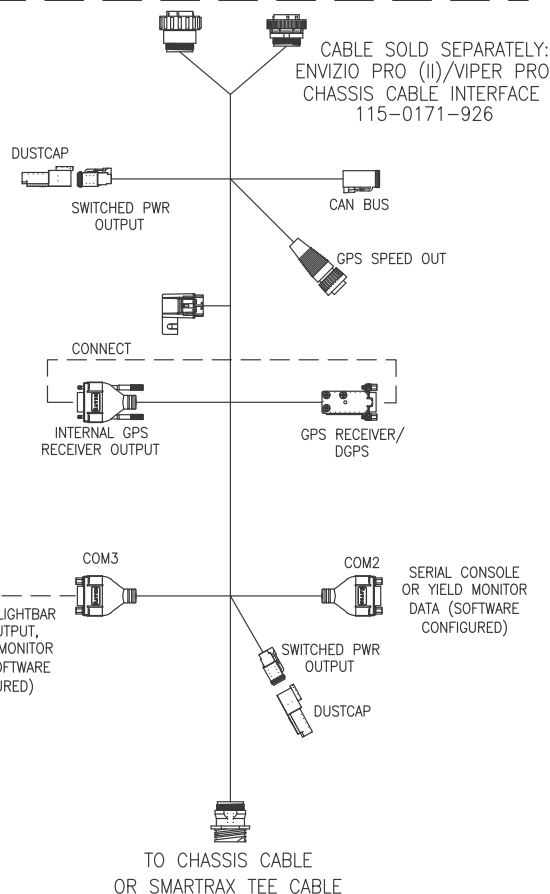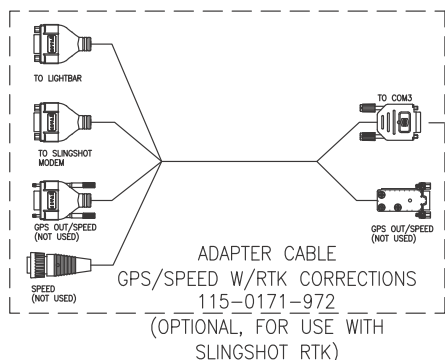

Other Available Components	Part Number
CAN Switch Box to Envizio Pro Kit	117-5020-001
Product Controller Node	063-0173-236
RTK GPS/Speed Adapter Cable (for use with Slingshot RTK subscription)	115-0171-972
RTK Authorization Code (OEMV2)	077-0180-062
GLONASS Authorization Code (OEMV-1GR)	077-0180-061
Population Rate Control Activation Key	077-0180-058
Single Product Variable Rate Authorization Key	077-0180-031



**Envizio Pro**


**TABLE 2. Envizio Pro Kit Contents**

		Envizio Pro Kits			
		Envizio Pro with Patch Antenna	Envizio Pro with MBA-3 Antenna	Envizio Pro without GPS	Envizio Pro without GPS and Cabling <sup>a</sup>
Components	Part Number	117-0171-126	117-0171-137	117-0171-128	117-5010-002
Envizio Pro Field Computer	063-0172-865 or -939	1	1	1	1
Main Interface Cable	115-0171-746	1	1	1	
Patch Antenna	063-0172-101	1			
MBA-3 (Helix) Antenna	063-0172-480		1		
Antenna Cable (20')	115-0171-787		1		
Aerial Antenna Mounting Plate (Optional)	063-0172-971		1		
Mounting Kit (includes Hardware)	117-0171-132	1	1	1	1
Envizio Pro and Envizio Pro II Installation and Operation Manual	016-0171-148	1	1	1	1
Envizio Pro and Envizio Pro II Quick Reference Guide	016-0171-149	1	1	1	1

a. Interface or Chassis cable platforms sold separately. Refer to the *Cable Platforms and Connections* section on page 17 or contact a local Raven dealer for more information.



FIGURE 2. Envizio Pro Kit Contents

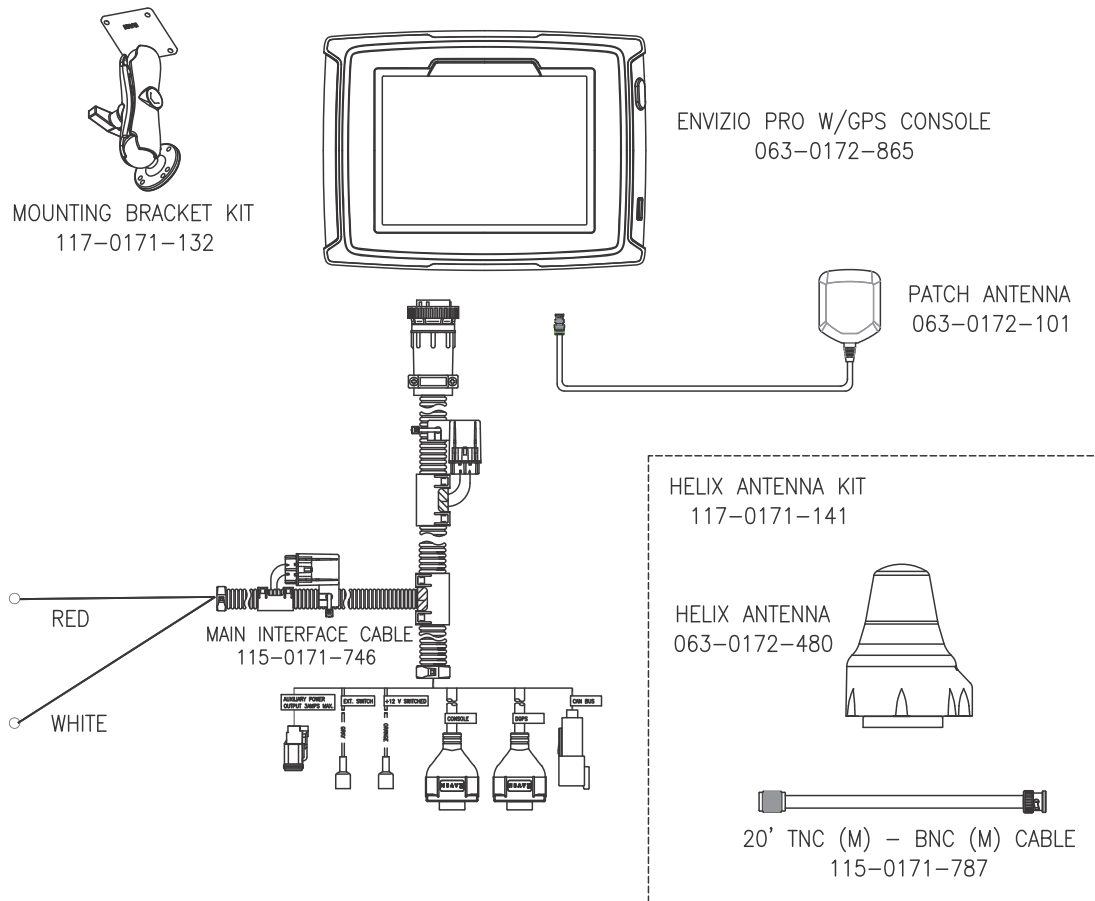

Other Available Components	Part Number
Auxiliary Interface Cable	115-0171-745
Helix Antenna Kit	117-0171-141
Viper to Viper/Envizio Pro Adaptor Cable	115-0171-742
Boom/Speed Node	063-0172-272
Single Product Control Node	063-0172-373
Combo Interface Cable	115-0171-744



## Mounting the Field Computer

Refer to the following requirements when selecting a mounting location for the Envizio Pro or Envizio Pro II field computer:

- The field computer is not weatherproof. Mount the field computer inside of the machine's cab or driver's compartment within easy reach of the driver or operator.
- Securely fasten the RAM mounting arm to a suitable, flat surface. Once mounted, the RAM mounting arm must provide a stable base for the console and should not impede normal machine operation.
- The field computer should be mounted in a location where it will not be jarred during normal equipment operation. Keep the computer clear of moving elements within the machine's cab.
- Route all cables to avoid tripping hazards and protect the cable from kinking or breaking during operation.

### To mount the field computer:

**Note:** *If the CAN Switch Box will be installed with the Envizio Pro or Envizio Pro II field computers, use the mounting hardware provided with the CAN Switch Box. Refer to the CAN Switch Box Installation and Operation Guide for mounting instructions.*

1. Mount the circular base of the RAM socket arm (P/N 117-0171-132) securely within the cab of the vehicle.
2. Using the four mounting posts and supplied hardware, secure the field computer to the square plate of the RAM mounting arm.


FIGURE 3. Field Computer Rear Panel



## Cable Platforms and Connections

Two cable platform options are available for use with the Envizio Pro or Envizio Pro II field computers. Each platform offers a range of optional features which can be added to the control system at any time.

NOTICE




Please review the *Raven CANbus Network Installation Manual* for installation instructions for the specific cable platform being installed with the field computer prior to beginning installation. Contact a local Raven dealer for assistance or to purchase additional components necessary to set up the CANbus system.



### Generation 1 Cable Connections


**Important:** Ensure that the Envizio Pro or Envizio Pro II field computer has been properly mounted and all component cabling is connected properly before connecting the Envizio Pro or Envizio Pro II to power.

FIGURE 4. Generation 1 Main Interface Cable Connection Diagram

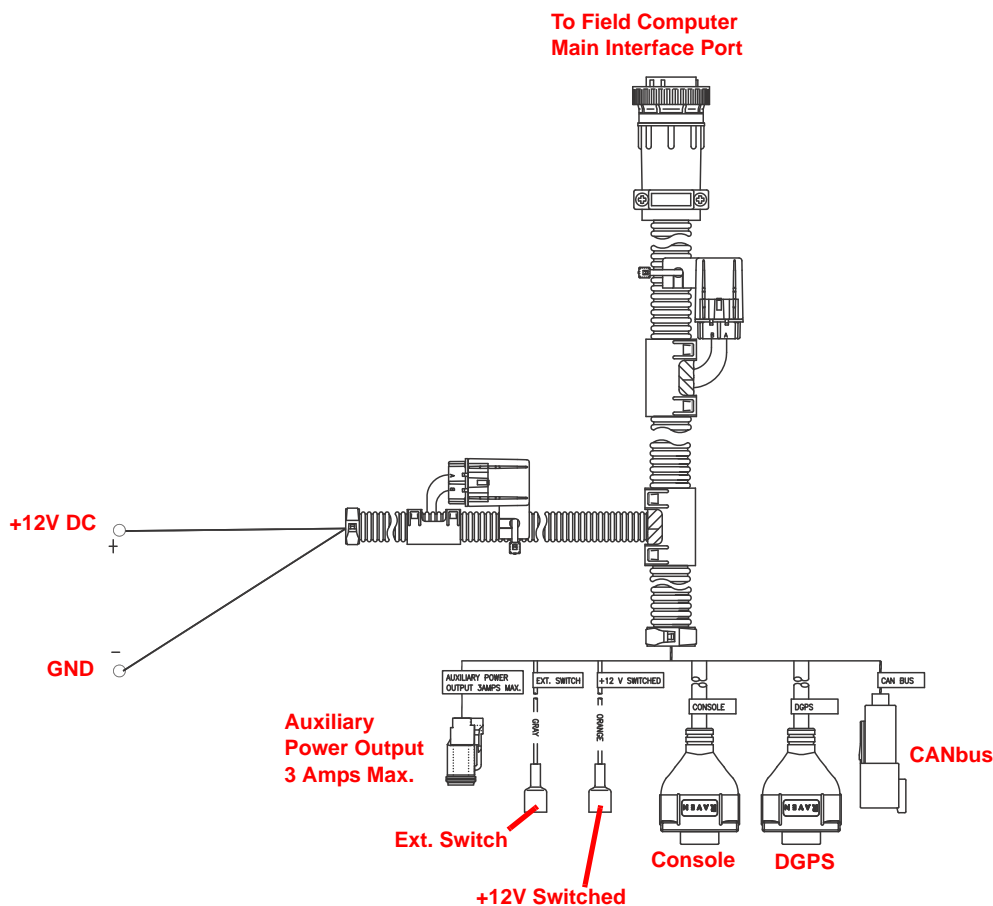

## Chapter 3

1. Route the conduit with red and white leads to a clean, controlled power source such as a clean power bus bar or junction box.
2. Connect the red lead wire to a clean +12V DC power source.



**CAUTION**


Even when the field computer is powered off, the computer will draw a small current from the battery. Connect the red wire to a controlled power source or, if the machine will not be in use for an extended period of time, remove power from the field computer.

To prevent accidental data loss, the red wire should be connected to a clean power source.

3. Connect the white wire to ground.

**Note:** Do not connect the orange wire to external power. The orange wire is switched power out of the field computer. When the field computer is powered, +12V DC is applied to the orange wire to power an external device. If more than 1 amp is required to power a device connected to the orange wire, install a relay to switch the higher currents.

FIGURE 5. Relay (P/N 415-1001-009) Terminals

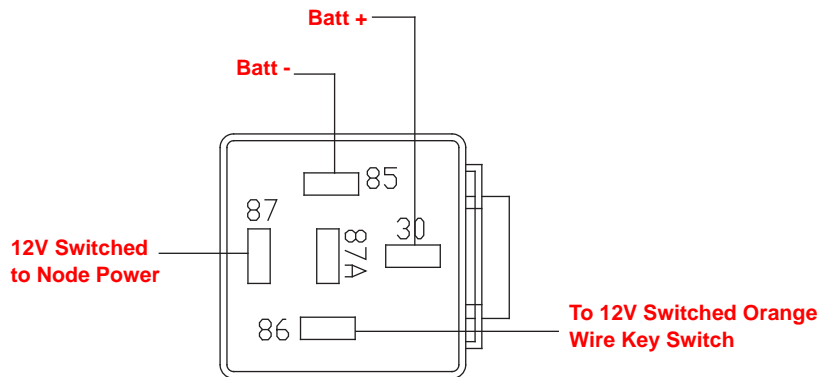


## Generation 2 Cable Connections

The chassis cable platform requires the following components:


- Machine specific chassis cable
- Envizio Pro or Envizio Pro II chassis interface cable (P/N 115-0171-926)
- CAN Switch Box kit (P/N 117-5020-001)

**Note:** Refer to the Raven CANbus Network Installation Manual for additional cabling information for the generation 2 cable platform.

FIGURE 6. Generation 2 Cable Connection Diagram

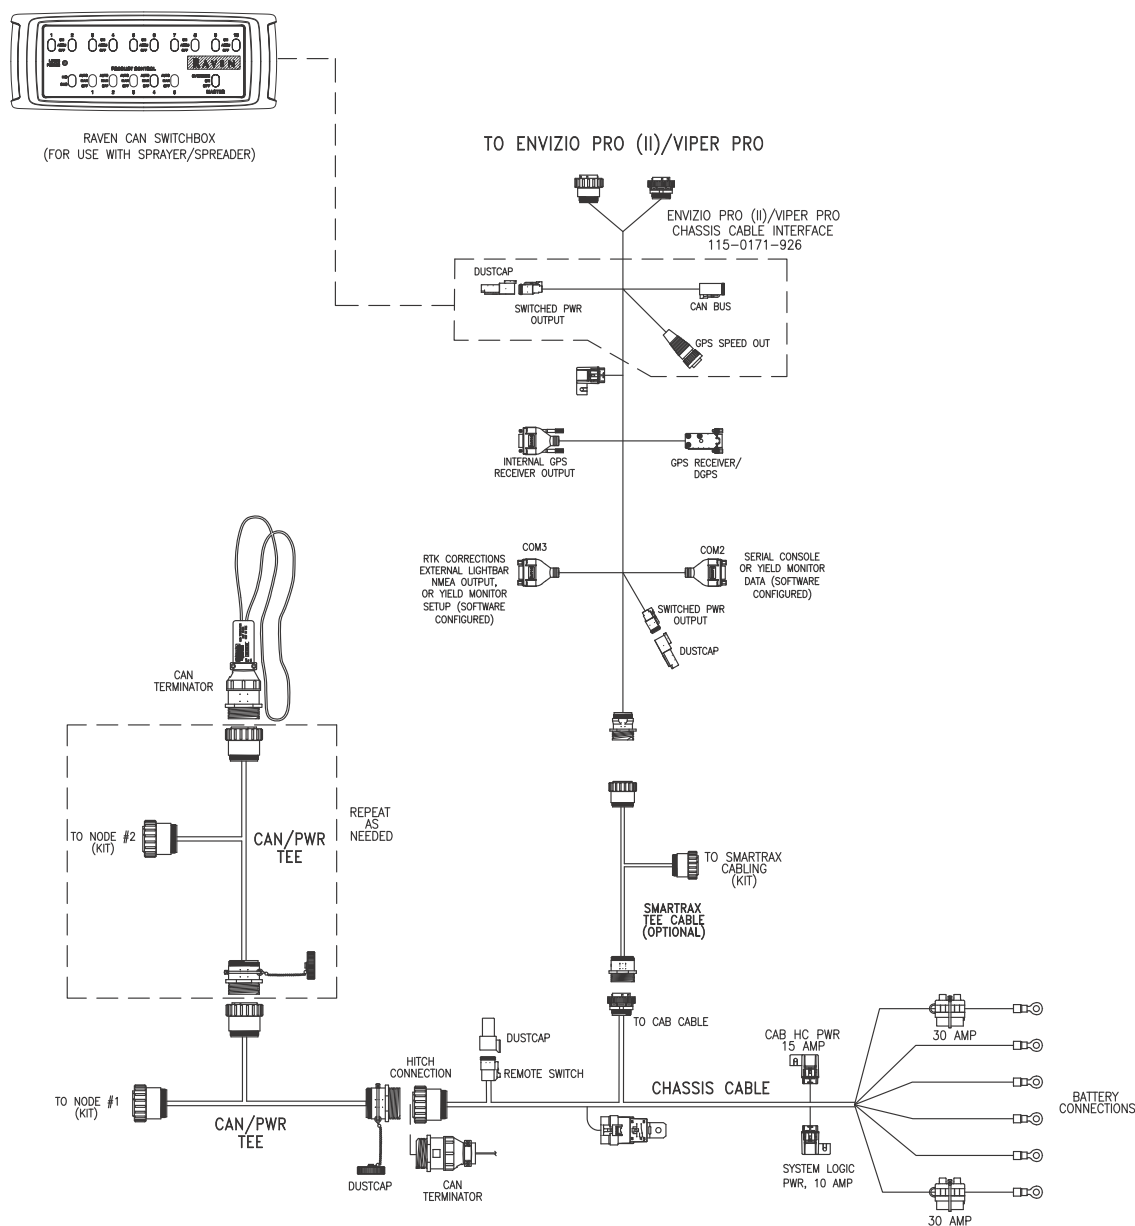

**Note:** The CAN Switch Box is not used with the OmniRow system.

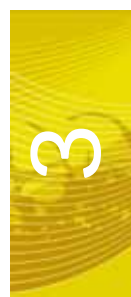

### Chassis Interface Cable and CAN Switch Box Connection

**Note:** *The CAN Switch Box and switch box mounting bracket should be mounted to the Envizio Pro or Envizio Pro II field computer prior to beginning the following procedure. Refer to the CAN Switch Box Installation and Operation Guide for detailed instructions.*

1. Locate the single round connector labeled 'To Chassis or SmarTrax Tee Cable' on the Envizio Pro/Viper Pro chassis interface cable (P/N 115-0171-926).
2. Insert this connector into the 'To Cab Cable' on the chassis cable installed on the vehicle. Thread the connectors together to secure the connection.
3. Route the end of the cable with two round connectors to the back of the Envizio Pro or Envizio Pro II and connect to the main and auxiliary ports.
4. Connect the 2-pin Deutsch connector labeled 'Switched Power Output' to the back of the CAN Switch Box.
5. Connect the 4-pin Deutsch connector labeled 'CANbus' to the back of the CAN Switch Box.
6. Connect the 3-pin round connector labeled 'GPS Speed Out' to the back of the CAN Switch Box.

**Note:** *If the chassis interface cable (P/N 115-0171-926) is installed and the internal DGPS receiver will be used for DGPS reception, the 'Internal GPS Receiver Output' and 'GPS Receiver/DGPS' port connectors must be connected together.*

---

### DGPS Antenna

**Note:** *To enable the guidance capabilities of the field computer, DGPS signal must be supplied by one of the following:*

- The internal DGPS receiver
- An optional external receiver capable of outputting messages at a minimum of 10 Hz.

*For more information on configuring the Envizio Pro or Envizio Pro II field computers for one of the above options, see Chapter 7, Tools Menu.*

With the internal receiver, the Envizio Pro or Envizio Pro II only requires a connection to a DGPS antenna in order to create application maps. To ensure the best possible signal reception, the following recommendations should be considered when selecting the DGPS antenna mounting position.

- Mount the DGPS antenna to the tallest point of the vehicle (usually the vehicle's cab) using the standard magnet mount.
- Make sure that the DGPS antenna has a clear 360° view of the sky.
- Mount the DGPS antenna at least of 36" [92 cm] from other antennas (e.g. radio, cellular, etc.) to avoid signal interference.
- The simplest setup is achieved by mounting the antenna on the center-line of the vehicle.


### Aerial Antenna Mounting Plate (Optional)

An optional aerial antenna mounting plate (P/N 063-0172-971) is included with field computers featuring a helix style antenna. If no suitable magnetic mounting location exists on the vehicle, this mounting plate may be affixed to the tallest point of the vehicle to provide a magnetic surface for mounting the GPS antenna.

## Connecting the Antenna to the Internal DGPS Receiver

1. (Helix antennas only) Connect the antenna cable (P/N 115-0171-787) to the antenna.
2. Route the cable into the cab and connect to the antenna port on the back of the field computer.


FIGURE 7. Antenna Port for Internal DGPS Receiver

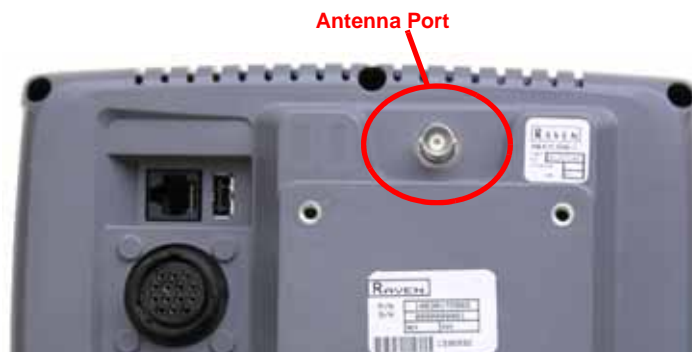

**Note:** *Envizio Pro consoles without the internal DGPS receiver will not feature the antenna port.*

3. If the chassis interface cable (P/N 115-0171-926) is installed and the internal DGPS receiver will be used for DGPS reception, the 'Internal GPS Receiver Output' and 'GPS Receiver/DGPS' port connectors must be connected together.

FIGURE 8. Envizio Pro and Envizio Pro II Antenna Options for Internal DGPS Receivers

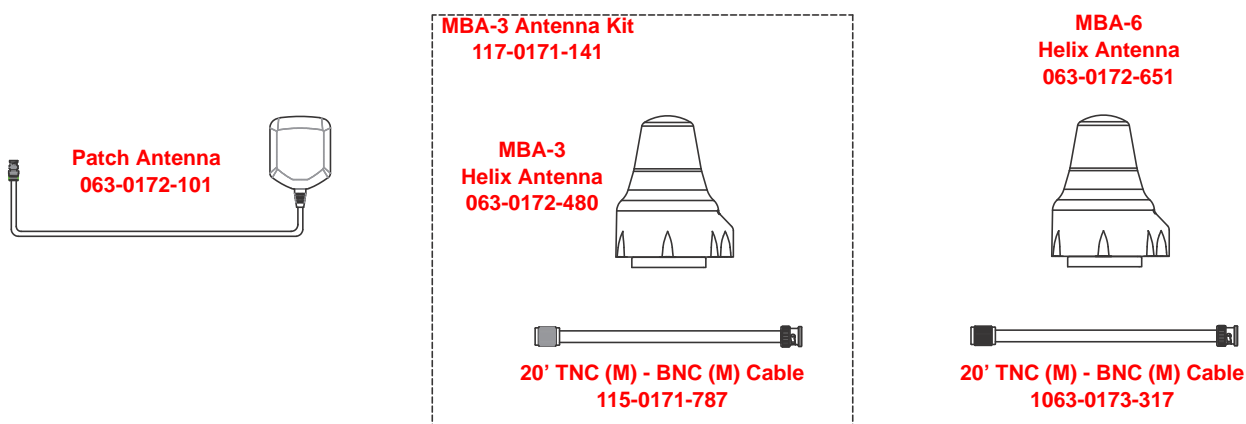

**Note:** *The Envizio Pro II requires a MBA-6 helix antenna (P/N 063-0172-651) for use of RTK or CORS corrections with the internal GPS receiver.*

## Connecting External DGPS Receiver Systems

1. Follow installation instructions included with any optional or additional external DGPS components before connecting to the field computer or related cabling.
2. Signal from an external DGPS receiver must be routed into the field computer via the connector labeled 'GPS Receiver' or 'DGPS' on the main interface cable (P/N 115-0171-746) or chassis interface cable (P/N 115-0171-926).
3. For help with setting up the field computer to use the signal from an external receiver, refer to Chapter 7, *Tools Menu*.

## Installing Optional Equipment

The following sections offer descriptions of optional hardware or configurations in which the Envizio Pro or Envizio Pro II is capable of operating.


### Boom Sense Wire (Interface Cable Only)

The boom sense wire can be connected to the master switch functions of the machine to allow seamless operation of vehicle master on/off and the field computer mapping feature.

If the boom sense wire is properly connected, the vehicle master on/off switch also toggles the product coverage mapping based on a +12V signal detected on this wire. Connect the spade connector on the main interface cable (P/N 115-0171-746) labeled “Ext. Switch” (external switch) to the machine master switch.

Contact the machine manufacturer for more information on connecting the boom sense wire on the specific machine.

**FIGURE 9. Main Interface Cable (P/N 115-0171-746) Boom Sense Wire Connection**

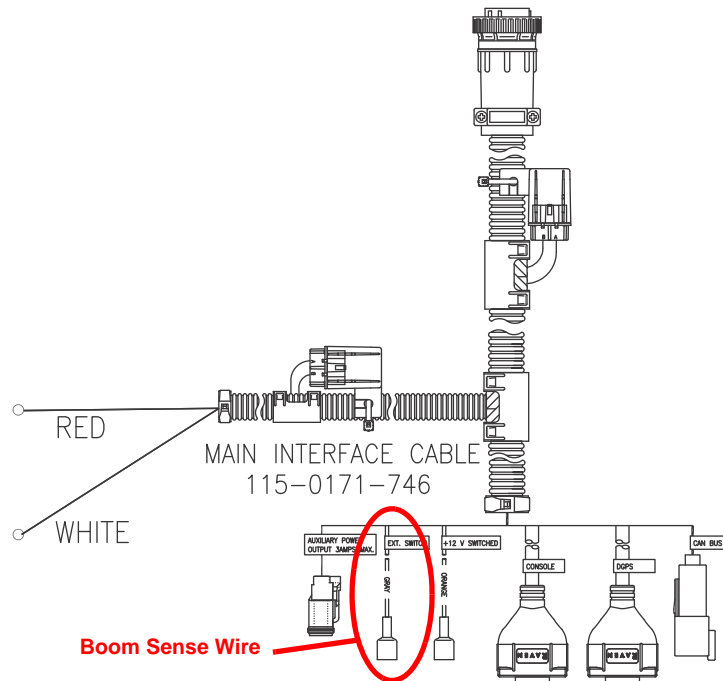



## AccuBoom™

Refer to the machine specific installation materials for instructions on installing AccuBoom on the machine.

**Note:** When used with a CAN product control system, AccuBoom requires a boom/speed node with program D or newer for proper AccuBoom functionality.

### AccuBoom™ Master Switch

The AccuBoom master switch option will allow AccuBoom to toggle coverage mapping and section information as reported by the AccuBoom node.

To enable the AccuBoom master switch, connect the orange wire with white stripe on the AccuBoom node harness to the machine master switch. Contact a local Raven dealer for more information on part numbers and availability of the AccuBoom feature for the specific sprayer model.

Contact the machine's manufacturer for more information on connecting this feature.

## Lightbar


Envizio Pro and Envizio Pro II field computers are capable of interfacing with an external Raven lightbar through the auxiliary interface cable (P/N 115-0171-745) or the chassis interface cable (P/N 115-0171-926).

If an external lightbar is desired, follow the installation instructions provided with the lightbar before connecting the lightbar to the field computer. Once installation of the lightbar is complete, connect the lightbar cable to the serial connector labeled 'COM 3' on the appropriate interface cable. See Chapter 7, *Tools Menu*, for information on configuring the field computer to send messages to the external lightbar.

## TM-1 Tilt Module

GPS receivers output position information relative to the position of the DGPS antenna. Most often, the antenna is mounted on the top of the machine which means the GPS location is only accurate when the machine is on level ground. On uneven terrain, such as side hills, the actual ground position may differ from the location of the GPS antenna.

**FIGURE 10. Reported GPS Position Error Due to Side Hill**

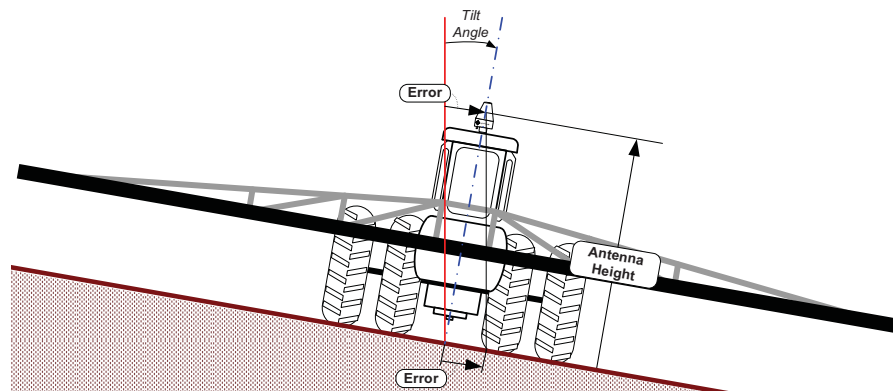

The Raven TM-1 Tilt Module compensates for any tilt of the vehicle from a level field condition. To supply tilt compensated GPS signal, the Raven TM-1 Tilt Sensor receives a raw DGPS signal from the DGPS receiver and outputs a tilt corrected signal to guidance devices or controllers.

If connected directly to the 'DGPS' connector on the main interface cable (P/N 115-0171-746) or chassis interface cable (P/N 115-0171-926), the field computer may be used to configure the TM-1. Refer to the TM-1 Tilt Module Installation and Operation manual for details and installation diagrams for installing the Tilt Module with the Envizio Pro or Envizio Pro II field computer.

**Note:** See the System Menu section on page 93 for information on setting up the TM-1 using the field computer.

When routing tilt corrected signal through a SmarTrax controller and back into the Envizio Pro or Envizio Pro II, the TM-1 will need to be calibrated through the SmarTrax controller rather than the field computer. See the SmarTrax Quick Start Guide or Operator's Manual for more details on setting up and operating the TM-1 with a SmarTrax controller.

## SmarTrax™ and SmartSteer™


Envizio Pro and Envizio Pro II field computers are also capable of operating with the optional SmarTrax or SmartSteer automated steering systems.

GPS signal is routed into the SmarTrax controller and then fed into the field computer via the 'DGPS' connector on the Envizio Pro main interface cable (P/N 115-0171-746) or chassis interface cable (P/N 115-0171-926).

When the SmarTrax or SmartSteer system is engaged, the automated steering system controls the vehicle steering system, either hydraulically or by mechanically turning the steering wheel, to guide the vehicle along a guidance path displayed on the field computer Guidance screen. See the *Source* section on page 122 to configure the Envizio Pro or Envizio Pro II to use an optional SmarTrax or SmartSteer system.

## Serial Console

FIGURE 11. Envizio Pro Interface Cable Platform with Serial Control Console

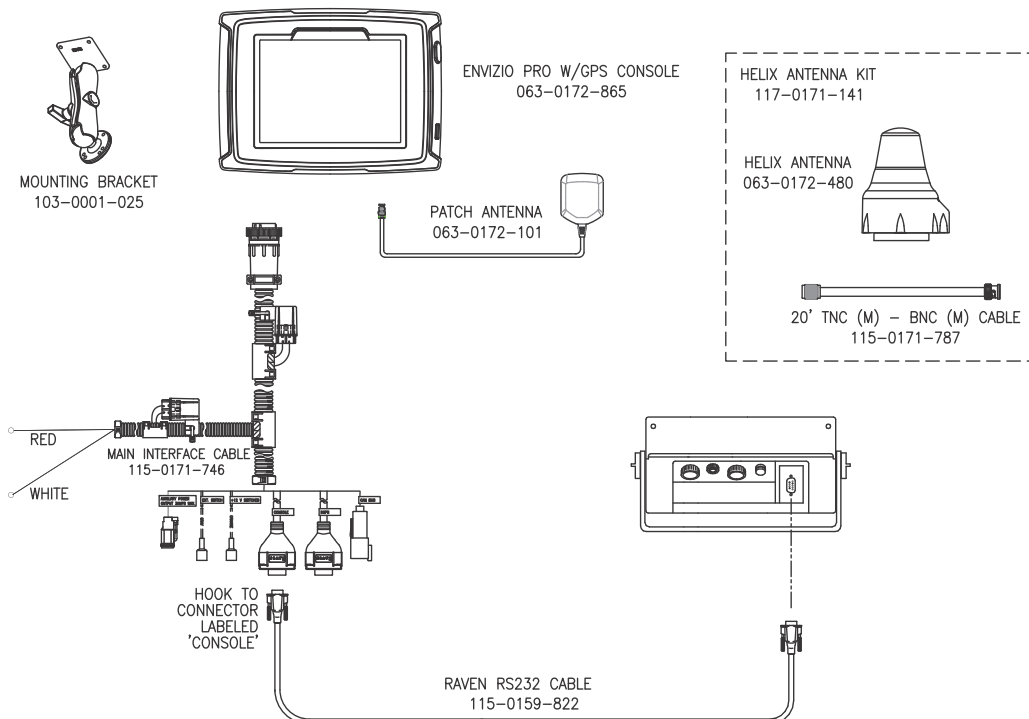

The Envizio Pro or Envizio Pro II may be connected to a Raven serial control console via a serial port connection. In this configuration, the field computer is primarily used for the datalogging, mapping and guidance capabilities.

**Note:** *If connected to a serial control console, the field computer does not require a separate boom/speed or product control node. An AccuBoom, AutoBoom or SmarTrax node still may be connected to the field computer.*

Use one of the following Raven RS-232 cables to connect the serial port on the back of the serial control console to the connector labeled 'Console' on the Envizio Pro main interface cable (P/N 115-0171-746).


Description	Part Number
RS-232 cable - 3 ft.	115-0171-040
RS-232 cable - 10 ft.	115-0159-822

**Note:** *Use only a Raven RS-232 communication cable between the field computer and the serial control console. Contact a local Raven dealer for purchasing and more information.*

See Chapter 7, *Tools Menu*, to setup the field computer for the serial console connection.

## AutoBoom™

Follow the machine or implement specific installation manual to install the AutoBoom hydraulic valve and hoses.

	<b>NOTICE</b>
	<p>Read all safety requirements and precautions in the machine specific installation manual prior to operating a machine equipped with the AutoBoom feature. Failure to follow safety precautions may lead to damage to equipment, injury or death.</p>

---

## CANbus Network Connection

Envizio Pro and Envizio Pro II field computers are capable of controlling up to four product nodes or control channels (with required activation keys) on a CANbus system. The field computer will automatically scan for CAN product control, planter control, AccuBoom, AutoBoom, SmarTrax, boom sense and speed nodes connected through the CAN connection.

See Chapter 4, *CAN Networking and Diagnostics*, for additional information.



---

## CHAPTER

# 4

# *CAN Networking and Diagnostics*

---

A Controller Area Network, or CAN, system is a high-integrity serial data communications bus that operates at a data rate of 250 kilobits per second for real-time control applications and uses special cables and terminators for operation. The CAN protocol has excellent error detection and confinement capabilities, making it very suitable and reliable for agricultural applications.

CAN systems allow products to be added to a control system at any time. Up to four product control nodes or control channels can be connected to the Envizio Pro or Envizio Pro II control system for any combination of liquid, granular, chemical injection or spinner control applications.

The diagrams in this chapter show different hardware configurations for use with the Envizio Pro or Envizio Pro II field computers. Some diagrams show optional features which may not apply to each system. These features and components are not required for CAN operation and optional features and cables may be ignored during a basic installation.

The following diagrams are provided as examples of an Envizio Pro or Envizio Pro II field computer control network.



### **NOTICE**

Refer to the Raven CANbus Network Installation Manual for installation information for individual CANbus control components. Be sure each component is properly mounted and cables are connected prior to powering the field computer.

FIGURE 1. Envizio Pro Single Product CAN Control System


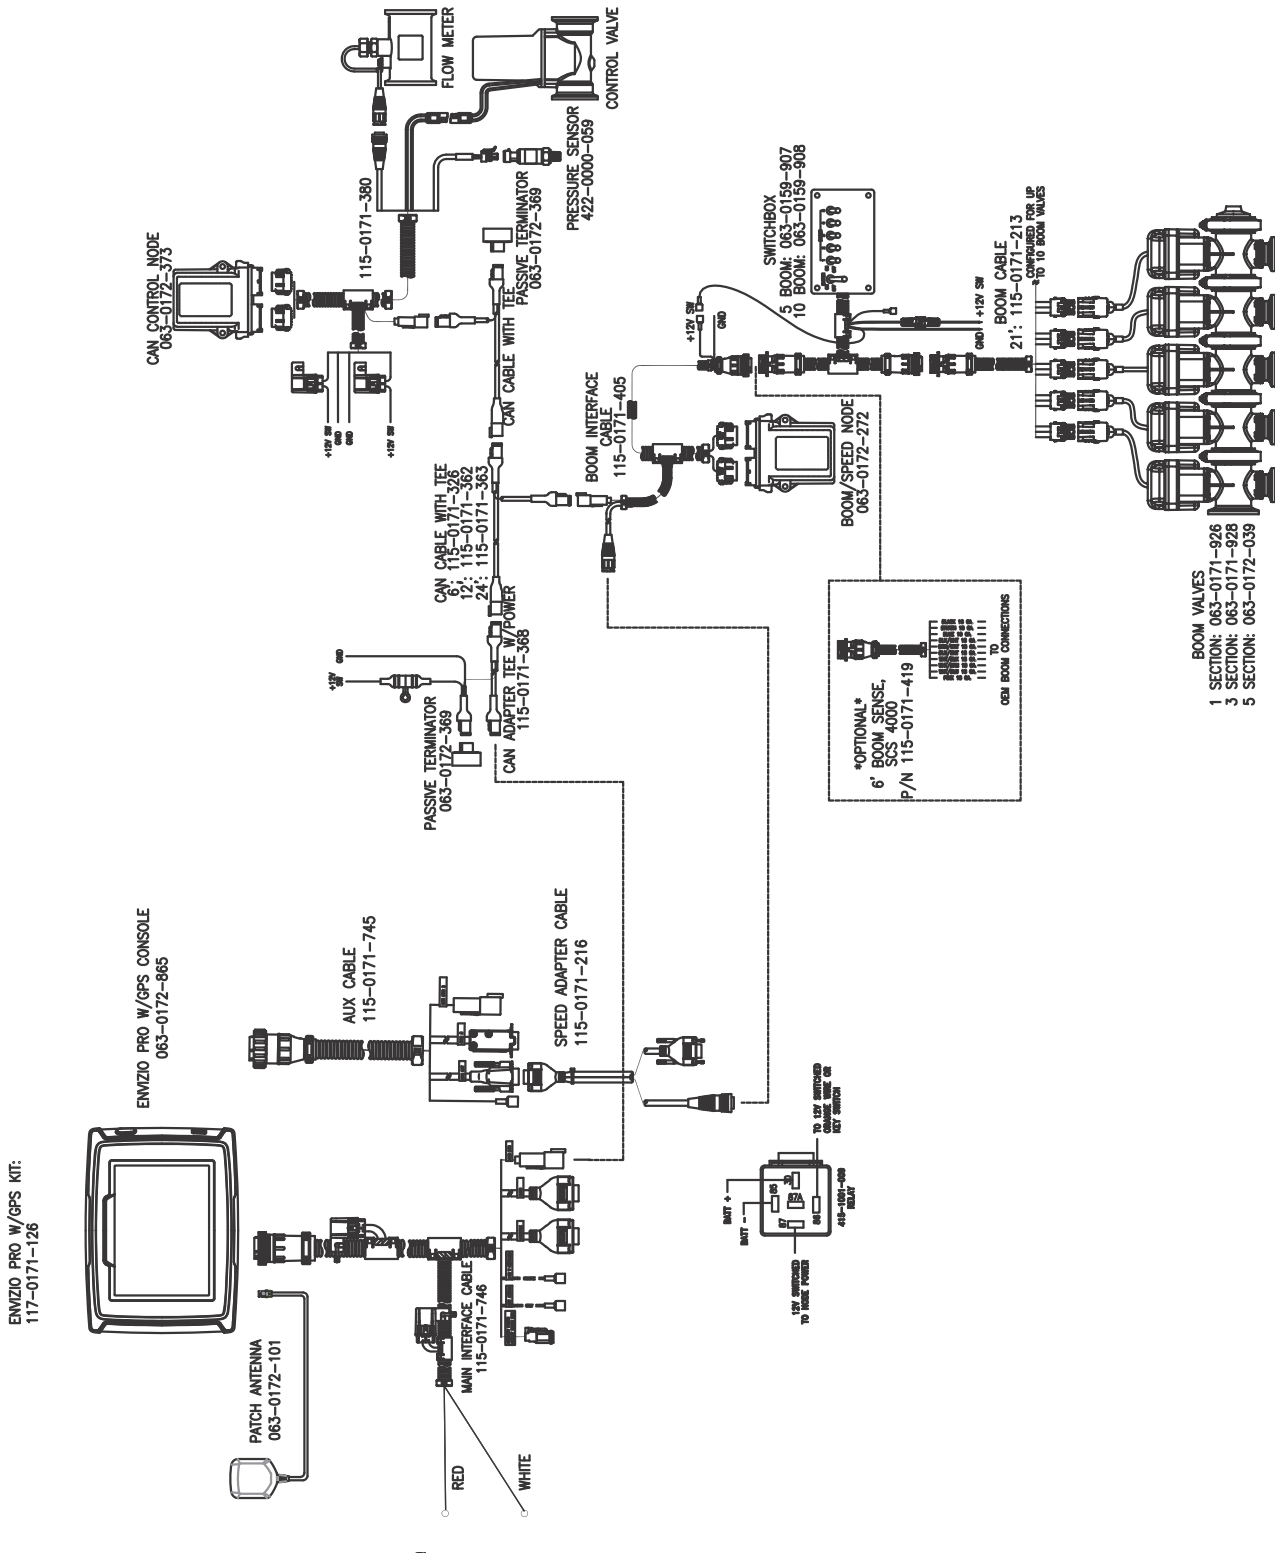


FIGURE 2. Envizio Pro Dual Product (Liquid/Granular) CAN Control System

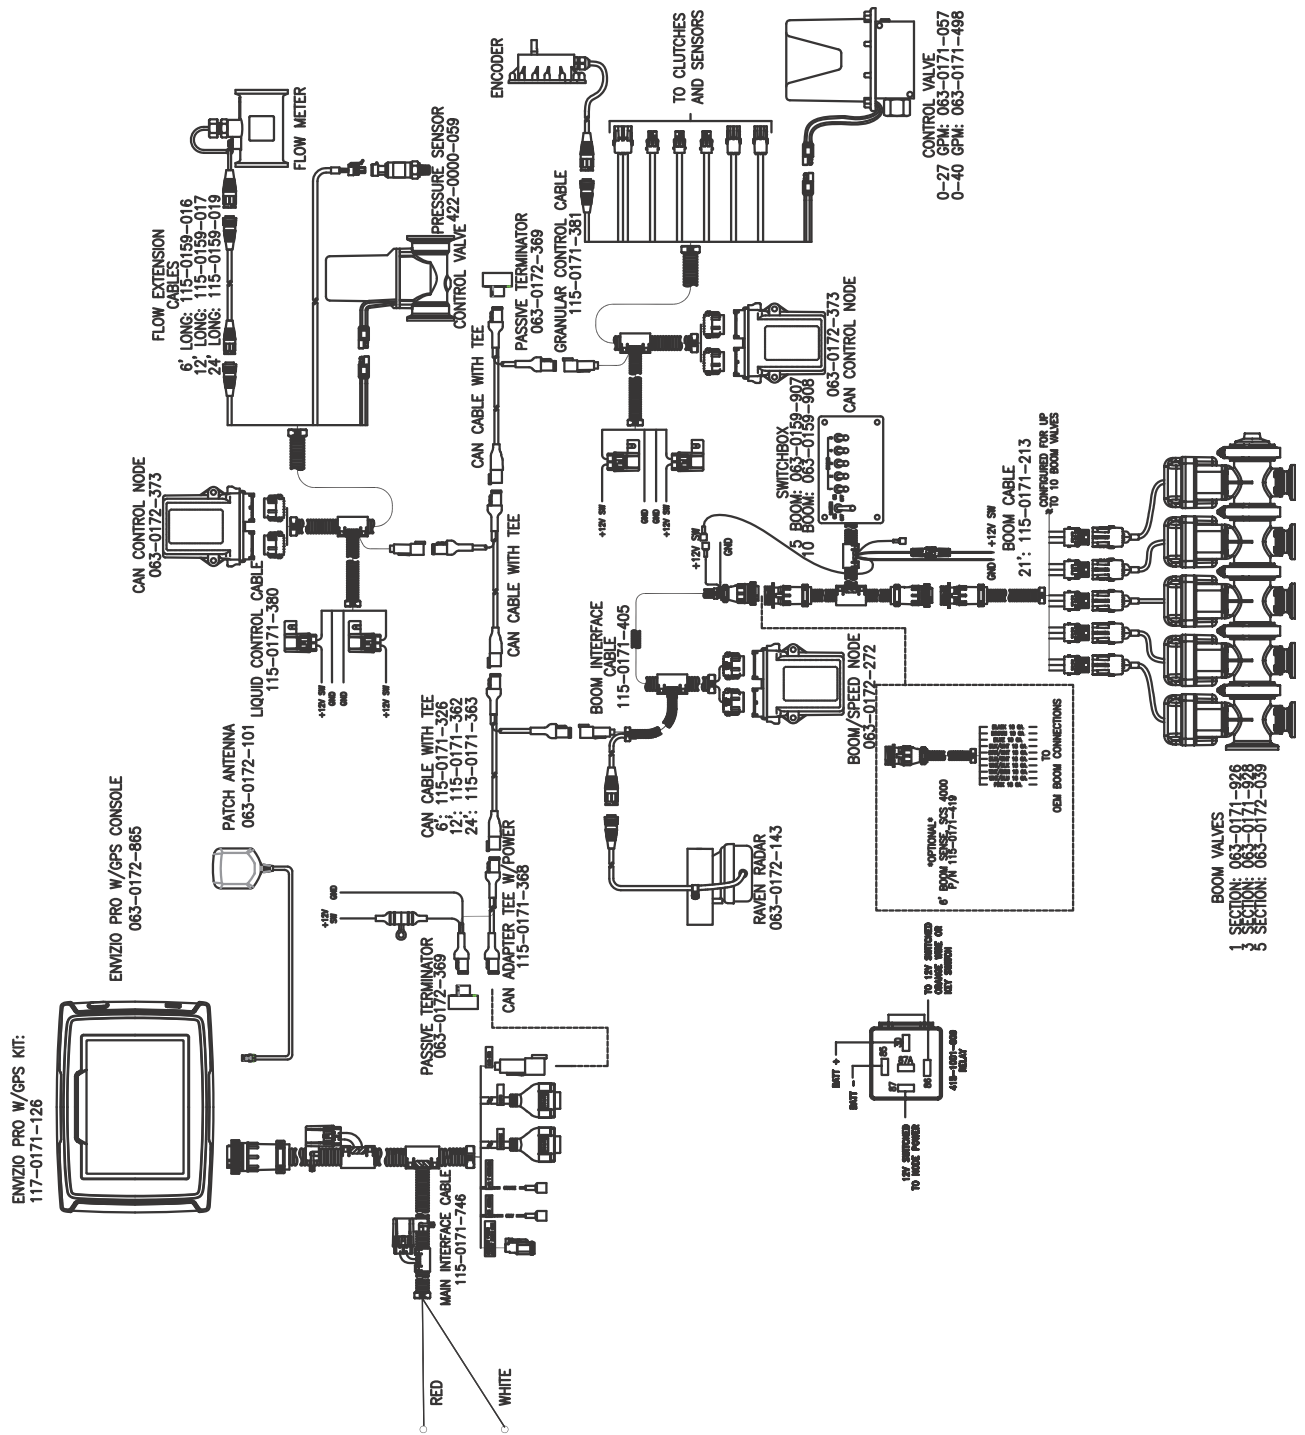

## CAN Diagnostics

The field computer must be able to communicate with the CANbus system when monitoring or controlling product application. If configured as a CAN control console, the Envizio Pro or Envizio Pro II should automatically establish communication with the boom/speed node, the AccuBoom, AutoBoom or SmarTrax Terrain Compensation nodes (if installed) and up to four product control nodes via the CANbus.


**Note:** Product nodes may need to be readdressed prior to detecting each node on the CANbus. See the Readdressing the Nodes section on page 31 for detailed instructions on readdressing the product nodes.


Contact a local Raven dealer for more information on required activation keys for controlling up to four products using the Envizio Pro and Envizio Pro II field computers.

To view a list of nodes currently detected on the CANbus network:

1. Select the Information icon in the upper, right corner of the Home screen.



2. Touch the  icon on the About Envizio Pro screen to display the CAN Diagnostics screen.

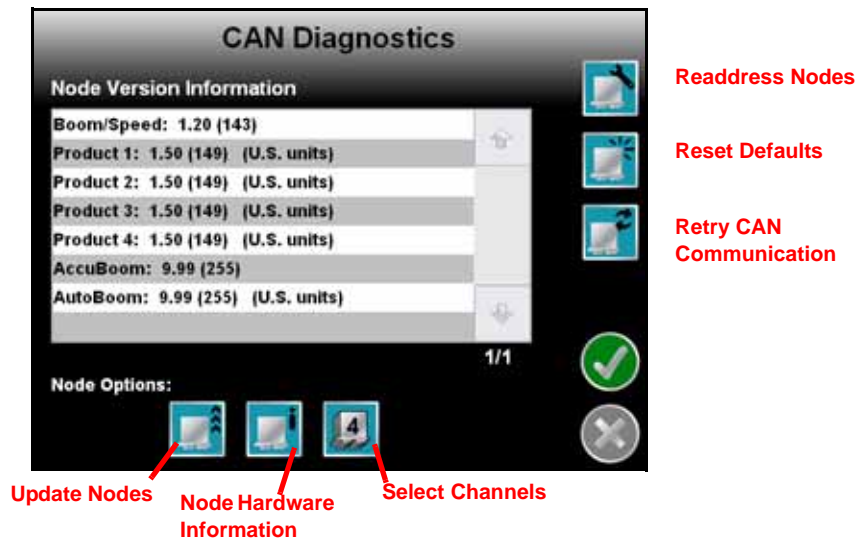


**Note:** If a product is not found, troubleshoot the node to determine why the field computer cannot communicate with the node. See the CAN Troubleshooting section on page 34 for more information about CAN communication failures.



## Node Version Information

The CAN Diagnostics screen displays the software version, software revision and program number of each node detected on the CANbus.

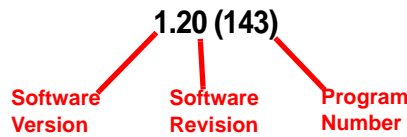


## Readdressing the Nodes


If the field computer is unable to detect a CANbus node on startup, troubleshoot the CANbus and the node (see the *CAN Troubleshooting* section on page 34) and then readdress the CANbus:


**Note:** Only product nodes need to be addressed (single product, dual product, motor control, etc.).

1. Select the Information icon in the upper, right corner of the Home screen.




2. Touch the  icon on the About Envizio Pro screen to display the CAN Diagnostics screen.

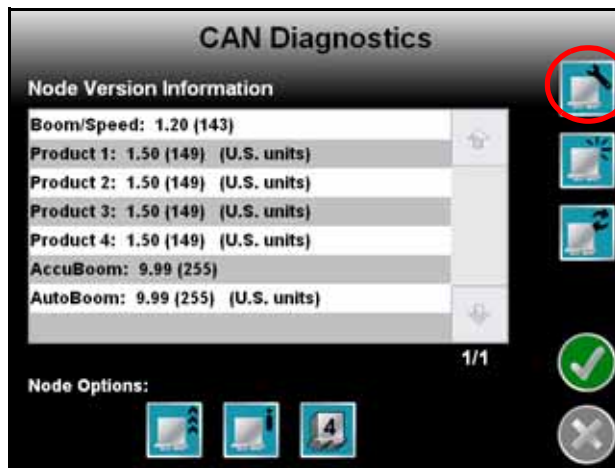



3. Touch the  button to begin readdressing the product control nodes.
4. When prompted to cycle power on the first product node, disconnect the logic power from the product node to be controlled as Product 1. After approximately 3 seconds, reconnect the node's logic power. The field computer should have recognized the node as 'Product 1.'
5. If additional product nodes are installed in the CANbus, repeat step 4 to readdress the remaining product nodes as necessary
6. Touch the Accept icon to finish readdressing the product nodes.

## Reset CANbus Defaults


	<p style="text-align: center;"><b>NOTICE</b></p> <p>Resetting system defaults will clear all calibration information from any product control nodes. Before resetting system defaults, it is recommended to write down any necessary calibration information that may help to recalibrate the system.</p>
---	---

To reset all product control nodes on the system:

1. From the Home screen, touch the Tools Menu icon and access the Control Interface screen from the System menu.
2. Touch the  icon along the right side of the screen to access the CAN Diagnostics screen.
3. Touch the  button to clear all product node or control channel settings. Use the *Calibration Reference Sheet* section on page ix if necessary to record the required calibration values for system operation. To help record additional settings for each node, step through or review the *Product Control Setup Wizard* section on page 49.
4. Touch the Accept icon to proceed with the system reset or select the Cancel icon to return to the CAN Diagnostics screen without resetting the CANbus system.

**Note:** Refer to the *Product Control Setup Wizard* section on page 49 for assistance recalibrating the product control nodes.

## Restart CAN Communication

If a node currently connected to the CANbus system is not displayed on the CAN Diagnostics screen, touch the  button to start the CAN system. If the node still does not appear on the CAN Diagnostics screen, the CANbus system may need to be readdressed. Review the *Readdressing the Nodes* section on page 31 for instructions on readdressing the product nodes.

## Additional Node Options

The following features or options may also be available via the CAN Diagnostics screen:

### Select Control Channels



The Raven product controller node is capable of providing up to four product control channels on an Envizio Pro or Envizio Pro II control system. By default, the product controller will make two control channels available to the field computer for controlling product application.

Select one of the product controller node channels and select the Select Channels icon (shown to the left) to set the number of control channels available via the node.

**Note:** The *Select Channels* icon will display the current number of channels which the node is providing to the field computer. Each control channel must be configured separately via the Tools Menu.

## Hardware Summary



Select a node from the list displayed on the CAN Diagnostics screen and touch this icon to view detailed node hardware information if available. The hardware summary screen provides node operating information that may be helpful when contacting technical support or while troubleshooting CAN communication issues.

**Note:** *If the node is not capable of providing hardware information, the Hardware Summary screen will display “N/A” for the unavailable diagnostic values.*

## Update CAN Nodes



Select a node from the list displayed on the CAN Diagnostics screen and touch this icon to update the node firmware via the CANbus network using the field computer. Refer to Appendix E, *Updating CAN Nodes via the Envizio Pro or Envizio Pro II*, for additional assistance performing a node update using the field computer.

---

## *Programming CANbus Nodes*

Regardless of cabling platform or field computer, the CAN nodes are programmed using the Tools Menu. The boom/speed (or combo node) is programmed via the Vehicle and System menus. Product, AccuBoom, AutoBoom and SmarTrax nodes, if installed, are programmed through the System menu.

See Chapter 7, *Tools Menu*, for information on programming CAN product nodes. See Chapter 9, *Using AccuBoom™*, for information on programming AccuBoom and Chapter 10, *Using AutoBoom™*, for an overview of the AutoBoom system on the Envizio Pro or Envizio Pro II field computers.

## CAN Troubleshooting

Although the control algorithm is located within the CAN node, all of the same troubleshooting techniques that are used in a traditional hard-wired or serial control systems still apply to a CAN system and the behavior of the system remains the same. Flow and speed sensors, as well as the control valve and boom valves, are used in the same fashion.

### CAN Node Off-line Errors

Occasional reports have been received on Raven consoles sporadically losing communication with one or more CAN nodes. The most likely causes for this problem are:

1. Corroded and/or open connections in the circuit.
2. Computer and/or CAN node logic power and grounds connected to a “dirty” power source (dirty power is defined as any circuit with a variable load that exceeds 1 ampere). This is especially true of circuits loaded by electrical coils.
3. Computer and/or nodes connected to different power and/or ground sources. This can result in components operating at different voltage planes.

Below are some common causes for communication failures:

Issue	Possible Cause	Solution
CANbus cannot read the product node	• The node is not connected to the CANbus	• Connect the node and re-initialize the field computer to read the product node.
	• Node is not properly powered	• Connect the clean power - 16 gauge red wire and high current power - 12 gauge red wire from the product node to a 12V DC power source that is capable of supplying power to all nodes connected to the CANbus system
	• Node is not properly grounded	• Connect the clean ground - 16 gauge white wire and the high current ground - 12 gauge white wire to a good, quality ground source. Raven recommends grounding the wires to the negative terminal of the battery.
	• The boom/speed node share power and ground connections	• Make sure that each node has a separate power and ground connection.
	• CANbus ends not terminated	• Make sure that both ends of the CANbus system are properly terminated. Refer to the <i>Raven CANbus Network Installation Manual</i> for information on properly terminating the CANbus network.
	• Corroded pins in CANbus connections	• Check CANbus cable connectors for any highly corroded pins. • Ensure dielectric grease has been applied to all cable connections exposed to weather and field conditions.
	• Moisture in connection	• Check CANbus cable connectors for any corroded pins. • Ensure dielectric grease has been applied to all cable connections exposed to weather and field conditions.
	• Connectors not seated properly	• Check that all CANbus cable connectors are inserted fully (until the locking tab is engaged). • Be sure to remove any moisture in connections which were not properly seated. Check for corroded pins and apply dielectric grease when reconnecting CANbus cables.

---

## CHAPTER

# 5

# *Startup, Initial Setup and Setup Wizards*

---

## *Overview*

The first time the Envizio Pro or Envizio Pro II field computer is powered up, the field computer will require some information about the machine and the type of applications, products and additional features connected to the system. The field computer gathers this information through a setup wizard which will prompt the user to input the required information to setup the computer for the first time.

## Initial Setup

The initial setup wizard will automatically begin when the console is powered up for the first time. This process should only take a few minutes to complete and is only required during the initial power up sequence.

**Note:** *If the field computer displays an alert regarding an authorization code after starting the console, contact a local Raven dealer or the Raven Technical Support Center for assistance. Refer to the Special Features Registration section on page 127 for instructions on entering the authorization code.*

The initial setup wizard will require the following vehicle information:

- Desired language and display units for operation.
- Guidance width (width of boom or implement without fence row nozzles, foam markers, etc.).
- Antenna offsets (left/right, fore/aft) and height.
- Whether the field computer will be interfacing with a CAN system, another Raven serial console or none of these systems.
- How the boom master switch operation should be monitored by the field computer.

## Other Required Wizards

Additional wizards may be required during the initial startup depending upon the settings and selections entered during this process. Detailed descriptions of those wizards are also available in this chapter.

## Launching Wizards

To start the setup wizards after the initial power up has been completed, select the wizard icon in the upper left corner of the Tools menu.



See the *Setup Wizards* section on page 44 for a detailed description of the other available wizards.

## Startup

The Envizio Pro or Envizio Pro II field computer will take several seconds to power up and initialize the user interface, DGPS reception and the other features of the system.

During startup, the field computer will display the following prompt.



Ignore this prompt to allow the field computer to startup normally.

**Note:** To launch the touch screen calibration wizard, touch the screen while this prompt is displayed.

## Touch Screen Calibration

The touch screen displays an arrow in the location last selected. If the arrow does not appear in the location previously touched, the touch screen may need to be recalibrated.

**Note:** *The Envizio Pro or Envizio Pro II does not require re-calibration of the touch screen every time the console is powered on. Use this procedure only if you are having difficulty with the user interface or the cursor appears in a different location than selected on the touch screen.*

### To Re-calibrate the Touch Screen

1. When prompted, touch the screen to begin re-calibration of the touch screen.



**Note:** *The operator has approximately 7 seconds to touch the screen to begin the calibration process.*

2. The first calibration target will appear. Touch the center of the target.
3. Each of the four following targets will require the operator to touch and hold the center of the target for approximately two seconds. When prompted, release to display the next calibration target.
4. After all of the calibration targets have been completed, test the touch screen calibration by touching in various areas of the screen.
5. Two options will appear in the lower left corner of the screen:
  - Touch 'Accept' to apply the screen re-calibration and start the field computer.
  - Touch 'Cancel' to reject the screen calibration. The field computer will re-apply the previous touch screen calibration before starting the computer.



## Initial Setup Wizard

The initial setup wizard will automatically begin when the Envizio Pro or Envizio Pro II is powered up for the first time. This wizard will step through the initial settings and calibration values required for operation of the field computer and control system. This process should only take a few minutes to complete and is only required during the initial power up sequence.

Any values or settings programmed during the initial setup wizard can be modified or refined later through the Tools Menu.

**Note:** *Many of the values entered in the initial setup wizard are required for guidance and/or product control features of the control system. Therefore, the more accurate these values can be measured, the more accurate the control system will be.*

The following sections may help complete the initial setup wizard. To confirm the settings displayed on a screen and proceed with the initial setup wizard, touch the 'Next' or 'Accept' icons. If available, the 'Previous' icon will step back to the previous Setup screen.



## Region

The first screen displayed during the initial setup wizard is the Region screen. Select the preferred language and units for display on the field computer.

- Metric - centimeters, liters, hectares, kilometers per hour
- English - inches, gallons, acres, miles per hour
- Turf Units - inches, gallons per 1000 square feet, miles per hour

Select the desired units of pressure to be used with an optional Glide Series AutoBoom system.

- kilo Pascals
- pounds per square inch

## Time Zone Settings

Touch the Time Zone icon in the upper right corner to view and modify time zone settings. The default selections will allow the field computer to automatically configure the time zone and daylight savings for the region of operation. To manually change the time zone, select the 'Manual Time Zone' option and enter the UTC (Coordinated Universal Time) offset hours for the local time zone.

## Guidance Width

The guidance width should be entered as the width of the boom, implement or header which actually completes an operation while the vehicle drives a swath. For example, the measured guidance width for a sprayer boom should not include fence row nozzles or foam markers and the guidance width of a combine header should be the cutting surface, not the overall header width.

Use the on-screen keypad to enter the guidance width in inches (English) or centimeters (Metric) for the boom, implement or header.




## Offsets

The antenna offset is used to calibrate the field computer for the relative location of the center of the boom or implement with respect to the GPS antenna.

**Note:** *The field computer will not recognize a negative value for any of the antenna offset values. Be sure to enter positive values for each offset setting. All negative values entered will be reset to '0'.*

The Raven Offsets Setup screen displays the currently calibrated values for the following antenna offsets:

- Fore/Aft
- Left/Right
- Height

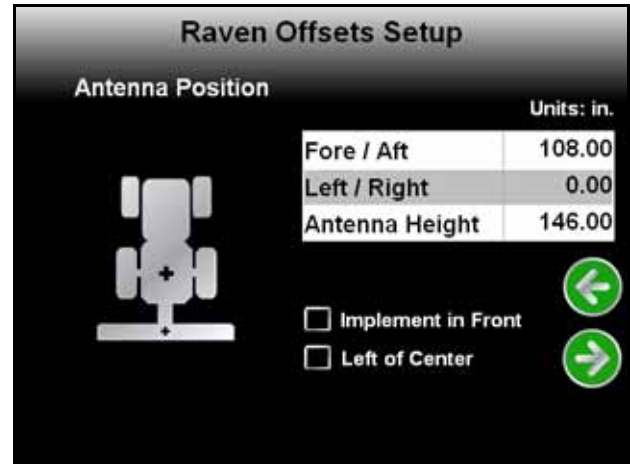

### Fore or Aft Offset


The fore/aft offset is the distance of the boom or implement in front or behind the GPS antenna.

**Note:** *The fore/aft offset must be measured perpendicular to the boom or implement width. See Figure 1 below.*

To set the fore/aft value:

1. Touch the current fore/aft value displayed on the Raven Offsets Setup screen.
2. Use the keypad to enter the measured fore/aft value in inches (U.S.) or centimeters (Metric).
3. If the boom or implement is in front of the GPS antenna, select the 'Implement in Front' option.

FIGURE 1. Example of the Fore/Aft Measurement

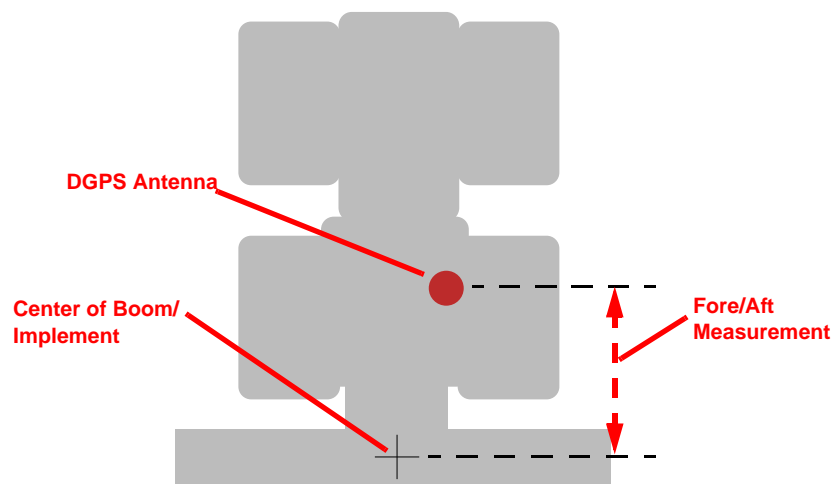

## Left or Right Offset

The left/right offset is the distance from the GPS antenna to the center line of the boom or implement.


**Note:** *The left/right offset must be measured parallel to the boom or implement width. See Figure 2 below.*

To set the left/right value:

1. Touch the current left/right value displayed on the Raven Offsets Setup screen.
2. Use the keypad to enter the measured left/right value in inches (U.S.) or centimeters (Metric).
3. If the center line of the boom or implement is to the left of the GPS antenna, select the 'Left of Center' option.

**FIGURE 2. Example of Left/Right Measurement**

---

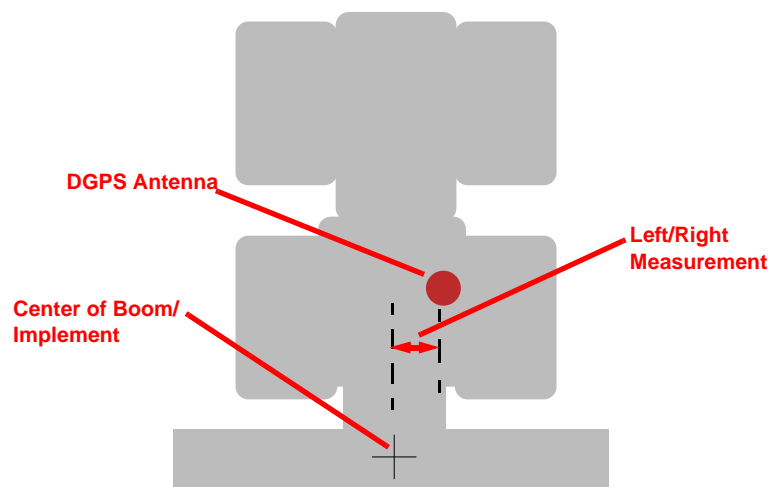

## Height

The height value is the measurement from the ground to the bottom of the GPS antenna.

To set the Height value:

1. Touch the current height value displayed on the Raven Offsets Setup screen.
2. Use the keypad to enter the measured height of the antenna in inches (U.S.) or centimeters (Metric).

## Control Interface

The multi-functional capabilities of the Envizio Pro and Envizio Pro II mean that the field computers are capable of interfacing with several different product application systems. To function properly in any one of the possible systems, the field computer must be setup to receive application information from the correct source.

The following sections describe the options displayed on the Control Interface screen and will help with selecting the appropriate product control and boom master options for the system.

**Note:** Once initial startup and calibration is completed, the Control Interface screen is available within the Tools menu. See Chapter 7, Tools Menu, for more information about the Tools menu.

When the control interface options are set correctly for the system, touch the 'Next' icon to display the Setup Wizard Menu. One or more additional wizards may be required before the initial setup of the field computer is complete.

### Product Control Options


The product control options configure the Envizio Pro or Envizio Pro II to monitor or control product application, coverage or harvest operations. The following options are available for use on the field computer:



- None - Select 'None' if the field computer will not be controlling product application or interfacing with a Raven console through a serial connection.
- Raven Serial Console - This option is used when the field computer is connected to another Raven product control console, such as a Raven SCS 440/460, via a serial connection.  
In this configuration, the field computer will monitor and display application information sent from the Raven console.
- Raven CAN Console - This option is used when another control console will be used to control product nodes on the CANbus.  
In this configuration, the Envizio Pro or Envizio Pro II will only monitor and display application information sent over the CANbus.

**Note:** Control inputs must be made via the CAN control console. The Envizio Pro or Envizio Pro II product control features will not be available during application.

- CAN Sprayer/Spreader Control - Select 'CAN Sprayer/Spreader Control' if the field computer will be used to control two products, or up to four products if the required activation key is entered, via a CANbus system.

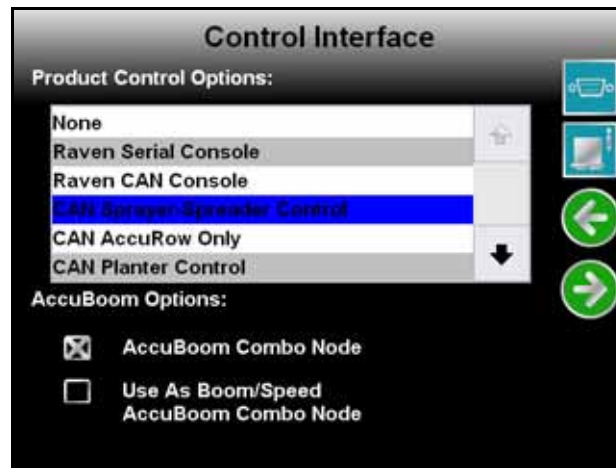

**Note:** If more than one product node has been installed with the field computer, touch the CAN Diagnostics icon (shown right) and review the CAN Diagnostics section on page 30 to re-address the product nodes.



Select the "AccuBoom Combo Node" option if an AccuBoom system is installed and an AccuBoom combo node is present on the CANbus. The 'Use as Boom/Speed AccuBoom Combo Node' option will only appear if the 'AccuBoom Combo Node' option is selected. Select this option to use the AccuBoom combo node as the boom/speed node. If this option is selected, a separate boom/speed node is not required for the CANbus system.

- CAN AccuRow Only - Select 'CAN AccuRow Only' if the field computer will be used to provide automatic section control for a multi-section planter implement. Refer to the AccuRow Calibration & Operation Manual for more information.
- CAN Planter Control - Select the 'CAN Planter Control' option if the field computer will be used with a Raven OmniRow system to provide seed population rate control and AccuRow automatic row or section shut off. Refer to the *OmniRow Calibration & Operation Manual* for more information.
- Yield Monitor - Select 'Yield Monitor' if the field computer will be used with the Raven SmartYield system to monitor and log harvest data. Refer to the *SmartYield Calibration & Operation Manual* for more information.
- Bogballe Calibrator Zurf - Select the 'Bogballe Calibrator Zurf' option if the field computer will be used in conjunction with the Bogballe Calibrator Zurf console for guidance and monitoring of product applications using Bogballe weight systems. Refer to Appendix C, *Bogballe Calibrator Zurf Interface*, for additional information.

### Boom Master Options

The boom master options allow the operator to setup the preferred method to toggle recording of the coverage map. Depending upon the control system, the following options may be available to configure the input of the boom master switch used with the field computer.

## None/Raven Serial Console

The following options are available if the product control option is set to either 'None' or 'Raven Serial Console':

- Envizio Pro Boom Sense Wire - Select this option if the boom sense wire has been connected as instructed in the *Boom Sense Wire (Interface Cable Only)* section on page 22.
- On-Screen Vehicle Arrow - This option allows the operator to touch the Vehicle Arrow (shown to the right) displayed on the Guidance screen to toggle the coverage history on or off.
- AccuBoom Master Switch - If an optional AccuBoom system has been installed with the control system, select the AccuBoom master switch option to create the coverage map based upon the section information reported by the AccuBoom node.



## CAN Options

If CAN Sprayer/Spreader Control is selected as the product control option, the list of boom master options is replaced by CAN AccuBoom options.

- Do not select the 'AccuBoom Combo Node' option if an optional AccuBoom system has not been installed on the CANbus.
- AccuBoom Combo Node - If an AccuBoom system is installed and an AccuBoom combo node is present on the CANbus, select this option. The following option will appear in the AccuBoom Options list.
- Use as Boom/Speed AccuBoom Combo Node - This option will only appear if the 'AccuBoom Combo Node' option is selected. Select this option to use the AccuBoom combo node as the boom/speed node. If this option is selected, a separate boom/speed node is not required for the CANbus system.


If the 'CAN AccuRow Only' or 'CAN Planter Control' options are selected, the boom master options displays the available options for CAN planter control.

- Reverse Sensing - Select this option to configure the field computer to detect when the vehicle direction is reversed.
- On-Screen Vehicle Arrow - This option allows the operator to touch the Vehicle Arrow (shown to the right) displayed on the Guidance screen to toggle the coverage history on or off.
- AccuRow Master Switch - If an optional AccuRow system has been installed with the field computer, select the AccuRow master switch option to create the coverage map based upon the section information reported by the AccuRow node.



## Serial Port Configuration

Touch the Serial Port icon in the upper right corner of the Control Interface screen to set up a serial device.

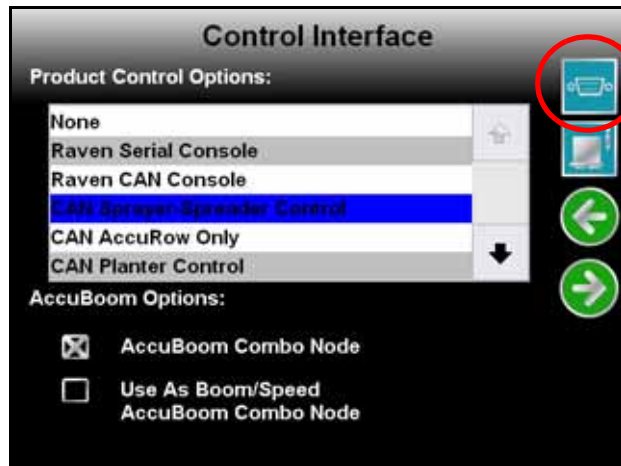


- None - Select this option if no serial device is connected to the field computer.
- Lightbar Interface - Select this option to allow the field computer to control an external lightbar connected to the connector labeled 'COM3/Lightbar' on the auxiliary interface cable (P/N 115-0171-745) or chassis interface cable (P/N 115-0171-926).

## Setup Wizards

The setup wizards simplify the task of setting up the Envizio Pro or Envizio Pro II control system for different products, implements or vehicles. Each setup wizard will display a series of prompts for which settings and calibration values will be required.

### Setup Wizard Menu

After the initial setup is complete, a menu of the available setup wizards can be displayed by selecting the wizard icon in the upper left corner of the Tools menu.

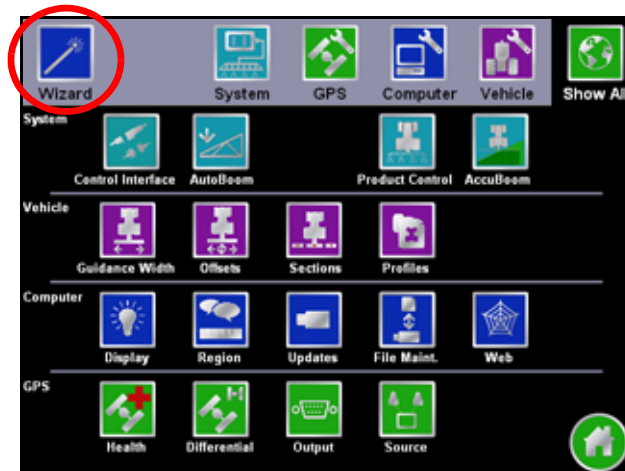

See Chapter 7, *Tools Menu*, for detailed descriptions of the other features accessible through the Tools menu.

The Setup Wizard Menu will display the available setup wizards which may be used to complete the initial setup of the field computer.



**Note:** Depending upon previous options selected during the initial setup wizard, completion of some wizards may be required before the field computer is ready for operation.

Only setup wizards which apply to the system will appear in the Setup Wizard Menu. For example, if a Glide Series AutoBoom system is not present on the CANbus, the AutoBoom setup wizard will not be displayed on this screen.

To launch a wizard, touch the icon next to the desired setup wizard to begin. Touch the Accept icon to exit the Setup Wizard Menu.

**Note:** During the initial setup wizard, the Accept icon will only appear once all required wizards have been completed.

Refer to the following sections for detailed instructions on completing the setup wizards.



## Section Setup Wizard

The Section setup wizard will guide the operator through configuring section widths and will require the following information:


- Number of sections
- Section widths
- Section configuration
- Desired section labels

### Using the Section Setup Wizard

1. Touch the Section setup wizard icon. The Number of Sections screen will display.
2. Use the Up and Down arrow buttons to setup the number of sections for the vehicle or implement. Touch the Next icon to proceed to the Section Width screen.

**Note:** To utilize individual section control or the AccuBoom automatic boom section control, plumbing on the vehicle or implement must allow for individual section control. If the machine is not capable of controlling individual sections, set the number of sections to 1 and enter the overall boom or implement width on the Section Width screen.

3. Configure the width of each section starting with the far left section. Use the on-screen keypad to enter the section width.

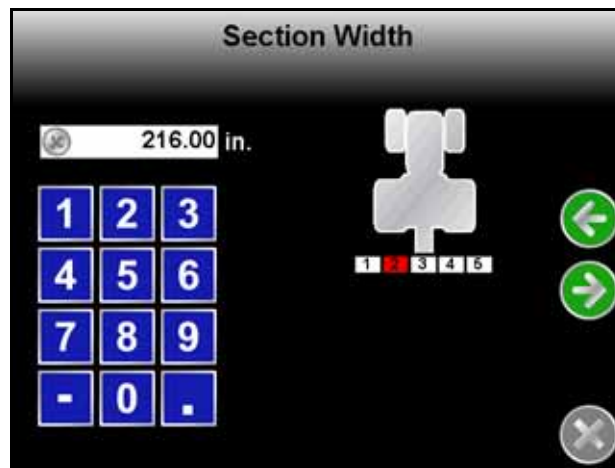


Touch the Next icon to accept the entered value and advance to the next section to the right. To skip a section, enter a value of zero as the section width.

4. Repeat step 3 until widths have been entered for all sections. Touch the Next icon on the last Section Width screen to advance to the Configure Sections screen.




5. The Manual and Auto Configure buttons on the Configure Sections screen allow the operator to select the preferred method for configuring boom or implement sections.

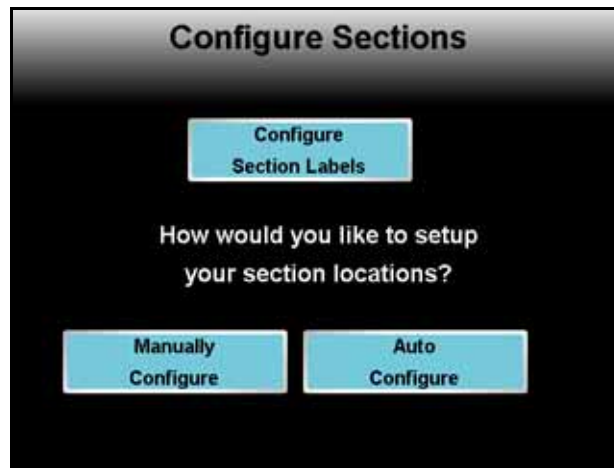

### Configure Section Labels

To customize the section labels displayed on the field computer, touch the 'Configure Section Labels' button. The Section Labeling screen will be displayed.

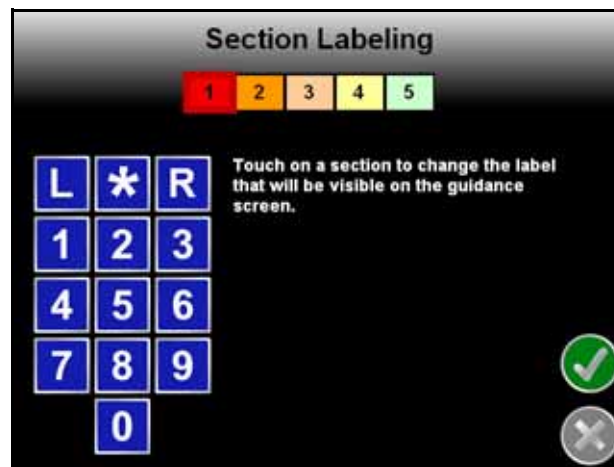

The currently configured section labels are displayed in boxes along the top of the screen. To begin configuring section labels:

1. Touch the box of the first section to relabel. A red box will appear around the selected section.
2. Use the displayed keypad to enter the new section label. The asterisk (\*) label can be used for “skipped” sections or sections with a zero width value.
3. Repeat steps 1 and 2 until all sections have been configured with the desired label.
4. Touch the green check mark to return to the Configure Sections screen.

### Automatically Configure Sections


If sections of the boom or implement are aligned end-to-end along the swath midpoint, select 'Auto Configure.' The field computer will automatically configure section locations.

**Note:** After the field computer has auto configured sections, section locations may be modified by touching the Manually Configure button.

## Manually Configure Sections

If the boom or implement is not aligned end-to-end on the swath midpoint, sections will need to manually configured. Select Manually Configure to begin locating boom or implement sections.

1. The Section Location screen will display.

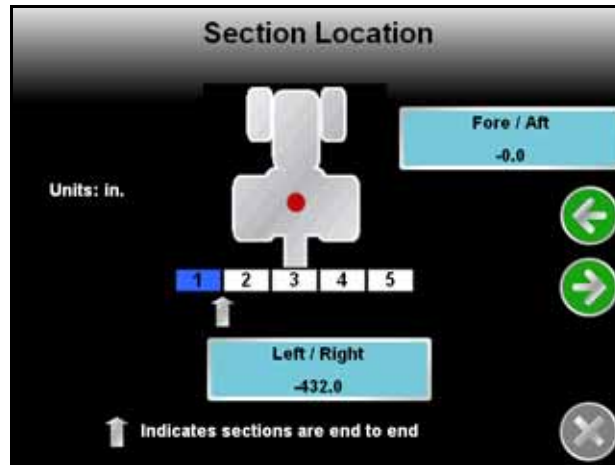

The current offset (if any) are displayed the Left/Right and Fore/Aft buttons.

**Note:** *The offset distances represent the offset from the DGPS antenna to the center of the selected section.*

2. Touch the Left/Right button to enter a left or right offset for the first section. Enter a negative value if the center of the section is located to the left of the of the DGPS antenna.
3. Touch the Fore/Aft button to enter a fore or aft offset for the first section. Enter a negative value if the center of the section is located behind the DGPS antenna.
4. Touch the Next icon and repeat step 2 and step 3 to continue programming individual section locations. When finished, touch the Next icon to return to the Configure Sections screen.
5. Touch the Accept icon to return to the Setup Wizard Menu.

## Product Control Setup Wizard


The product control setup wizard will require the following information for each product connected to the Envizio Pro or Envizio Pro II CANbus control system:

- Speed cal and sensor type
- Application type
- Valve cal and valve type
- Meter cal
- Rate cal
- Section assignments

**Note:** By default, the product controller node is set to provide two control channels for the field computer. The initial configuration wizard will need to be completed before the number of control channels may be modified.

### Using the Product Control Setup Wizard

1. Touch the product control setup wizard icon. The Speed Cal screen will display.

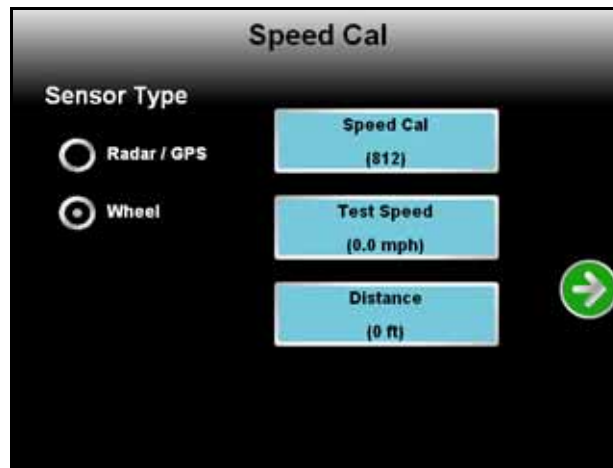

2. Select the type of speed sensor which will be used with the control system.
3. Touch the button labeled Speed Cal and use the on-screen keypad to enter the calibration value for the speed sensor installed on the vehicle.

Raven Industries recommends the following speed calibration values for initial system setup.


Sensor Type Setting	Used with	English	Metric
Radar/GPS	External Raven GPS Receiver	785	199
	Internal DGPS Receiver	812	206
	GPS Speed over CANbus	1000	254
	Raven Radar	598	152
Wheel	Wheel Magnets	1000	254
	Speedometer Drive Speed Sensor	612	155

These values are good starting points and generally yield adequate results, however, the speed cal should

be refined for each specific vehicle and speed sense system. See Appendix A, *Calculating the Calibration Values*, for instructions on refining the speed cal value.

**Note:** The GPS speed over CANbus feature is only available with specific Raven speed sense nodes.

4. The test speed and distance values are not required to complete initial setup of the field computer. Refer to the *System Menu* section on page 93 for detailed information about these settings. Touch the Next icon to continue.
5. The Application Type screen will display for the first product.


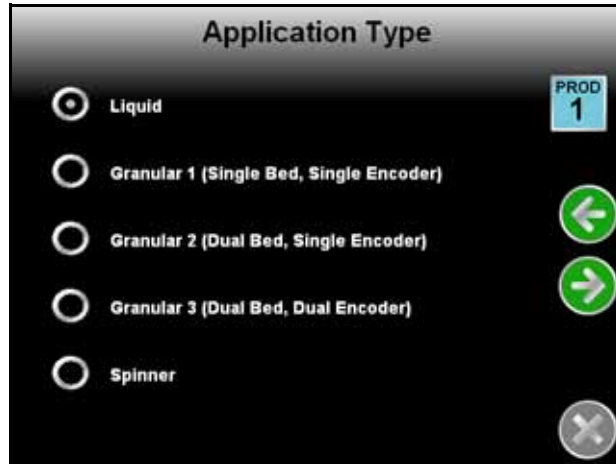


**Note:** A spinner or injection option will be displayed if the node is equipped with firmware supporting either of these features.

6. Select the type of product which the field computer will be controlling as Product 1.
7. Touch the Next icon to continue. The Valve Calibration screen will display.

Standard/Fast/Fast Close

PWM/PWM Close

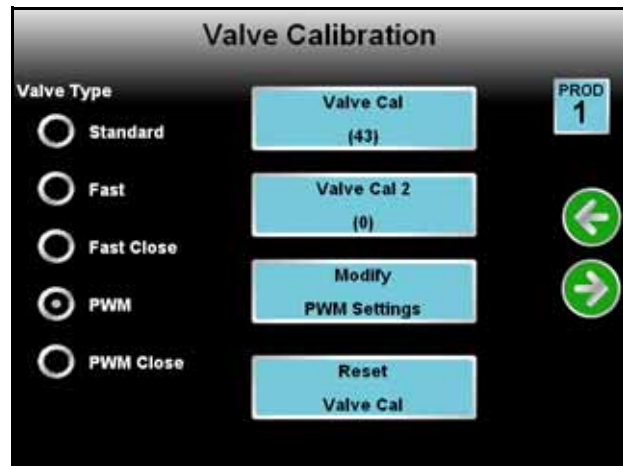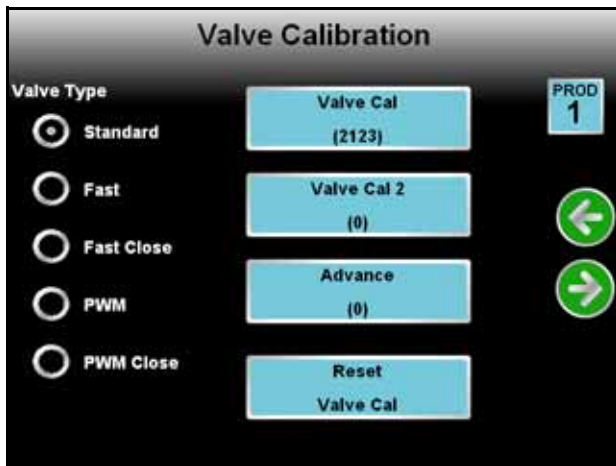

8. Select the type of control valve which will be used to control Product 1. Touch the 'Reset Valve Cal' button to insert the recommended calibration value.

**Note:** The Advance button is only displayed if the assigned product node has software version 1.50 or higher. Refer to the Valve Advance (Standard, Fast or Fast Close Valve) section on page 102 for information about the Valve Advance feature.


The Modify PWM Settings button will only be displayed if PWM or PWM Close is selected as the valve type. Refer to the Modify PWM Settings (PWM or PWM Close Valve) section on page 102 for information on these settings.

Raven Industries recommends the following valve calibration values for initial system setup.

Control Valve Type	Valve Cal
Standard	2123
Fast and Fast Close	743
PWM and PWM Close	43

These values are good starting points and will generally yield adequate results, however, the valve cal should be refined for the individual control valves installed on each specific machine. See Appendix A, *Calculating the Calibration Values*, for instructions on refining the valve cal value.


9. Touch the Next icon. The field computer will display a prompt for one of the following:
  - Meter cal for the flow meter used to measure product 1 (liquid products)
  - Density of product 1 (granular products)
  - Spinner cal (spinner control nodes)

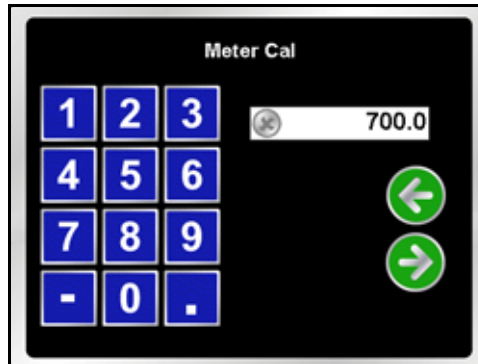

The flow meter calibration number can be found on the tag attached to the flow meter.

**Note:** Copy the information from the tag for future reference as the tags may fade or be lost during operation.


10. Use the on-screen keypad to enter the correct value.
11. Touch the Next icon. The field computer will display a prompt for one of the following:
  - Rate cal (liquid and granular products)
  - RPM cal (spinner control nodes)

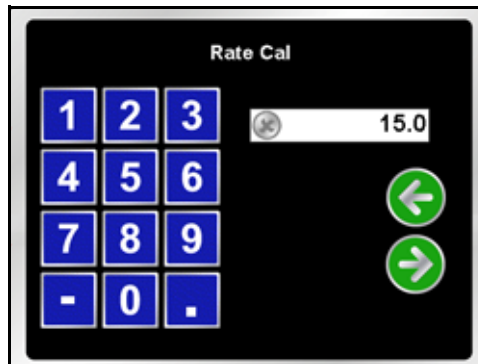

12. Use the on-screen keypad to enter the target rate or spinner RPM for product 1.



13. Touch the Next icon. The Section Assignments screen will be displayed.

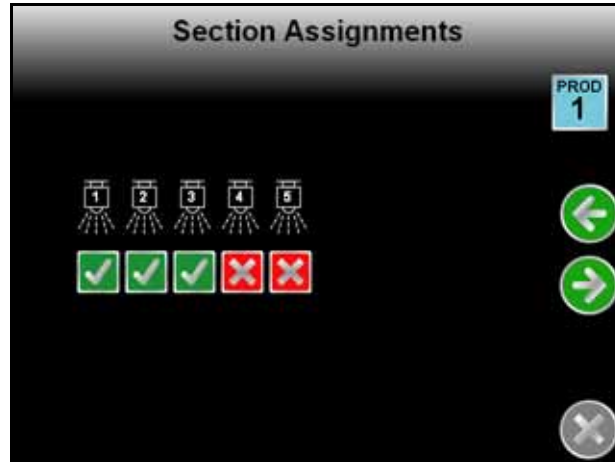

The sections from which Product 1 will be applied display a green check. To turn product application off from sections, touch the check corresponding to sections to turn off until a red x is displayed.

14. Touch the Next icon.

- If only one product node has been installed, the display will return to the Setup Wizard Menu.
- Repeat step 5 through step 13 to setup additional product nodes or control channels as necessary.

---

## *AutoBoom™ Setup Wizard*

If an optional Glide Series AutoBoom system has been installed, the AutoBoom setup wizard is available to calibrate and verify system settings during the initial setup.

The AutoBoom setup wizard may require the following information:

- Pressure Set (PowerGlide Plus)
- Sensor Height and Sensor Height Offsets (UltraGlide)
- PWM Frequency and Minimum Pressure Percent
- Speed
- Sensitivity
- Stability Factor

## Using the AutoBoom™ Setup Wizard

Refer to the *CAN AutoBoom Calibration & Operation Manual* for more information regarding setup and use of the Glide Series AutoBoom system.

## CHAPTER

# 6

## *Basic Operation*

---

### *Overview*

This chapter contains information regarding the basic operation of the Envizio Pro or Envizio Pro II control system, including:

- Home screen
- Shutting down
- Starting jobs
- Guidance patterns
- Using the guidance screen

---

### *Home Screen*

After the initial startup, the field computer will automatically startup to the Home screen.





The Home screen offers access to the following features of the Envizio Pro or Envizio Pro II field computer:



Start or  
Resume Job



Access the  
Tools Menu



Shutdown

**Note:** The Envizio Pro or Envizio Pro II should be properly shutdown before turning the power off on the field computer.

## GPS Status

The current source and status of DGPS signal is displayed in the upper, left corner of the Home screen.

RTK or  
CORS



OmniSTAR HP



OmniSTAR XP



SBAS  
(WAAS/EGNOS)



NovAtel GI1de®  
or e-Dif



Standard



**Note:** The standard GPS shield will be displayed if the Envizio Pro or Envizio Pro II field computer cannot determine the type of corrections being sent from the DGPS receiver.

The status icon on the Home screen will display:

- Green if the status of GPS is okay.
- Yellow if an error or cautionary condition has been encountered.
- Red if GPS is non-functional. Make sure the DGPS antenna cable connections are secure and the antenna has a clear, 360° view of the sky.

## RTK Fixed and Float Modes

When using an RTK correction source with the internal dual frequency GPS receiver, the GPS status indicator may be used to determine whether the receiver is operating in RTK fixed or float modes. The RTK shield will display:

- Green to indicate a fixed RTK position. This mode indicates that the receiver has a full RTK position fix and is providing sub-inch corrections.  
The GPS Health screen will display a value of 4 for the differential mode when operating in RTK fixed mode.
- Yellow to indicate that the receiver is operating in RTK float mode. This mode indicates that the receiver is not able to provide a full RTK position lock due to the distance from the base station, visibility of the sky, time of day or interference around the base station location. In the float mode, the receiver is still providing a coarse RTK correction signal, but accuracy of the receiver may not be at a sub-inch level.  
The GPS Health screen will display a value of 5 for the differential mode when operating in RTK float mode.

Touch the shield icon to display the GPS Status screen. Refer to the *GPS Menu* section on page 115 for more information on the GPS Status screen.



## Wireless Communications Status

The current status of wireless communication is displayed along the top of the Home screen display.



This icon will appear:

- Gray if no wireless communications device is connected to the field computer.
- Green if communication is okay.
- Yellow if an error condition has been encountered.
- Red if wireless communication is not available.

Touch the shield icon to display the Wireless Status screen. Refer to the Appendix D, *Wireless Communications & Remote Service* for more information.

## Information

Touch the information icon in the upper, right corner of the home screen to display the software and image versions currently installed on the field computer.




## Closing Jobs and Power Down

Be sure to close any open job files before turning the field computer power off. The Envizio Pro or Envizio Pro II should be powered down using the Shutdown icon on the Home screen.

	<p><b>NOTICE</b></p> <p>Failure to properly close a job before turning off the field computer may result in a loss of application data or other information for that job. Make sure to properly close any open jobs before shutting down the computer.</p>
--	--

**To end jobs on the Envizio Pro or Envizio Pro II:**

1. Open the menu on the Guidance screen and touch the green home icon to return to the Home screen.

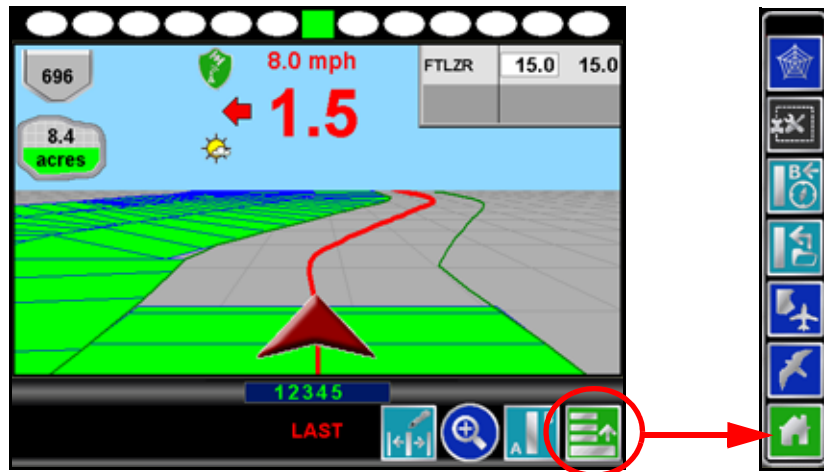

2. The Home screen will be displayed. The Home screen displays 'Job in progress' during an active job and the Shutdown icon is replaced by the Stop icon.



3. Touch the Stop icon to close the currently active job.

**Note:** Touching the Start icon with a job in progress will return to the Guidance screen of the active job. To begin a new job, first touch the Stop icon to close the job in progress before selecting the Start icon.

4. Confirm closing the open job file by touching the green check mark. To keep the current job open, touch the red 'x.' Closed jobs can be re-opened later by selecting an existing job file during the Start Job procedure. See the *Setting up a Job* section on page 58 for more information.
5. The Stop icon will be replaced with the Shutdown icon. Touch the Shutdown icon to power down the field computer.

---

## Job Files

### Overview

The Envizio Pro and Envizio Pro II stores field and product information in job files. In general, job files are created for each field and contain the following information:

- Target rate (min and max)
- Coverage area and area within a field boundary
- Volume of product applied
- Prescription map information (if applicable)

These files are automatically created for each job started on the Envizio Pro or Envizio Pro II.

**Note:** *To ensure console memory resources are available, Raven recommends performing file maintenance periodically to remove unused job files from the memory on the console. Refer to Chapter 8, Software Updates and File Maintenance for more information.*

A job file allows the operator to:

- Create and save new field boundary and coverage maps and other information for each application without erasing or modifying previous jobs stored on the field computer.
- Load previously created job files and coverage maps to resume a job at a later date. Saved field boundaries, AccuBoom maps, guidance paths or other information stored on the field computer for the job may be recalled to continue the application right where the operator left off.
- Save and load job files at any time during a field application. This allows the field computer to work in multiple fields or on different applications without losing application information for any other existing or unfinished job file.

---

## Starting a Job

Before starting a job and creating a job file, the Envizio Pro and Envizio Pro II field computers require the operator to check and verify job information. During this process, the operator can choose to create a new job or to resume an existing job as well as enable features and options to be used during the job being created.

**Note:** *If the field computer will be controlling products via a Raven CAN system, make sure all nodes connected to the CANbus are recognized and programmed correctly. Refer to Chapter 4, CAN Networking and Diagnostics if nodes do not appear to be recognized by the field computer.*

During the job setup process, the field computer may require the following information:

- Type and name of the job to be created
- Guidance pattern
- Product control and rate information

At this time, the field computer may also require the operator to enable the optional AutoBoom and AccuBoom systems.



## Setting up a Job

This section contains detailed instructions for setting up a job. Depending upon the application and other features of the product control system, some of the following steps may not be required to begin all jobs.

1. Touch the Start icon on the Home screen. The Start Job - Verify Settings screen will be displayed.



**Note:** Settings and features displayed on this screen may not be accessible while a job is in progress. Verify that all settings are correct and all nodes connected to the CANbus are detected by the control system before beginning the job.

*If the status of any nodes connected to the CANbus display 'Node Offline,' refer to Chapter 4, CAN Networking and Diagnostics, before starting the job.*

2. Touch the Job button and refer to the *Job File Setup* section on page 59 to name a new job file or resume an existing job saved on the field computer.
3. Touch the Pattern button and refer to the *Guidance Pattern Setup* section on page 60 for more information on the available guidance patterns.
4. Touch the AccuBoom button to enable or disable the AccuBoom feature or select a spray zone map. Refer to *AccuBoom™ Setup* section on page 62 for details on configuring the AccuBoom feature.
5. Select the Product buttons to configure product nodes or control channels to control product application during the active job. See the *Product Setup* section on page 62 for more information on setting up the nodes or control channels.
6. Touch the green check mark icon to begin the job. See the *Guidance Screen* section on page 64 for more information. Touch the Cancel icon to end job setup without starting the job.

**Note:** Cancelling the job will discard any settings or selections made on the setup screens. Any configured settings or selections will be lost.

7. If an optional AutoBoom system is detected on the CANbus, the AutoBoom Setup screen will be displayed. Refer to the *AutoBoom™ Setup* section on page 64 to enable or disable the AutoBoom feature.


## Direction of Travel

The last direction of travel detected by the field computer is displayed on the Start Job - Verify Settings screen.



If the direction of travel indicator displays incorrectly, touch the indicator to manually toggle the last detected GPS direction.

**Note:** The direction of travel indicator is also displayed on the GPS Health screen and may be toggled during a job if necessary.

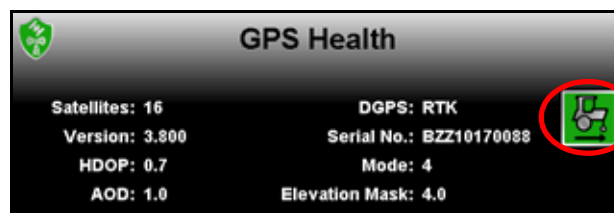

Refer to the Reverse Sensing section on page 115 for more information or to enable the direction of travel indicator.

The direction of travel indicator will not be displayed if a SmarTrax 3D node is detected on the CANbus and the terrain compensation feature is active.

## Job File Setup

Select the Job button to select an existing job file or rename the new job.



**Note:** Renaming new job files is highly recommended if a specific job will be referenced at a later date. The operator should enter field location, product or any other information which may help identify specific job files. Names of job files entered on the field computer cannot begin or end with a space.

The Select Job screen will be displayed.



**To Resume an Existing Job:** Select the existing job file from the list and touch the Accept icon to return to the Verify Settings screen.

When the Guidance screen is displayed, coverage maps from the existing job will be displayed on the Guidance screen.

**To Start a New Job:** On the Select Job screen, touch the Create New icon. The New Job: Enter Name screen is displayed.

Use the on-screen keypad to enter the name of the new job file. Touch the Accept icon to confirm the entered name and return to the Start Job - Verify Settings screen. Touch the Cancel icon to return to the Start Job - Verify Settings screen without accepting the job name.



**Note:** Job names stored on the field computer cannot begin or end with a space.

### Guidance Pattern Setup

Touch the Pattern button to select the guidance pattern best suited to the field and type of application.



The following icons represent the available guidance patterns.



The following descriptions may be helpful when selecting the type of guidance pattern for use during the actual field application. See the *Using Guidance Patterns* section on page 65 for more information on using guidance paths during the job.

**Enhanced Last Pass.** The Last Pass pattern uses the last, or nearest, applied or covered area and the guidance width to display the next guidance path. While this pattern does not require the operator to set 'A' or 'B' points, a previously applied or covered area is required in the active job to use this pattern.

The Last Pass guidance pattern has been enhanced to provide accurate steering along the displayed guidance path with systems such as the Raven SmarTrax or SmartSteer assisted steering systems. Contact a local Raven dealer for more information about these Raven assisted steering systems.

The Enhanced Last Pass is well suited to provide guidance for irregular swaths due to irregular field boundaries, well heads or waterways, etc.

**Note:** *If the Enhanced Last Pass guidance pattern will be used with headlands, select the 'Enable Last Pass Headlands Mode' option. This will allow the field computer to ignore the headlands passes when working the field in alternating 180° swaths.*

*If the Last Pass guidance pattern will be used to cover the field in a rectangular pattern (outside to inside), leave the 'Enable Last Pass Headlands Mode' option disabled (empty).*

**Straight (A-B) Line.** The Straight (A-B) Line pattern is based upon two user input points to create a straight line guidance path. The field computer then uses the programmed guidance width to create parallel guidance paths based off of the original guidance path.

As long as the Straight Line pattern is active, the field computer will display the nearest straight line guidance path. See the *Using Guidance Patterns* section on page 65 for help using the A-B guidance line tools and features.

The Straight (A-B) Line pattern is useful for applications in fields with row crops.

**Pivot.** The Pivot pattern is designed for use in fields with a center pivot, or circle, irrigation system. The pivot pattern is created using two points set by the operator on the circumference of the field or on the swath furthest from the irrigation hub.

Using the two operator defined points and the vehicle guidance width, the field computer calculates circular paths stepping toward the center of the field area.

As long as the Pivot pattern is active, field computer will display the nearest guidance path. The same tools used with the Straight (A-B) Line pattern are used with the Pivot pattern. See the *Using Guidance Patterns* section on page 65 for help using the A-B guidance line tools and features.

The Pivot pattern is useful for applications in fields irrigated by a center pivot or circle irrigation system.

**Fixed Contour.** The Fixed Contour guidance pattern allows the operator to use the same tools available for other A-B paths with irregular swaths. A contoured path is recorded between two points set by the operator. The Envizio Pro or Envizio Pro II field computer records points along the path to follow field features. Once the pattern is completed, the field computer connects the recorded points and displays the Fixed Contour path. Once the first contour is set, the field computer is able to use the programmed guidance width and the original path to project additional contour paths for the rest of the field.

See the *A-B Path Tools* section on page 76 for help using the A-B guidance line tools and features with the Fixed Contour pattern.

The Fixed Contour pattern is ideal for creating and saving swaths which follow irregular field boundaries, waterways, well heads, etc., or where the ability to skip swaths in an irregular pattern is necessary.

**Note:** *Curvature of the Fixed Contour guidance path should not be too aggressive. Overly aggressive curves may produce undesirable results.*





## AccuBoom™ Setup

If the optional AccuBoom system has been installed, touch the AccuBoom button to enable the AccuBoom feature and select a spray zone map.



**Note:** Refer to Chapter 9, *Using AccuBoom™*, for more information about using AccuBoom.


The Status for the optional AccuBoom node may be displayed as follows:

- Disabled - Node is connected and communicating but optional features are not enabled for this system.
- Enabled - Node is connected and communicating and optional system features are enabled.
- Node Offline - The node is currently not detected by the field computer.

If selected, the name of the selected spray zone map will be displayed in the zones field.

## Product Setup

To setup product nodes or control channels, select the corresponding Product button to setup the product control for the selected node.

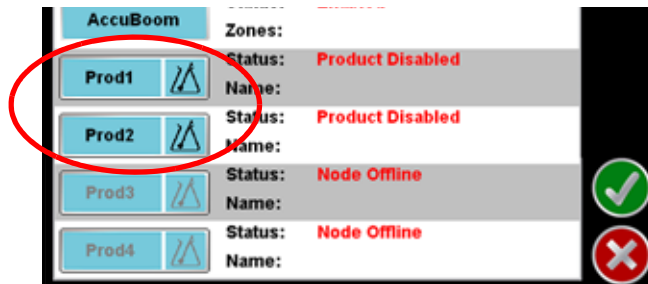

**Note:** If the status of any nodes connected to the CANbus display 'Node Offline,' refer to Chapter 4, *CAN Networking and Diagnostics*, before starting the job.

If the optional multiproduct activation key is entered, up to four product nodes or control channels will be displayed on the Verify Settings screen.



The selected Product Setup screen will be displayed.



**Enable Product.** Select the “Enable Product” option to enable control for the selected product. If the product is not enabled during job setup, the job must be closed and a new job file started to allow the node or channel to control product application.

**Rate Control Mode.** Choose the preferred rate control mode for the product. Select between Off, Manual or Automatic.

**Note:** *If a CAN Switch Box is installed with the field computer, the rate control mode must be set using the product control switches on the switch box. The field computer will display the selected mode for each product.*

**Product Name.** The currently selected product name is displayed on the Product Name button. Touch the Product Name button to display the Start Job - Select Product screen.



Select a product name from the displayed list or create a new name by touching the Create New icon. Use the displayed keypad to enter the name of the new product.

**Note:** *Product names entered on the field computer cannot begin or end with a space.*

Touch the Delete Product icon to remove a product name from the list.

**Target Rate.** The currently entered target rate is displayed on the Rate button. Touch the Rate button and use the displayed keypad to set a new target rate.



## AutoBoom™ Setup


If an optional AutoBoom system is detected on the CANbus, the field computer will display the AutoBoom setup screen before accessing the Guidance display and features. Review the *AutoBoom Calibration and Operation Manual* for detailed operation of this feature with the Envizio Pro or Envizio Pro II field computers.

## Guidance Screen

### Guidance Features

During a field operation, or job, on the Envizio Pro or Envizio Pro II field computers, the Guidance screen provides the application or coverage information and will likely be the most viewed screen during a job. Using DGPS coordinates, the field computer offers several field guidance tools to help reduce operator fatigue and minimize skips and overlaps during product application.

The following features are available during a job on the Envizio Pro or Envizio Pro II field computer:

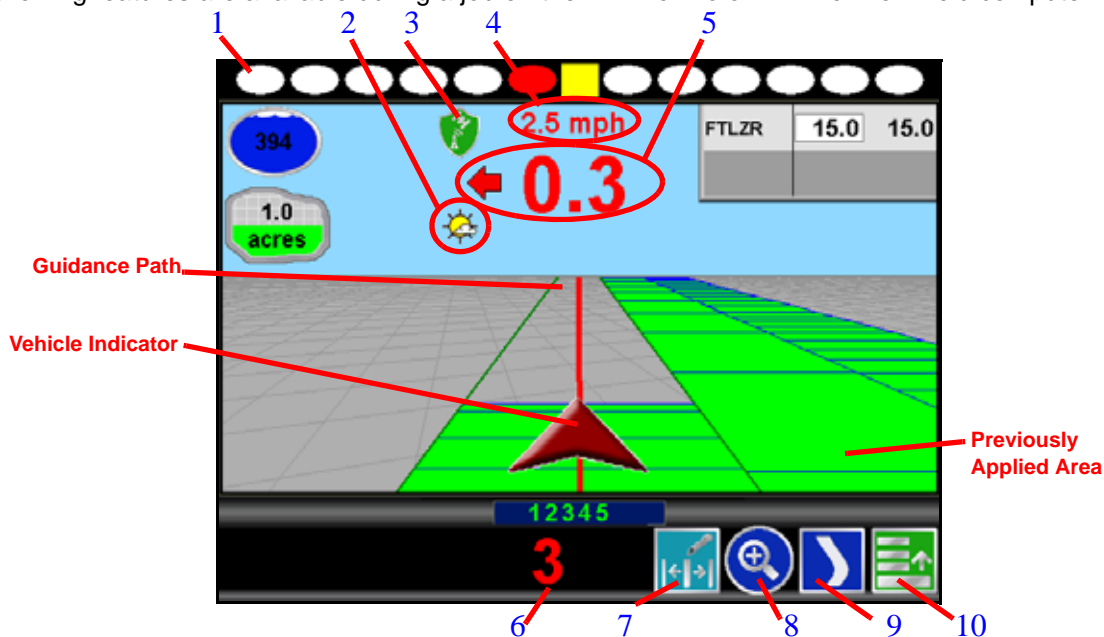

**Note:** With the reverse sensing feature enabled, it may be necessary to manually override the course of the vehicle indicator. The direction of travel icon (shown to the right) will be displayed on the Guidance screen any time the field computer detects that the vehicle is travelling in reverse. Touch the reverse direction icon to manually toggle the direction of travel displayed on the Guidance screen.



If the reverse direction icon is not displayed on the Guidance screen, touch the GPS Status Indicator and touch the direction of travel icon along the right side of the screen to manually toggle the displayed vehicle course.

1. On-Screen lightbar - The On-Screen lightbar illuminates to represent the vehicle's location with respect to the displayed guidance path.

The center square displays green when the vehicle is "on line." As the vehicle moves away from the line, the center square will turn yellow and the surrounding ovals will begin illuminating to represent distance

from the guidance path. See the System menu section in Chapter 7, *Tools Menu*, to setup the lightbar display.

2. Day/Night Mode - Touch this icon to toggle the Guidance display for day or night operations.
3. GPS Status Indicator - Displays the current GPS correction source and signal status. Review the *GPS Status* section on page 54 for details.
4. Speed or COG Display - Vehicle speed or Course Over Ground is displayed in this area. Touch this area to toggle between the Speed or COG display.
5. Distance from Path - This display shows the distance and the direction to the guidance path. The value displayed is in feet (English) or meters (Metric) and the arrow points in the direction to the displayed guidance path.
6. Swath Number - During straight line, pivot and fixed contour guidance patterns, the number of the current swath is displayed in this area. When in Last Pass mode, this area displays LAST.
7. Nudge Feature - Touch this icon to display the In Job Nudge Settings screen. See the *Nudge Feature* section on page 68 for more information on using the nudge feature.
8. Zoom - Touch the Zoom icon to cycle through the zoom levels on the displayed guidance screen. Pressing the zoom icon at the maximum zoom level (Level 5) will return to the minimum zoom. Continue pressing the zoom icon to cycle through the zoom levels as desired.
9. Alternate Guidance Pattern - Touch the icon displayed in this area to toggle between the available guidance patterns. Review the *Guidance Pattern Setup* section on page 60 for information about the guidance patterns. See the *Using Guidance Patterns* section on page 65 for more information on using specific patterns.
10. Menu - Guidance screen views, path tools and options, and AccuBoom mapping features are all accessible through the Menu. See the Menu section later in this chapter for more information on using tools and features found within the Menu.

### SmarTrax™ Status Display

If the optional SmarTrax or SmartSteer system has been installed, the status of the system will appear on the Guidance screen.



### Using Guidance Patterns

The following Guidance Patterns are available on the Envizio Pro and Envizio Pro II:

- Enhanced Last Pass
- Straight (A-B) Line
- Fixed Contour
- Pivot

These Guidance Patterns, combined with one of the Guidance Views (discussed previously), provide the operator with tools for field navigation and can help reduce skips and overlaps as well as minimize operator fatigue.


Refer to the following descriptions for more information on the available Guidance Patterns as well as using selected patterns during a job.

## Enhanced Last Pass

The Last Pass pattern uses the last, or nearest, applied or covered area and the guidance width to create the following guidance path.

While this pattern does not require the operator to set 'A' or 'B' points, a previously applied or covered area must be present in the active job before this pattern will display the next guidance path. The Last Pass must follow the previous applied area and will not project subsequent paths beyond the next guidance path.

The Last Pass guidance pattern has been enhanced to provide accurate steering along the displayed guidance path with systems such as the Raven SmartTrax or SmartSteer assisted steering systems. Contact a local Raven dealer for more information about these Raven assisted steering systems.

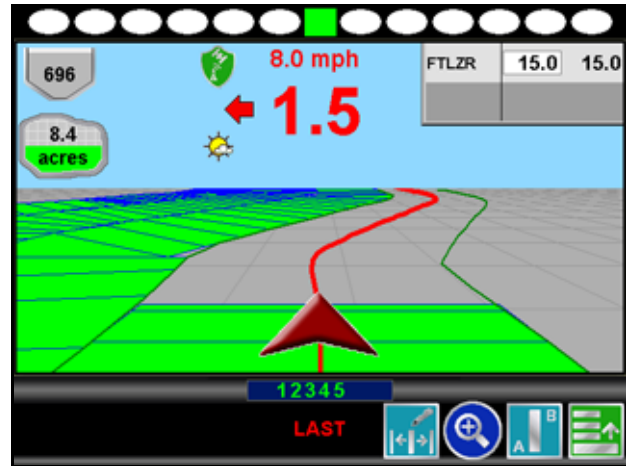

The Enhanced Last Pass is well suited to provide guidance for irregular swaths due to irregular field boundaries, well heads or waterways, etc.

**Note:** *The Last Pass guidance pattern is designed to function in areas with a single, well defined, continuous coverage or as-applied map. If the coverage map displays multiple coverage areas or breaks in coverage, one of the other guidance patterns may provide better results and is recommended.*

**Headlands Mode.** If the Last Pass pattern attempts to lock onto headlands swaths incorrectly, be sure to select the 'Enable Last Pass Headlands Mode' option on the Select Pattern screen while setting up the job. This will allow the field computer to ignore the headlands passes when working the field in alternating 180° swaths.

If the Last Pass guidance pattern will be used to cover the field in a rectangular pattern (outside to inside) leave the 'Enable Last Pass Headlands Mode' option disabled (empty).


## Straight (A-B) Line

The Straight Line, or parallel, guidance pattern is created by drawing a straight line through two user defined points (points A and B). After the A and B points are set, the field computer is able to use the programmed guidance width and the original path to project parallel guidance paths for the rest of the field.

As long as the Straight (A-B) Line pattern is active and the original path is available, the field computer will display the nearest path regardless of previous application history or coverage mapping.

See the *A-B Path Tools* section on page 76 for help using the A-B guidance line tools and features with the Straight Line pattern.

The Straight (A-B) Line pattern is useful for applications within rectangular fields and with row crops.

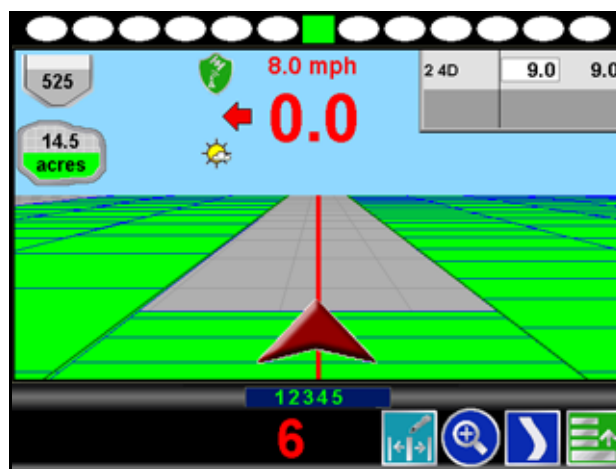

## Fixed Contour

The Fixed Contour guidance pattern allows the operator to use the same tools available for other A-B paths with irregular swaths. Similar to the Straight Line pattern, the operator sets the first, or A, point of the swath and begins driving the swath. The field computer records points along the driven path until the operator sets the B point. The field computer then connects the recorded points and displays the Fixed Contour path. After the A and B points are set, the field computer is able to use the programmed guidance width and the original path to project additional contour paths for the rest of the field.


As long as the Fixed Contour pattern is active and the original path is available, the field computer will display the nearest path regardless of previous application history or coverage mapping.

See the *A-B Path Tools* section on page 76 for help using the A-B guidance line tools and features with the Fixed Contour pattern.

The Fixed Contour pattern is ideal for creating and saving swaths which follow irregular field boundaries, waterways, well heads, etc., or where the ability to skip swaths in an irregular pattern is necessary.

**Note:** *Curvature of the Fixed Contour guidance path should not be too aggressive. Overly aggressive curves may produce undesirable results.*

*Always be aware of sharp turns when using the Fixed Contour pattern if an assisted steering system such as Raven SmarTrax or SmartSteer system is engaged. Contact a local Raven dealer for more information about these Raven assisted steering systems.*

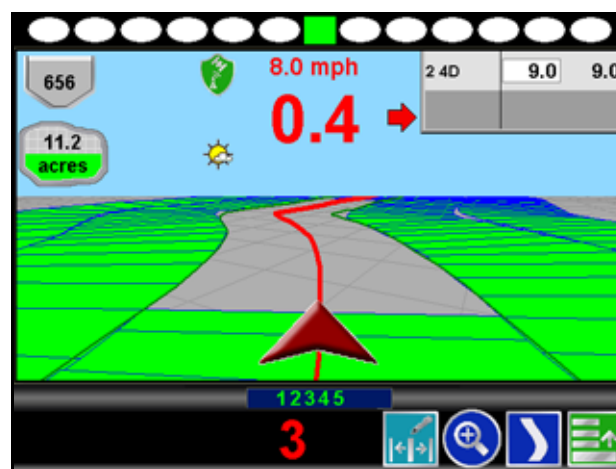


### Pivot

To begin guidance using the pivot pattern, the operator must set two points along the circumference of the field or the swath furthest from the irrigation hub.

Set the first, or 'A,' point at the start of the swath furthest from the irrigation hub and drive along the field circumference and set the second, or 'B,' point at the end of the swath. Using these two operator defined points and the vehicle guidance width, the field computer calculates circular paths stepping toward the center of the field area.

As long as the Pivot pattern is active and the original path is available, the field computer will display the nearest circular path regardless of previous application history or coverage mapping. Currently, this pattern does not require that the entire circumference of the field is driven before beginning guidance; however, better results are achieved by driving further along the guidance line.

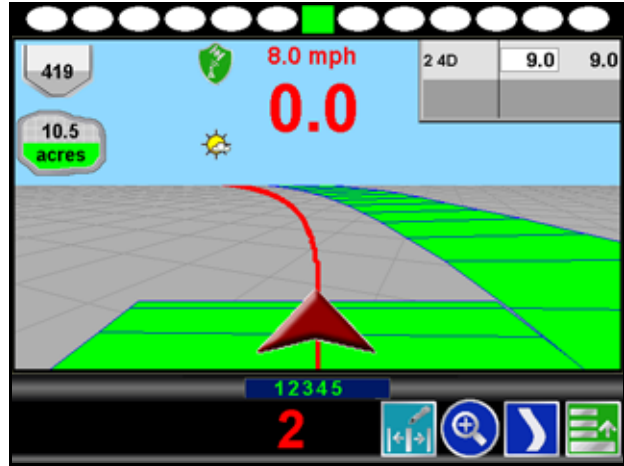

See the *A-B Path Tools* section on page 76 for additional assistance when using the A-B guidance line tools and features with the Pivot pattern.


### Nudge Feature

The Nudge Feature allows the operator to adjust a displayed guidance path for actual field position by “nudging” the line to the left or right. The amount of nudge to apply to a line is user defined.

**Note:** *The Nudge Feature may only be used with guidance paths using user set A and B points (Straight Line, Pivot, Fixed Contour).*


To Nudge a displayed guidance path:

1. Begin a job with an A-B guidance path (Straight Line, Fixed Contour or Pivot).
2. Touch the Edit Nudge icon at the bottom of the screen.

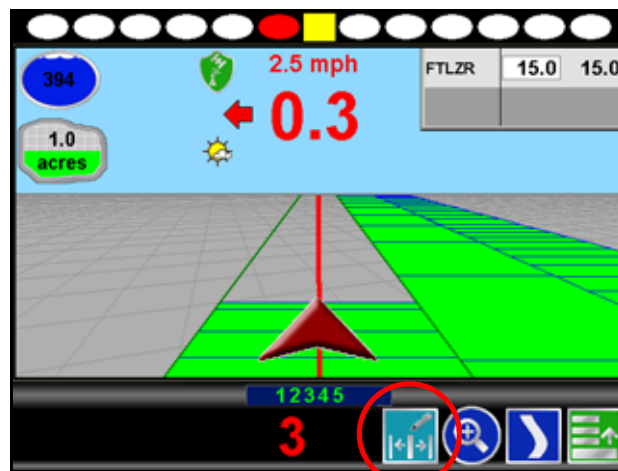




3. The In Job Nudge Settings screen will be displayed.

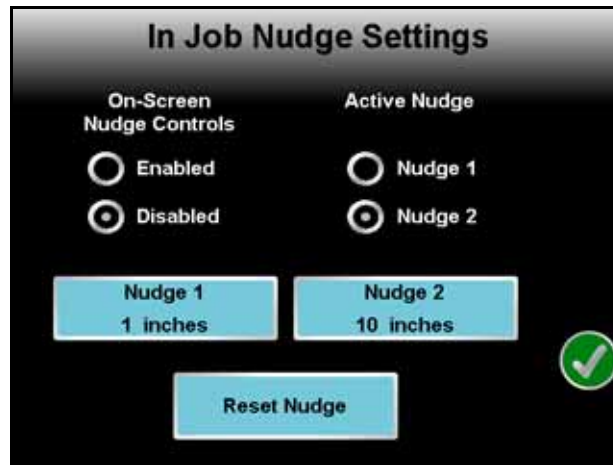


4. The Nudge Settings screen displays the following options:

- a. To apply nudge values to a guidance path, the 'On-Screen Nudge Controls' option must be Enabled.
- b. Select the 'Nudge 1' or 'Nudge 2' radio buttons to select the user defined nudge to apply when the on-screen nudge buttons are used.
- c. Touch the Nudge 1 or Nudge 2 button and use the on-screen keypad to enter the desired values for each nudge setting.
- d. Touch the Reset Nudge button to remove any nudge values from the displayed guidance path.
- e. Touch the green check mark to return to the Guidance screen. The On-Screen Nudge buttons will be displayed next to the vehicle indicator.

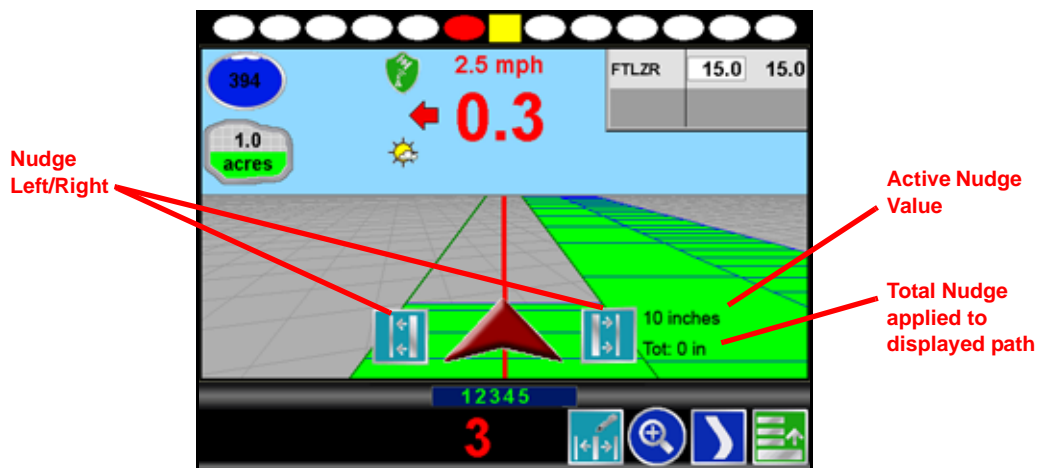

## Product Control Features

In addition to guidance features of the Envizio Pro and Envizio Pro II, the Guidance screen displays product control information, coverage maps, as well as vehicle and GPS information.

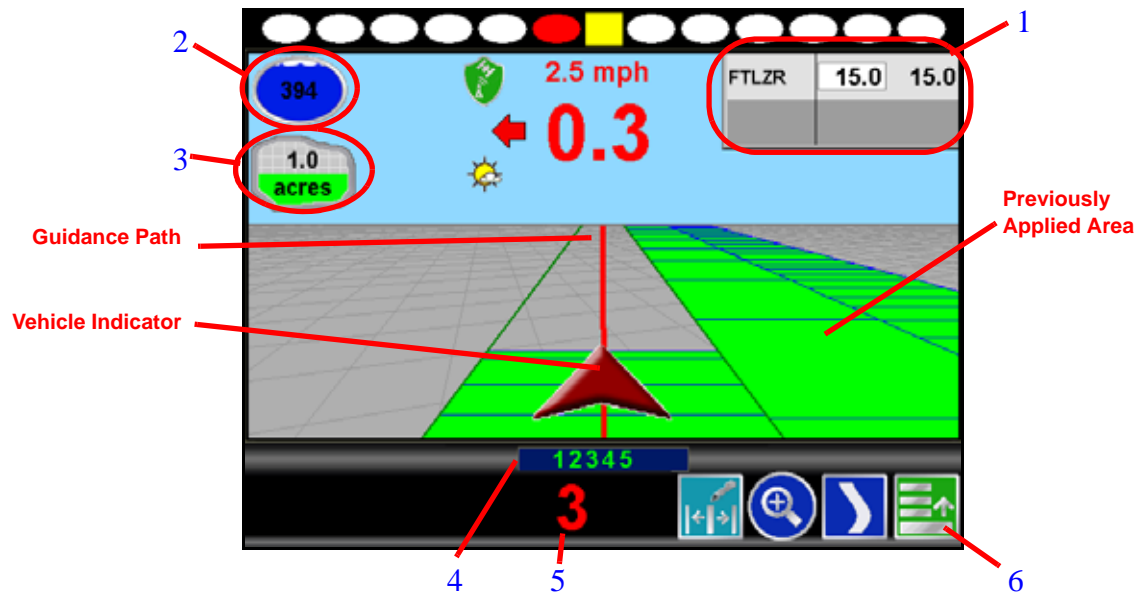

1. Product Rate Display - This area displays the target and actual rates for each product enabled for the current job. Touch the names area of the product rate display to toggle the selected product.  
The Guidance screen displays area covered and volume indicators corresponding to the selected product. Touch the target and actual rates area to access additional features and configuration settings while in a job. See the *Product Rate Display* section on page 72 for more information on using this display.
2. Tank or Bin Indicator - Displays the volume of product remaining in the tank or bin. Touch this area to display the Volume Configuration screen. See the *Tank or Bin Indicator* section on page 71 for more information.
3. Area Covered - This indicator displays the area covered during the current job.
4. Sections - The label for each section configured on the field computer appears in this area. Active sections appear green while sections currently disabled (or toggled off) appear in white.

**Note:** *With the optional AccuBoom feature installed, section labels displayed in amber signify that AccuBoom control of the section is enabled, but AccuBoom has toggled the section off.*

5. Swath Number - During straight line, pivot and fixed contour guidance patterns, the number of the current swath is displayed in this area. When in Last Pass mode, this area displays LAST.
6. Menu - Guidance screen views, path tools and options, and AccuBoom mapping features are all accessible through the Menu. See the *Menu* section on page 75 for more information on using tools and features found within the Menu.



## Tank or Bin Indicator

The tank or bin level indicator displays an estimate of product remaining in the tank or bin for the selected product.



Touch this indicator to view the Tank or Bin Volume Configuration screen. The Volume Configuration screen will display the current level remaining in the tank or bin.



To adjust the tank or bin level for the selected product:

1. Use the keypad to enter the volume of product remaining.
2. Touch the Accept icon to enter the new tank or bin level and return to the Guidance screen. The tank or bin level indicator will display the entered level.

**Note:** Touch the Cancel icon to exit the Volume Configuration screen without keeping any changes made on this screen.


**Reset Tank or Bin Button.** Touch the Reset button to quickly reset the tank or bin level to the pre-programmed bin or tank size.

**Tank or Bin Size Button.** Touch the tank or bin size button to configure the volume of product in the tank or bin. Each product control node may have a separate volume and tank or bin level.

**Note:** If the Reset button will be used to recalibrate the bin or tank level, the bin or tank size should be set at the volume of product in the tank after refilling; not necessarily the capacity of the bin or tank.

## Product Rate Display

The field computer displays rate information for each enabled product in the upper, right corner of the Guidance screen.

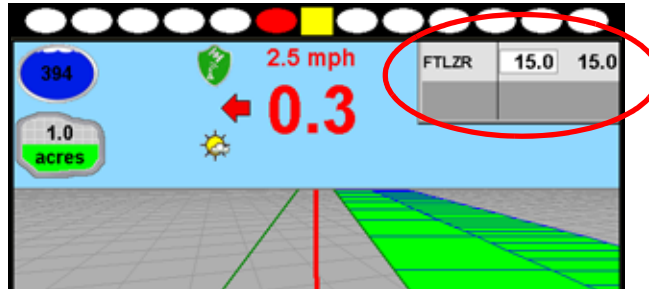

The following information appears in the Product Rate Display:

- Name of each enabled product
- Target rate of each product
- Actual rate of each product
- Selected product


**Note:** While monitoring product application from a separate rate control console via a serial connection, the field computer will display the number of products currently enabled on the rate controller.

**Selected Product.** During a single product application, the product enabled during the job setup process will always be selected during the job.

If additional products are enabled, the name and rates of the selected product are highlighted. To toggle the currently selected product, touch the product names within the Product Rate Display. Tank or bin volumes, area applied and coverage maps are displayed according to the product selected in the Product Rate Display.

## In Job Product Configuration

Several product control settings and display options are available during a job by touching the rates area of the Product Rate Display. The following screen is displayed:

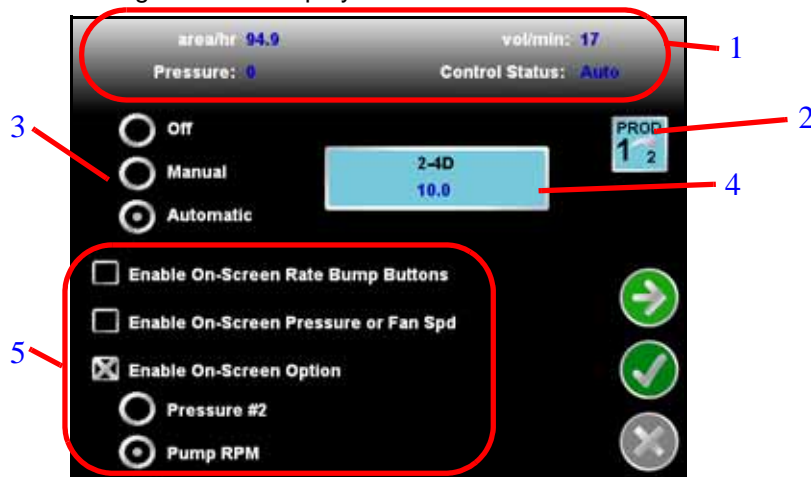

The following information is displayed on this screen:

1. Application information
2. Selected product
3. Control mode
4. Target rate
5. Display options

Touch the green check mark to return to the Guidance screen.

To view and setup additional settings for each product, touch the green arrow to display the Product Control Configuration screen. Refer to the *Product Control* section on page 98 for more information on product control configuration.

**Application Information.** The Application Information displays the following information for the selected product:

- Area per hour
- Pressure or fan speed - if an optional pressure transducer (P/N 422-0000-059) or fan speed sensor (P/N 063-0171-277) has been installed
- Volume per minute
- Control status
- If a PWM or PWM Close valve is setup to control the selected product, the duty cycle of the PWM valve appears in this area.

**Selected Product.** The selected product icon displays the current node or control channel for which the in job product settings are displayed. If multiple products are enabled during the job setup, the selected product icon may also be used to cycle through enabled nodes or control channels to configure other nodes or control channels without returning to the Guidance screen.



Product 1 Only      Product 2 Only

If only one product is enabled for the current job, the selected product icon will display similar to icons shown to the left. The displayed product node or control channel is always selected during the active job.



Cycle to Product 2      Cycle to Product 1

If additional products are enabled for the current job, the selected product allows the operator to cycle through the enabled nodes or control channels. Before modifying any settings displayed on the screen, check that the correct product node or control channel is selected.


**Control Mode.** Use the control mode to set the mode of operation for the product control valve. Select:

- Off to turn off product control for the selected product.
- Manual to control the actual application rate manually.
- Automatic to allow the field computer to control product application rates automatically.

**Note:** *If a CAN Switch Box is installed with the field computer, the field computer will display the control mode set using the Product Control switches on the switch box. Refer to the CAN Switch Box Installation and Operation Guide for additional operation of the CAN Switch Box.*

**Target Rate.** The name and target rate of the selected product are displayed on a button on the In Job Product Configuration screen. Touch this button and use the displayed keypad to adjust the target rate.

**Display Options.** Additional displays may be enabled or disabled with the options at the lower portion of the screen.

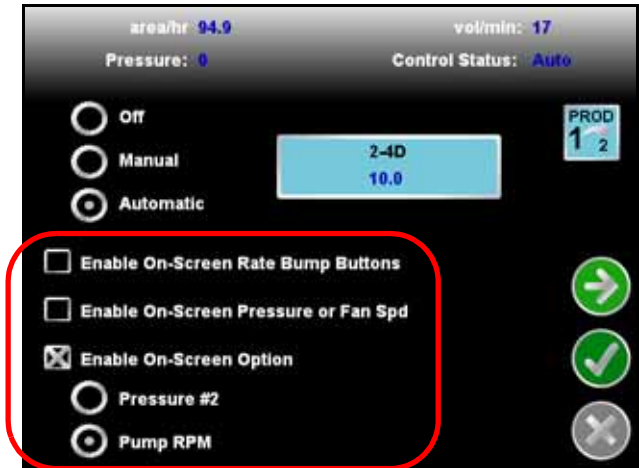

The following screen features are available on this screen:

- On-Screen Rate Bump buttons - While in CAN product control mode, Rate Bump buttons can be used to increase or decrease the application rate of the selected product. Select the 'Enable On-Screen Rate Bump Buttons' option to show these buttons on the Guidance screen.




When the product is in automatic mode, the Rate Bump buttons will increase or decrease the target rates for the selected product. When in Manual mode, the Rate Bump buttons increase or decrease the actual application rate.

**Note:** The 'INC/DEC' switch on the CAN Switch Box offers the same functionality as the on-screen rate bump buttons in both the manual and automatic control modes.

- On-Screen Pressure or Fan Speed display - If an optional pressure transducer or fan speed sensor have been installed and configured, the field computer can display the monitored values on the Guidance screen. Select the 'Enable On-Screen Pressure or Fan Spd' option to display the Pressure for liquid products or the Fan Speed for granular products.




- Enable On-Screen Option - Select the 'Enable On-Screen Option' to select an optional second information display on the Guidance screen.

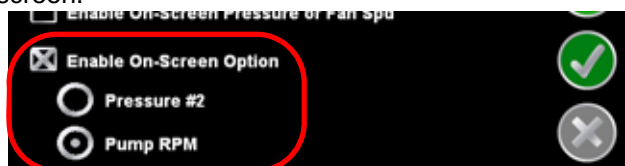

Select the 'Pressure #2' option to display pressure from a second optional transducer. The 'Pump RPM' option may be enabled to display the RPM of the corresponding injection pump.

## Menu

Guidance path tools, field boundary tools and additional guidance views are available by accessing the Menu in the lower right corner of the Guidance screen.

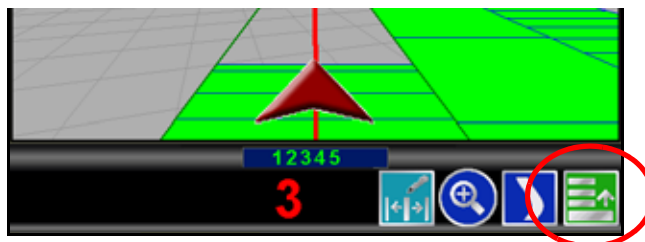

The features and tools available in the Menu will depend upon the selected view, active guidance pattern and features enabled when the Menu was accessed.

Review the following icons and their descriptions for help working within the Menu.

## Home



Touch the Home icon to return to the Home screen. The job in progress will continue in the background. Note that some Tools Menu screens may not be accessible while a job is in progress.


## Guidance Views

The Down Field and Bird's Eye views are the primary screens used while a job is in progress. These views seamlessly integrate guidance and navigation information with product control information. This minimizes the amount of time the operator spends on the console and more time on the other important aspects of the job.

Touching one of the following icons will switch the guidance view to the indicated perspective.




The Down Field view is the initial view displayed when a job is started. This is a simulated perspective as seen from the cab of the vehicle.

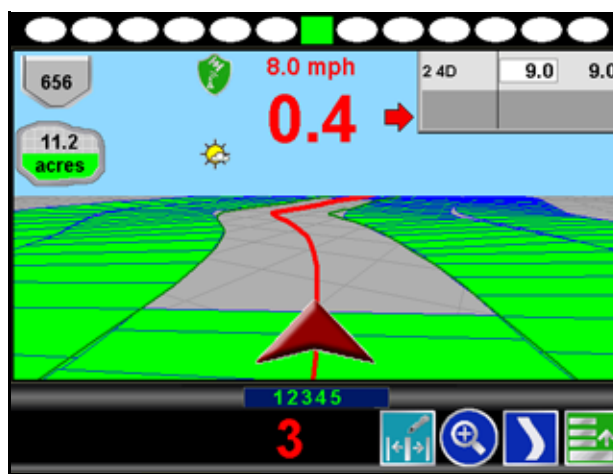



Switch to the Bird's Eye view to change to a view from above. This view will display all of the same guidance features and tools as the Down Field view.

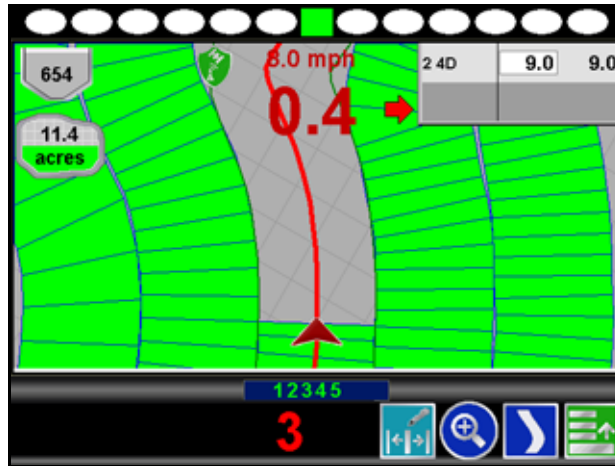

## A-B Path Tools

The following tools and features may be found in the Menu when the Straight Line, Fixed Contour or Pivot guidance patterns are active.

**Note:** *The following icons may not appear in the Menu at the same time. Tools may only be available before or after a guidance line has been set.*

### Loading an A-B Line



If an A-B Line has been saved on the field computer, touch the Load A-B Line icon to load the saved line into the current job. This icon will not appear if an A-B Line has already been set. Reset the line to access the Load A-B Line tool.

**Note:** *The A-B Line must be stored on the field computer internal memory to be able to access and load the guidance path. Be sure to transfer all necessary files to the field computer before beginning a job.*

*Names or descriptions of A-B Lines stored on the field computer cannot begin with a space.*

### Setting A-B Points

To create a New A-B Line, the operator must set A and B points. The following icons and tools may be used to set a New A-B Line.



Touching the Set A icon will place the first, or A, point of the path at the vehicle's current location. Regardless of where the vehicle moves from this point, the field computer will use the selected pattern to connect this point with the next set point. After the Set A icon is selected, the Set B icon will appear.



Touch the Set B icon to place the second, or B, point of the guidance path. Once the B point has been set, the field computer will use the selected Pattern to create the Guidance Path displayed on the Guidance screen.

## Set B by Heading

The Set B by Heading feature is only available with the Straight Line Guidance Pattern. This feature allows the operator to set an A-B Line before completing the first swath.



Use the Set B by Heading feature to create a guidance path along a heading. Touch this icon and use the displayed keypad to enter a heading between 0° and 359° (with 0° being due North).

**Note:** *If Set B by Heading is selected before an A point has been set, the field computer will place the A point at the vehicle location when Set B by Heading was selected.*

## A-B Path Configuration

The following tools are available in the Menu when a compatible A-B Line is displayed on the Guidance screen.



Select the A-B Tools icon to access additional tools for use with the current A-B Line.



Select the Reset A-B Line icon to clear the displayed path. If the displayed path will need to be recalled in the future, be sure to save the current path before selecting reset.



Touch the Save A-B Line icon to save the displayed path. Once saved, an A-B Line can be recalled at any time or loaded into other jobs. In addition, saved paths can be transferred from the field computer via the File Maintenance feature. See Chapter 8, *Software Updates and File Maintenance* for details on the File Maintenance feature and transferring saved paths.

**Note:** *Names or descriptions of saved A-B Lines cannot begin with a space.*



Use the Re-calibrate A-B Line tool to re-calibrate the displayed path to the machine's current position. Due to DGPS drift over time, this feature allows the operator to re-calibrate the A-B Line to a known position in a field.

## Nudge Feature

The Nudge Feature allows the operator to fine tune the displayed path for actual field conditions. For example, if the displayed path guides the vehicle too close to crop rows, nudge the line to the left or right to adjust the path and guide the vehicle away from rows.

The Nudge Feature works especially well with the Raven SmarTrax or SmartSteer assisted steering systems. Contact a local Raven dealer for more information about these systems.



During an active job, touch the Edit Nudge icon at the bottom of the Guidance screen to display the In Job Nudge Settings screen. This screen allows the operator to enable the on-screen nudge controls, adjust the nudge values and select the active nudge applied when the nudge icons are selected. See the *Nudge Feature* section on page 68 for more information on setting up and using the Nudge Feature.



## On-Screen Nudge Enabled

The following icons will be displayed on the Guidance screen if the on-screen nudge controls option is set to Enabled.



Touch the Nudge Right icon to move the displayed guidance path to the right. The distance which the path will be nudged is determined by the user defined value for the Active Nudge.



Touch the Nudge Left icon to move the displayed guidance path to the left. The distance which the path will be nudged is determined by the user defined value for the Active Nudge.

## A-B Tools Menu Nudge

The following nudge icons appear in the Menu on the Guidance screen. Touch Menu then the A-B Tools icon to access the following nudge tools.



Touch the Nudge Right icon to move the guidance path to the right in 1 inch [2 cm] increments.




Touch the Nudge Left icon to move the guidance path to the left in 1 inch [2 cm] increments.

## Field Review Mode



Unlike the guidance views, the field review mode allows the operator to pan and zoom the display to any area of the field.

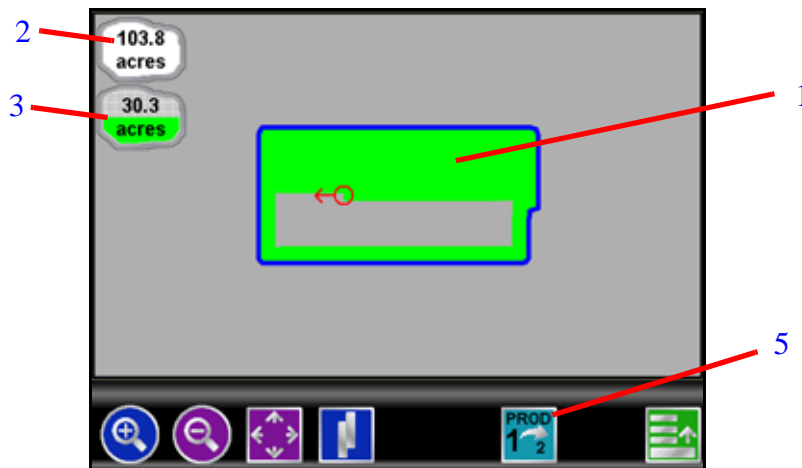

The field review mode displays the following information:

1. Coverage map
2. Area within a completed field boundary
3. Coverage area tally
4. Selected product



## Field Review Mode Tools

In field review mode, the following icons appear along the bottom of the Guidance screen:

- Pan lock
- Show overlaps
- Switch product

### Pan Lock

The pan lock feature locks the current view in field review mode.



When the pan lock is disabled, the display will automatically scroll to the vehicle indicator as the indicator moves out of the current view. Disable the pan lock to always display the vehicle indicator while in field review mode.



When the pan lock is enabled, the display is locked to the current view regardless of the vehicle indicator position. The operator can manually pan and zoom with the pan lock enabled to view specific portions of a field while in field review mode.

To pan the display manually, touch the Field Review screen. The point touched will become the center of the field review display.

### Show Overlaps

In addition to coverage, the field review mode can display application overlaps. The show overlaps feature displays areas where active sections entered a previously applied area and allows the operator to quickly review skips and overlaps on the same screen.



With the show overlaps feature disabled, the field review mode displays the covered areas (including overlaps) in a solid green color. Touch this icon to toggle the show overlaps feature.



When the show overlaps feature is enabled, application overlaps are displayed in red. Overlaps appear where application (i.e. active boom sections) cover previously applied areas. Note that the area covered will not display as an overlap unless product application has overlapped.

## Select Product

The field review mode displays coverage information based upon the selected product. If only one product has been enabled, the product is always selected and the Select Product icon will not appear on the Field Review screen.

If additional products are enabled for the current job, touch the Select Product icon to cycle through the enabled products.

### ***For Example:***



Product 1 is currently selected. Touch this icon to cycle the Field Review screen to Product 2.



Product 2 is currently selected. Touch this icon to cycle the Field Review screen back to Product 1.

## Toggle Maps on the Guidance Screen

During a job with an active prescription or spray zone map, the field computer will display either map on the Guidance and Field Review screens. If both a prescription map and a spray zone map will be used, the operator may toggle which map to display on the guidance and field review screens by selecting the toggle maps icon.

To toggle the displayed map, touch:



The view spray zone map icon to view the loaded spray zone map.




The view prescription map icon to display the loaded prescription map on all guidance displays.

## Field Boundaries

A field boundary and spray zone map can be created for each job on the Envizio Pro or Envizio Pro II field computer.

### Field Boundary

A field boundary provides a visual reference of the outline of the current field on the display.

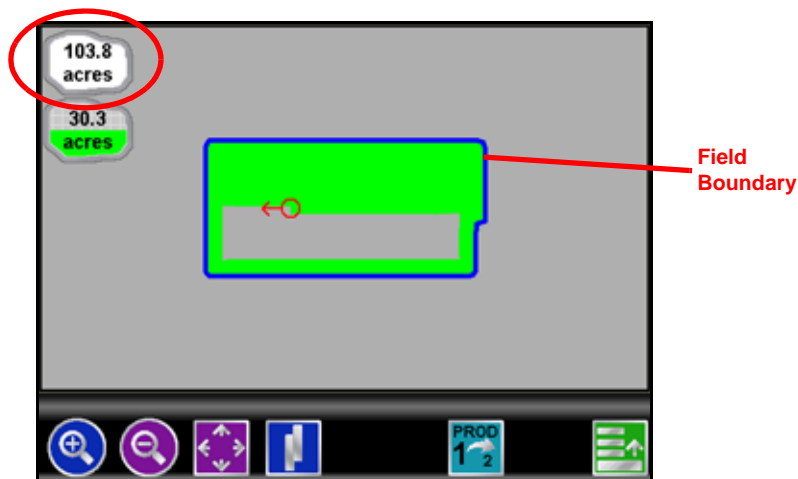

Once a field boundary has been completed, the Envizio Pro or Envizio Pro II can calculate and display the area within the field boundary in acres (English) or hectares (Metric) in field review mode. Only one field boundary may be recorded per job.

If the optional AccuBoom, automatic section control, system is enabled, a field boundary will also create a basic spray zone map of the current field. Refer to Chapter 9, *Using AccuBoom™*, for more information on field boundaries with the AccuBoom system or contact a local Raven dealer for more information about the Raven AccuBoom system.

### Spray Zone Maps

If the optional AccuBoom, automatic section control, system is enabled, a map of spray and/or no-spray zones can be created and saved with the job. Refer to Chapter 9, *Using AccuBoom™*, for more information on field boundaries with the AccuBoom system or contact a local Raven dealer for more information about the Raven AccuBoom system.

## Field Boundary Tools

The following Menu tools and features are available while creating a field boundary.

**Note:** *Spray/no-spray zones and maps are only available if the Raven AccuBoom, automatic boom section control, system is enabled. Refer to Chapter 9, Using AccuBoom™, for more information using the AccuBoom feature or contact a local Raven dealer for more information about the Raven AccuBoom system.*

### Loading a Field Boundary




A previously recorded boundary can be loaded into the current job file by selecting the Load Field Boundary icon in the Menu. A list of job files stored on the field computer is displayed. Select the job name to load the boundary recorded during that job into the current job.

### Recording a New Field Boundary




Touch the Record Field Boundary icon to begin recording a new field boundary. While a field boundary is being recorded, the Pause and End Field Boundary icons (see the following icon descriptions) are displayed on the Guidance screen.

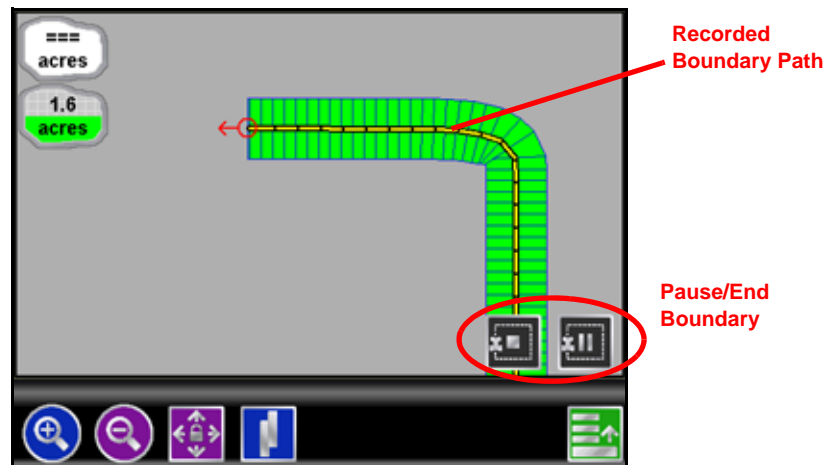

## Pause, Resume and End Boundaries

The following icons will appear on the Guidance screen while a field boundary is being recorded.

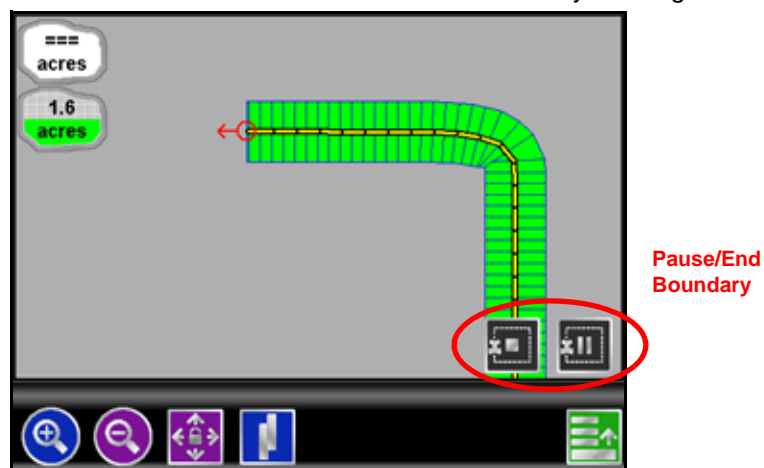

Touch the Pause Boundary icon to pause recording of the field boundary. Use this feature when the vehicle's path will not reflect the boundary such as when re-filling tanks, etc. To resume recording, touch the Resume icon.



While paused, the Resume Boundary icon replaces the Pause and End Boundary icons on the Guidance screen. Touch this icon to resume recording of the current boundary.



To finish recording a boundary, touch the End Field Boundary icon. Note that the field computer draws a straight line from the boundary starting point to the vehicle's current location when closing a boundary.

## Boundary Tools

Once a field boundary has been completed, the following tools will be available through the Menu on the Guidance screen.



Touch the Boundary Tools icon to display additional boundary tools available for the current job.



Touch the Delete Boundary icon to reset the current field boundary. A field boundary must be present in the current job or this icon will not appear in the Menu.

## AccuBoom™ Tools

Additional tools and features may be available in the Menu if the optional AccuBoom system is enabled for the current job. Refer to Chapter 9, *Using AccuBoom™*, for more information using the AccuBoom feature or contact a local Raven dealer for more information about the Raven AccuBoom system.



## *Prescription Maps and Variable Rates*

With the optional VRA feature enabled, the Envizio Pro or Envizio Pro II is capable of using a prescription map to variable rate product application for a single product.

Envizio Pro or Envizio Pro II field computer uses the shapefile format for prescription maps used to provide variable rate product control. If the variable rate feature is activated, a prescription map, created using GIS (Geographic Information Systems) software capable of creating shapefiles, may be transferred to the field computer. These shapefiles must be in a polygon shape format that complies with the ESRI (Environmental Systems Research Institute) shapefile specifications and must also be in the WGS (World Geodetic System) 84 datum.

Shapefiles for prescription maps must be saved to the rxMaps folder to allow the field computer to locate and save the required .shp, .shx and .dbf files to internal memory. Each of these files should be saved to the rxMaps folder on the USB drive used to upload files to the field computer. Refer to the *File Structure* section on page 143 for more information.

To ensure peak performance of the field computer during variable rate applications, create maps with the minimum number of zones. Maps with too many zones may yield undesired results or limit performance of the field computer. To help limit the number of zones within a map, use the equipment, or Guidance, width as a guide. The smallest zones on the map should be no smaller than the width of the equipment applying the product. For example, if the boom on a sprayer is 90 feet wide for each swath, zones within the prescription map should not be less than 90 feet square.

If the prescription map contains zero rate zones, the system must have either a PWM or Fast valve controlling product. The valve type and valve cal programmed on the field computer must be set to PWM Close or Fast Close mode, depending upon which valve is installed in the system. See the *Prescription (Rx) Settings* section on page 108 for additional prescription map set up information.

**Note:** *If the optional AccuBoom system is enabled, AccuBoom will turn off sections valves in zero rate zones.*

### Loading Rx Maps

Prescription maps are loaded onto the field computer using the File Maintenance features described in the *File Maintenance* section on page 128.

Prescription maps must have one .shp, .shx and .dbf file for each map. If any of these files are missing from the rxMaps folder, the field computer will not be able to load the prescription map.

**Note:** *Names of prescription map files loaded on the field computer cannot begin with a space.*


## Applying Rx Maps

A prescription map may be applied to either product during the Start Job sequence. With the variable rate feature enabled, the Start Job - Verify Settings screen displays the name of the prescription map along with the product to which the prescription map will be applied.



### To Apply a Prescription Map


1. Touch the Rx symbol in the corresponding Product button.

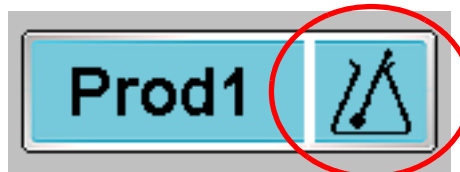

For example, touch the Rx symbol in the Product 1 button to apply a prescription map to the product controlled by the first product node.

**Note:** To remove a prescription map, touch the 'Prod1' area of the button to display the Product Setup screen. Touch the Rate button and enter a value.

2. A list of available prescription maps is displayed on the Start Job - Select Rx Map screen.

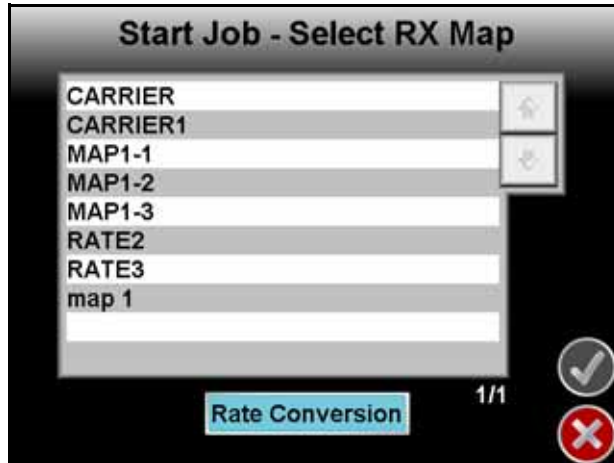


Select the name of the prescription map to apply to the selected product and then touch the accept icon to apply the prescription map.

**Note:** To modify the rates within the selected prescription map, select the Rate Conversion button. Use the on-screen keypad to enter the multiplier of the prescription map for the current job.

3. Verify other job settings before beginning the job. Refer to the *Starting a Job* section on page 57 for more information.

## Using Prescription Maps

The field computer will display the prescription map used during product application on the guidance screens.

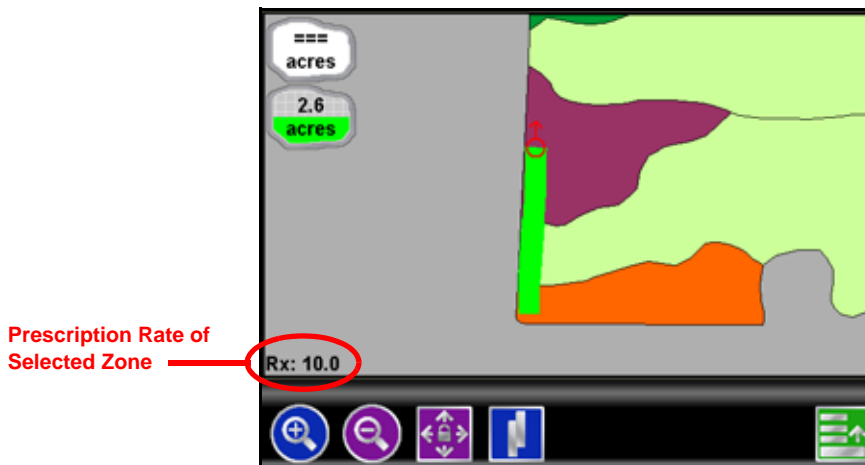


To display the prescription rate for any zone displayed in the prescription map while in the field review mode, touch the desired zone on the screen. The display will center the location touched on the screen and display the prescription rate in the lower, left corner.



## System Alarms

Important warning and alert information is immediately displayed on the screen in the Alarms area.

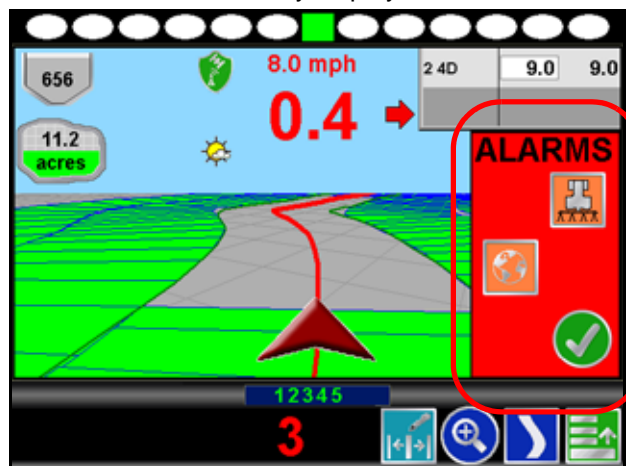

The Alarms area displays icons representing the portion of the system which requires the operator's attention. In addition to visual alarms, the operator may wish to enable the audible alarms feature of the Envizio Pro and Envizio Pro II field computers.

### Alarms Area

Depending upon the alert or warning condition, the field computer may display one or more of the following icons:



**Product Control**



**AutoBoom**



**Show All**


Touch any of the displayed icons to display information regarding the corresponding alarm.

- The **Product Control Alarm** icon is displayed if an alarm condition such as a low bin or tank, or when product control cannot reach the target rate.
- The **AutoBoom Alarm** icon is displayed if an alarm condition such as sensors too low or high, the pressure is higher than the set point, or if a sensor has gone off line. Refer to Chapter 10, *Using AutoBoom™*, for more information about the optional Glide Series AutoBoom system and troubleshooting AutoBoom alarms.
- Touch the **Show All Alarms** icon to view all current alarm conditions.

## Hiding the Alarms Area

Once the operator has reviewed any alert information, the Alarms area can be hidden to resume operation.

1. To hide the Alarms area, touch the green check mark icon.

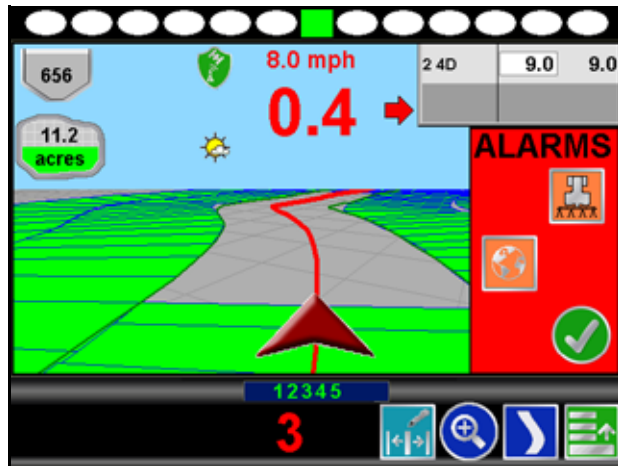

2. If the alarm condition still exists, an Alarm icon appears on the screen until the alarm condition has been cleared.



Touch this icon to re-display the Alarms area.

3. For help clearing alarm conditions, refer to Chapter 11, *Troubleshooting*, for product control troubleshooting information. Refer to the CAN AutoBoom Calibration and Operation Manual for information about using and troubleshooting the optional Glide Series AutoBoom system.

## Audible Alarms

Audible alarms are enabled by default. To disable the notification tone or change available alarm settings, see the *Alarm Settings* section on page 112 to setup the Audible Alarms.

## CHAPTER

# 7

## *Tools Menu*

### *Accessing and Navigating the Tools Menu*

After the initial setup wizards are complete, all settings and configurations are accessible by selecting the Tools icon on the Home screen.




The Tools menu contains the following submenus:

- Wizard
- System
- GPS
- Computer
- Vehicle

**Note:** *Verify that the field computer is setup correctly for the job, vehicle and application prior to starting an actual job application. See the Product Control section on page 98 to enter a test speed and check settings while the vehicle remains stationary.*

The Quick Access Bar appears along the top of the Main Tools menu screen.

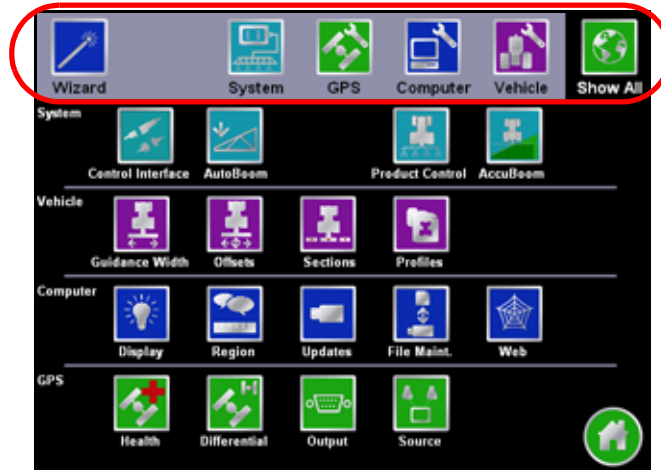

Touch any of the icons to display a detailed view of the selected submenu.

### Wizard Menu



The Setup Wizard Menu is available in the Tools menu. Review the *Setup Wizards* section on page 44 for more details on using the setup wizards.

### System Menu



Access the System menu to setup the product control system, or configure the optional AccuBoom or AutoBoom systems.

### GPS Menu



Use the GPS menu to adjust the internal GPS receiver or to enable the field computer to receive DGPS from an external receiver. The GPS menu also contains screens to review the status of GPS reception, set message outputs (for the internal DGPS receiver only) or select the PRN.

### Computer Menu



The Computer menu sets display and feature settings of the field computer. Access the Computer menu to change the display brightness, language and units, as well as activate features or update the Envizio Pro or Envizio Pro II software.

If Lightbar Interface option is enabled, the Computer menu will also contain options for adjusting the brightness of the external lightbar. See the *Serial Port Configuration* section on page 97, for more information on setting the lightbar interface.

## Vehicle Menu



Access the Vehicle menu to setup or modify vehicle profiles for each machine or implement with which the field computer will be used. Profiles allow the operator to setup GPS antenna heights and offsets as well as the swath width and section setup for each implement once and quickly reload a vehicle's profile when transferring the Envizio Pro or Envizio Pro II between vehicles.

## Show All



Select the Show All icon to show an overview of the Tools menu. The Show All screen is displayed each time the Tools menu is accessed.

## Navigation

The following icons will be used to navigate within the menu screens and to edit and save settings:



Touch the Home icon to return to the Home screen.



Touch the Accept icon to confirm any changes to a screen. Touching the Accept icon will save those settings and proceed to the next screen.



Touch the Cancel icon to exit the current screen without saving any changes made on a screen. If the Cancel icon is displayed in grey, the cancel feature is currently unavailable.



Like the Accept icon, the Next icon accepts changes and proceeds to the next screen in a setup procedure. Touch this icon where it appears to access more settings or to continue a setup procedure. The last screen in a setup procedure should display the Accept icon.



Touch the Previous icon to return to the last screen displayed during a setup procedure or wizard.




The Up icon, where it appears, increases displayed values in preset increments. Touch this icon to increase a value until the desired value is displayed.



The Down icon, where it appears, decreases displayed values in preset increments. Touch this icon to decrease a value until the desired value is displayed.

## On-Screen Keyboard

Data entry on the Envizio Pro and Envizio Pro II is quick and easy using the full, on-screen keyboard.

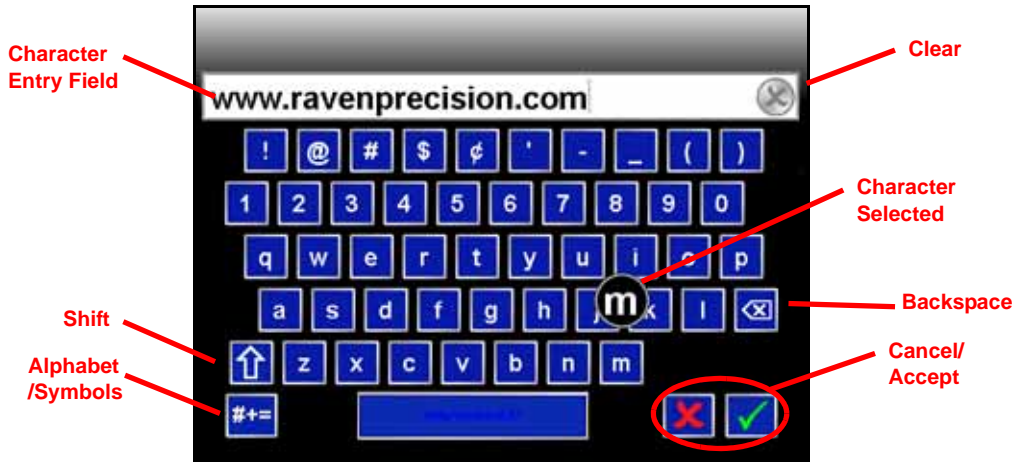



This keyboard is displayed when entering or modifying profile, product or job names or while browsing the web with a wireless modem. The following features may be used with the keyboard:






### Character Entry

When the keyboard is touched, the character selected will be displayed above the key. If the character displayed is not the character intended for entry, continue touching the screen while dragging to the correct character to enter. The character will not be entered in the character entry field until the touch is released.




### Shift/Caps Lock

The keyboard displays the character set that will be entered in the character field when any of the keys are selected. To shift the character set to lowercase, touch the  key.



**Note:** The keyboard automatically capitalizes the first character entered into the character entry field. To cancel this feature, touch the  key before entering characters using the keyboard.

Touch the  key to enter the next character using the uppercase character set. Double tapping the  or  keys will enable caps lock and display the  key. Touch the  key again to disable caps lock.


### Symbols


When browsing the web using the field computer, the  key will be displayed on the keyboard. Touch the  key to display the symbols keyboard. Touch the  key to return to the alphabetic keyboard.

### Backspace and Clear

Touch the  key to delete the previously entered character or the  icon above the keyboard to clear all characters within the character entry field.


### Accept/Cancel

Touch the  key on the keyboard to accept the text or characters displayed in the character entry field. The displayed text or characters will be entered in the selected text field on the previous screen.

Touch the  key to return to the previous screen without entering the keyed text or characters.

## System Menu

The System menu contains the options for setting up how the Envizio Pro or Envizio Pro II will interface with the machine product control hardware and product control options. The System menu also contains setup screens for the optional AccuBoom, AutoBoom systems. Touch the System icon in the quick Access Bar to display a detailed System menu screen.

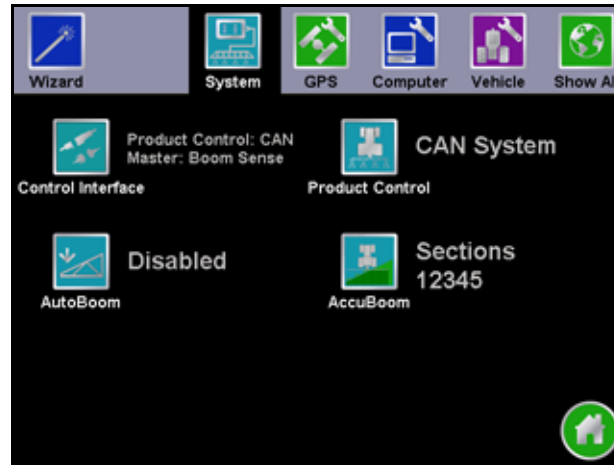

## Control Interface


The multi-functional capabilities of the Envizio Pro and Envizio Pro II means that the field computer is capable of interfacing with several different product application systems. To function properly in any one of the possible systems, the field computer must be set up to receive application information from the correct source.

The following sections describe the options displayed on the Control Interface screen and will help with selecting the appropriate product control, boom master and AccuBoom options for the system.



## Product Control Options

The following settings will configure the field computer to monitor or control product application, coverage or harvest information:

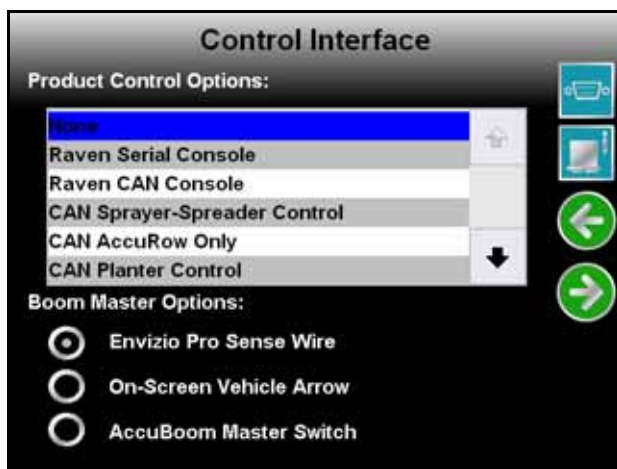

**Note:** If the Envizio Pro or Envizio Pro II will be connected to a CANbus with another CAN controller (such as a Raven SCS 4400/4600) with AccuBoom, be sure the control interface option is set to 'None.' This option allows the field computer to monitor CANbus nodes without trying to control product nodes. In this configuration, the boom master options will not be displayed.

### None

Select 'None' if the Envizio Pro or Envizio Pro II will not be controlling product application or interfacing with a Raven console through a serial connection.

### Raven Serial Console

This option is used when the field computer is connected to another Raven product control console, such as a Raven SCS 440/460, connected to the 'Console' port on the main interface cable (P/N 115-0171-746). In this configuration, the field computer will monitor and display application information sent from the Raven console.

The Envizio Pro or Envizio Pro II receives application information such as rate and boom status to create an as-applied or coverage map. This information is also used by the field computer when providing guidance. The field computer can still be connected to an optional CAN AccuBoom node for automatic section control. In this configuration, the field computer and AccuBoom will automatically control boom sections according to saved field boundaries. The optional AutoBoom system can also be controlled by the field computer in this mode to provide automatic boom height control.


### Raven CAN Console

This option is used when another control console will be used to control product nodes on the CANbus. In this configuration, the field computer will monitor and display application information sent over the CANbus.



## CAN Sprayer/Spreader Control

Select 'CAN Sprayer/Spreader Control' if the Envizio Pro or Envizio Pro II will be used to control up to four products via a CANbus system.

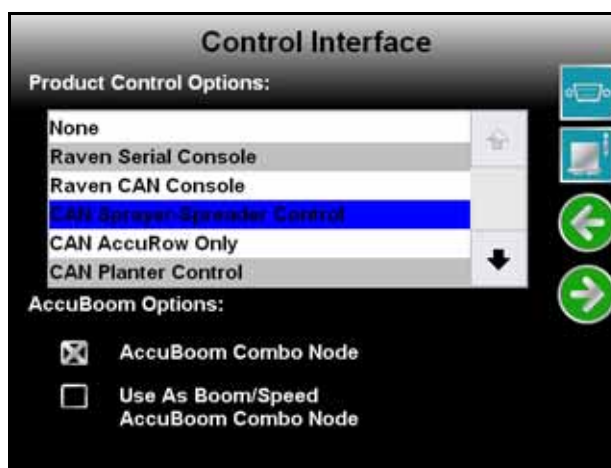

**Note:** *If more than one product node has been installed with the field computer, be sure to check that all product control nodes are addressed correctly before proceeding. Touch the CAN Information icon (shown right) and review the CAN Diagnostics section on page 30 to re-address the product nodes.*



*The Boom Master Options list is replaced by AccuBoom Options if 'CAN Product Control' is selected. See the CAN Options section on page 96 for details.*

## CAN AccuRow Only

Select 'CAN AccuRow Only' if the Envizio Pro or Envizio Pro II will be used to control an optional AccuRow system. Refer to the *AccuRow Calibration & Operation Manual* for additional set up and operation information.

## CAN Planter Control

Select 'CAN Planter Control' if the Envizio Pro or Envizio Pro II will be used to control an optional OmniRow system. Refer to the *OmniRow Calibration & Operation Manual* for additional set up and operation information.

## Bogballe Calibrator Zurf

The Envizio Pro or Envizio Pro II field computers may be used in conjunction with the Bogballe Calibrator Zurf console for guidance and monitoring of product applications using Bogballe weight systems. Refer to Appendix C, *Bogballe Calibrator Zurf Interface*, for additional information.

## Yield Monitor

Select 'Yield Monitor' if the Envizio Pro or Envizio Pro II will be used to control an optional SmartYield system. Refer to the *SmartYield Calibration & Operation Manual* for additional set up and operation information.

## Boom Master Options

The boom master options allow the operator to setup the preferred method to toggle recording of the coverage map. Depending upon the product control system, the following options are available to configure the input of the master switch used with the field computer:

### None/Raven Serial Console

The following options are available if the product control options is set to either 'None' or 'Raven Serial Console':

**Note:** *If the Envizio Pro or Envizio Pro II is connected to a CANbus with another CAN controller (such as a Raven SCS 4400/4600) with AccuBoom, be sure the control interface option is set to 'None.' This option allows the field computer to monitor CANbus nodes without trying to control product nodes. In this configuration, the boom master options will not be displayed.*

**Envizio Pro Boom Sense Wire.** Select this option if the boom sense wire has been connected as instructed in the *Boom Sense Wire (Interface Cable Only)* section on page 22.

**On-Screen Vehicle Arrow.** This option allows the operator to touch the Vehicle Arrow (shown to the right) displayed on the Guidance screen to toggle the coverage history on or off.



**AccuBoom™ Master Switch.** If the orange/white wire on the optional AccuBoom node harness has been connected, select the 'AccuBoom master switch' option to create the coverage map based upon the section information reported by the AccuBoom node.

### CAN Options

If CAN Sprayer/Spreader Control is selected as the product control option, the list of available boom master options is replaced by the following CAN AccuBoom options.

- Do not select the 'AccuBoom Combo Node' option if an optional AccuBoom system has not been installed on the CANbus.
- AccuBoom Combo Node - If an AccuBoom system is installed and an AccuBoom combo node is present on the CANbus, select this option. The following option will appear in the AccuBoom Options list.
- Use as Boom/Speed AccuBoom Combo Node - This option will only appear if the 'AccuBoom Combo Node' option is selected. Select this option to use the AccuBoom combo node as the boom/speed node. If this option is selected, a separate boom/speed node is not required for the CANbus system.

If 'CAN AccuRow Only' or 'CAN Planter Control' is selected, the boom master options displays the available options for CAN Planter Control.


- Reverse Sensing - Select this option to configure the field computer to detect when the vehicle direction is reversed.
- On-Screen Vehicle Arrow - This option allows the operator to touch the Vehicle Arrow (shown to the right) displayed on the Guidance screen to toggle the coverage history on or off.
- AccuRow Master Switch - If an optional AccuRow system has been installed with the field computer, select the AccuRow master switch option to create the coverage map based upon the section information reported by the AccuRow node.




## Serial Port Configuration

The Envizio Pro and Envizio Pro II can control an optional external lightbar connected to the port labeled 'COM3/Lightbar' on the auxiliary interface cable (P/N 115-0171-745) or chassis interface cable (P/N 115-0171-926). To enable this feature:

1. Select Control Interface from the System menu.
2. On the Control Interface screen, touch the Serial Port icon in the upper right corner.

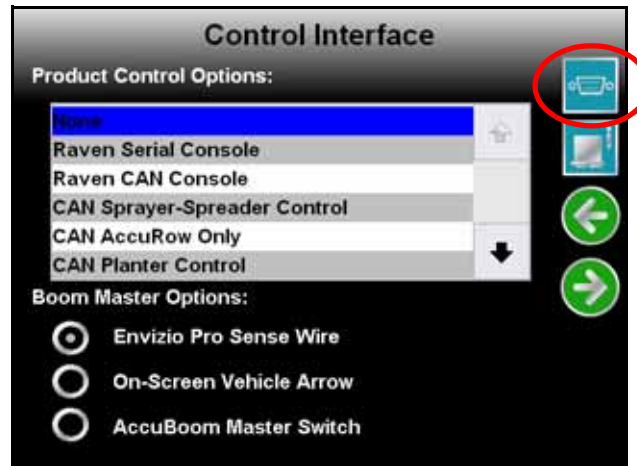

The following screen displays.

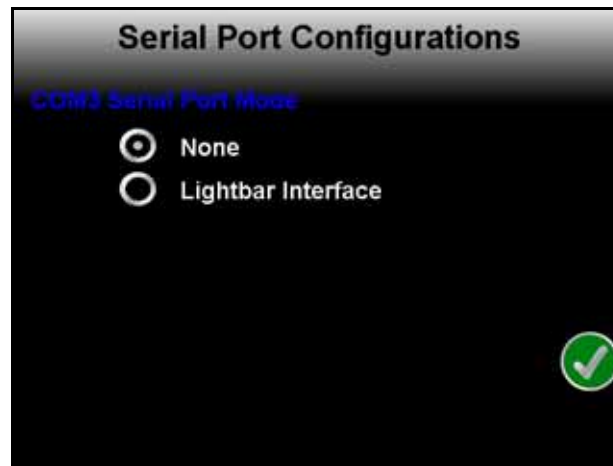


3. Select the 'Lightbar Interface' option to allow the field computer to control the external lightbar.

**Note:** Refer to the Display section on page 124 to adjust the brightness of the external lightbar via the field computer interface.

4. Touch the Accept icon and restart the field computer to complete the lightbar setup.


## CAN Diagnostics

The CAN Diagnostics screen displays the software version, software revision and program number for each node detected on the CANbus.

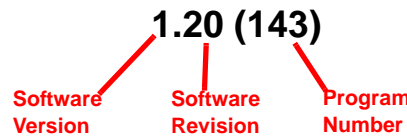

To view node version information and the CAN Diagnostics screen:

1. Select Control Interface from the System menu.
2. On the Control Interface screen, touch the CAN Information icon in the upper right corner.

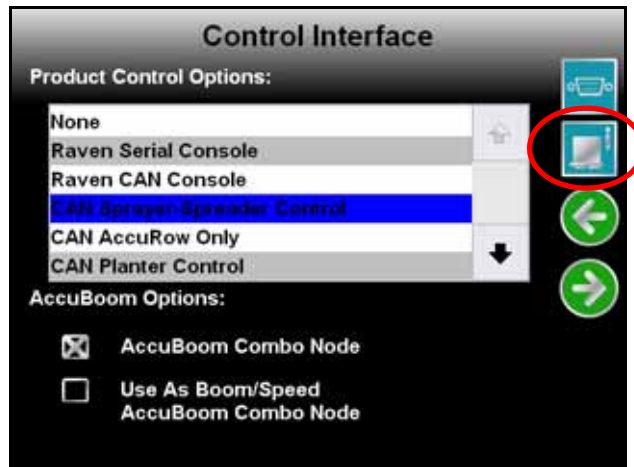

3. The CAN Diagnostics screen will display the node version information for each node currently detected on the CANbus. Nodes not detected will display as 'Not Present.' Refer to Chapter 4, *CAN Networking and Diagnostics*, for more information on the CAN Diagnostics screen.

## Product Control

The Product Control menu displays the current settings and calibration values for the selected product. If additional product control nodes have been detected by the control system, touch the Select Product icon in the upper, right corner of the screen to cycle through detected product nodes or control channels.



The Product Control Configuration screen contains several of the calibration numbers which the field computer requires to provide product control.

Access the product control configuration to adjust the following settings for the product control system:

- Application type
- Speed sensor type and cal
- Valve type and cal
- Product control node cal values
- Volume and area settings
- Feature settings
- Alarm settings
- Section assignments


## Application Type

The Application button displays the current application type. Touch the application area to select Liquid, Gran1 (single bed, single encoder), Gran2 (dual bed, single encoder) or Gran3 (dual bed, dual encoder) for the selected product.

Depending on the product node, an option for spinner or injection control may also be available. If the control system detects an injection node, the application types will be limited to liquid injection or granular injection.

## Speed

The Speed button displays the current speed calibration value. Touch the Speed button to display the Speed Cal screen.

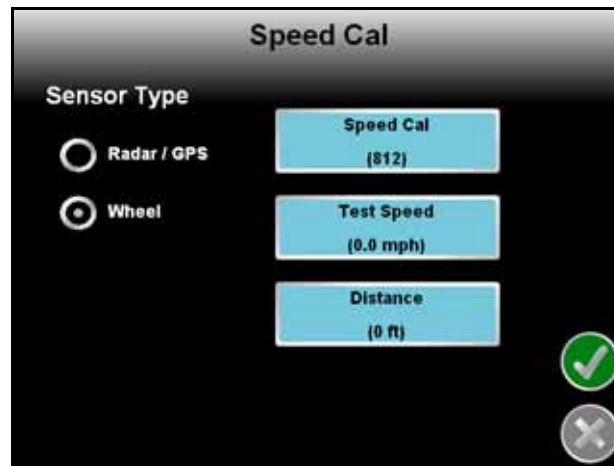

### Sensor Type

Select the type of speed sensor to be used with the Envizio Pro or Envizio Pro II control system.

## Speed Cal

The current speed cal is displayed on the Speed Cal button. Touch the Speed Cal button and use the on-screen keypad to enter a speed cal value.

Raven Industries recommends the following speed calibration values for initial system setup.

Sensor Type Setting	Used with	English	Metric
Radar/GPS	External Raven GPS Receiver	785	199
	Internal DGPS Receiver	812	206
	GPS Speed over CANbus	1000	254
	Raven Radar	598	152
Wheel	Wheel Magnets	1000	254
	Speedometer Drive Speed Sensor	612	155

These values are good starting points and generally yield adequate results, however, the speed cal should be refined for the specific vehicle and speed sense system. See Appendix A, *Calculating the Calibration Values*, for instructions on refining the speed cal value.

**Note:** *The GPS speed over CANbus feature is only available with specific Raven speed sense nodes.*

## Test Speed

The test speed may be used to simulate speed when testing or troubleshooting the product control system. Enter a value approximately equal to normal application speeds to allow the field computer to control product application functions while the vehicle remains stationary. The test speed is useful for troubleshooting the CAN and product control systems.

**Note:** *A speed cal must be entered to allow the test speed feature to function.*

The test speed area displays the current test speed. Touch this area to enter a test speed.

**Note:** *The test speed will clear if the field computer receives a pulse from the actual speed sensor. To keep the test speed from disengaging, disconnect the speed sensor from the system.*

## Distance



The distance value can be used as an odometer of the distance travelled by a vehicle over a season, or the distance travelled during one application. Touch the Reset Value button to clear the distance value, or allow the field computer to keep a running tally of the total distance travelled.

## Valve

Touch the Valve button to access the Valve Calibration screen.

**Standard/Fast/Fast Close**

**PWM/PWM Close**

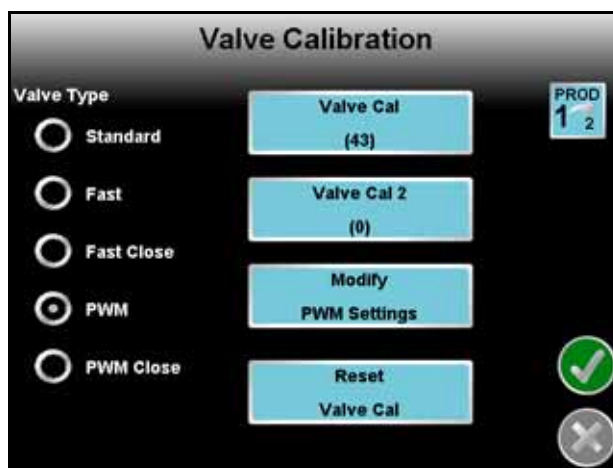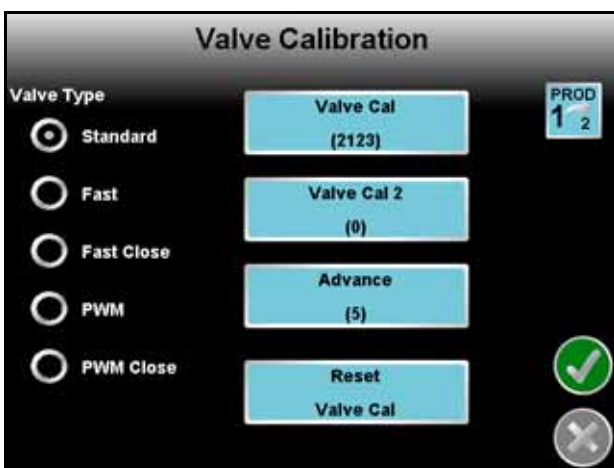

### Valve Type

Select the type of control valve used to control the selected product during a job.

**Note:** If 'PWM' or 'PWM Close' is selected as the valve type, a button labeled 'Modify PWM Settings' will appear on this screen.

### Valve Cal

The valve cal value helps the field computer adjust the valve control response for slight differences between control valves and is required for product control. Raven Industries recommends the following valve calibration values for initial system setup.

Control Valve Type	Valve Cal
Standard (C-SD)	2123
Fast (C-F) or Fast Close (C-FC)	743
PWM (C-P) or PWM Close (C-PC)	43

These values are good starting points and will generally yield adequate results, however, the valve cal should be refined for the individual control valves installed on the specific machine. See Appendix A, *Calculating the Calibration Values*, for instructions on refining the valve cal value.

### Valve Cal 2

This value can fine tune control valve response and help control application rate oscillations when the console is programmed in PWM mode.

When a fast close valve is selected, valve cal 2 is utilized to enable a high resolution rate control for lower application rates. Enter a non-zero value for the time, in milliseconds, which the valve will be fully opened before switching into high resolution control. For example, a value of 200 will give the valve a 200 millisecond "burst" at a full 12V to open the fast valve from the closed position before resuming product rate control. A zero value will disable this feature.

## Valve Advance (Standard, Fast or Fast Close Valve)

This feature allows the operator to set the amount of time (in seconds) which the control valve will remain open after boom sections are toggled off while in automatic rate control mode. A value of 1-9 means an advance of 1-9 seconds respectively. A value of 0 means no advance. This setting may be used in conjunction with the valve delay for low rate applications to build up pressure when the master switch is toggled on. For best results, approach the headlands at consistent speeds while turning boom sections off.


**Note:** *The Advance button is only displayed if a Standard, Fast or Fast Close valve is selected and if the assigned product control node has software version 1.50 or higher.*

## Reset Valve Cal

Touch the Reset Valve Cal button to replace the current valve cal with the recommended value from the table shown above.

## Modify PWM Settings (PWM or PWM Close Valve)

If either 'PWM' or 'PWM Close' is selected as the valve type, a Modify PWM Settings button will display.

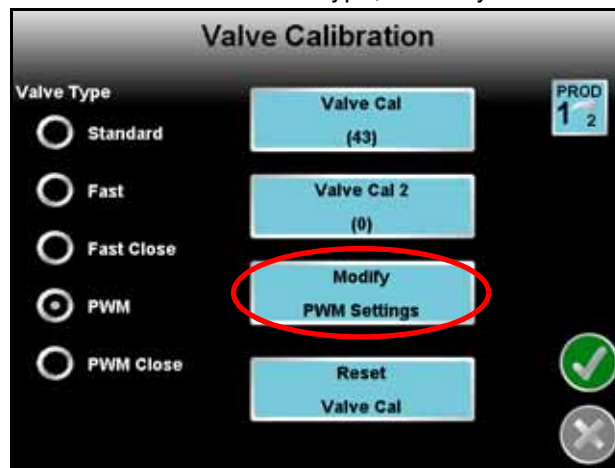

Select one of the following methods to configure the PWM control valve associated with the selected node or control channel.


**Manual Calibration.** The manual calibration mode allows the operator to manually enter the PWM minimum, maximum and preset values to known values using an on-screen keypad.

**Note:** *The PWM valve is not operated in the manual calibration mode. It is recommended to verify that any changes to these settings have the desired affect before controlling product application.*

*Refer to the PWM Calibration Screen section on page 104 for more information on the PWM values configured using the manual calibration mode.*




**Calibration Assistant.** The calibration assistant allows the operator to increase or decrease the PWM output using on-screen controls and set the PWM minimum, maximum, frequency and preset values based upon observed operation.

	<p style="text-align: center;"><b>⚠ WARNING</b></p> <p>The PWM valve output will increase and decrease as the up and down arrows are selected. Keep any bystanders away from areas where product may be expelled and moving components when performing the calibration process.</p>
---	---

To use the calibration assistant mode, toggle the vehicle master switch and at least one section to the on position. To stop PWM output at any time during the calibration process, toggle the vehicle master switch to the off position.

**Note:** Refer to the *PWM Calibration Screen* section on page 104 for more information on the PWM values configured using the manual calibration mode.

**Automatic Calibration.** The automatic calibration mode will allow the field computer to automatically adjust the PWM output and attempt to determine the minimum, maximum and preset values.


	<p style="text-align: center;"><b>⚠ WARNING</b></p> <p>The PWM valve output will increase and decrease during the calibration procedure. Keep away from areas where product may be expelled and moving components and alert anyone around the equipment when performing the calibration process.</p>
--	--

To use the automatic assistant mode, toggle the vehicle master switch and at least one section to the on position. Touch the 'Cancel' button at any time during the calibration to stop PWM output.

The automatic calibration process may take up to two minutes to complete. Maintain sufficient engine RPM and set the remote hydraulic flow to allow for at least 1 GPM [3.8 L/m] flow for each motor on the control system. The field computer will display a prompt when the calibration process is complete. If the system fails to calibrate properly, touch the 'Re-calibrate' to restart the calibration process.

## PWM Calibration Screen

In the manual calibration and calibration assistant modes, the PWM Calibration screen will display with the following options or settings available.

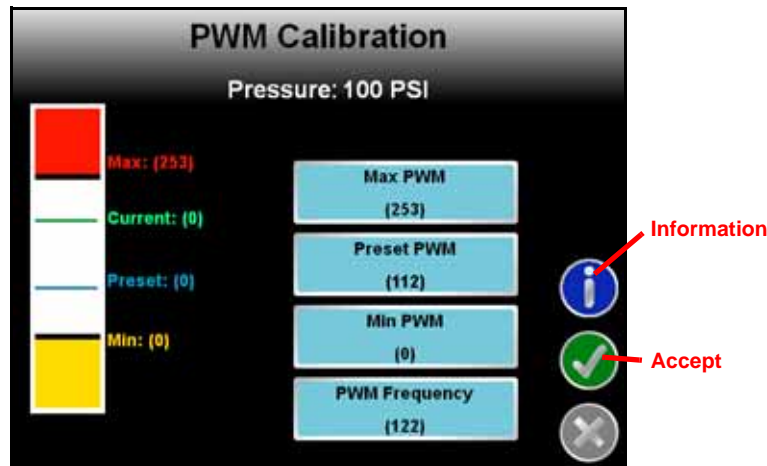

**Information.** Touch the blue Information icon to display a brief explanation of the settings and options available on the PWM Calibration screen.

**Max PWM.** Enter a Max PWM value to set the maximum desired RPM or hydraulic output for a Pulse Width Modulated (PWM) hydraulic control valve. This setting limits how far the PWM valve will open.

With the machine's master switch in the on position, increase this value until one of the following conditions is met:

- The maximum desired pressure is reached in a liquid system
- The maximum desired belt speed is achieved in a granular system

**Preset PWM or Standby Pressure.** When operating with a PWM valve selected, the preset PWM value sets how far the valve will stay open to maintain pressure in the system. When the machine's master switch is off, the PWM pulse width will remain at the existing value or go to the preset PWM value, whichever is lower.

When operating with a PWM close valve selected, the preset PWM setting is the initial target pulse width when the master switch is turned on. If this value is set to zero, the pulse width will return to the last value when the master switch is turned on.

When controlling a liquid product with a PWM valve selected (not PWM close), the standby pressure value sets the pressure which the system will maintain in the product lines when the master or all boom sections are toggled off.

**Note:** *The standby pressure setting is only accessible when controlling products in liquid control modes with a boom pressure transducer detected by the field computer. The node must also be capable of controlling the 'PWM Smart Control' features. Refer to the Feature Settings section on page 110 for details.*

**Min PWM.** Enter a Min PWM value to set the minimum desired RPM or hydraulic output (zero point or shutoff point) for a Pulse Width Modulated (PWM) hydraulic control valve.

With the machine's master switch in the on position, decrease this value until one of the following conditions is met:

- The minimum desired pressure is reached in a liquid system
- The value when the belt stops moving in a granular system

**PWM Frequency.** This value sets the frequency of the pulses that are sent to the PWM valve. The default value is 122 Hz for Raven valves, or a value specified by the valve manufacturer.

## Calibration Settings

The Calibration Settings screen displays calibration values for the selected product and application type.

Liquid Control Mode

Granular Control Mode



Touch the corresponding button to enter or modify a calibration value for the selected product node.

**Note:** For recommended methods of calculating various calibration values, refer to Appendix A, Calculating the Calibration Values.

### Meter Cal or Product Density

The flow meter calibration (meter cal) value can be found on the tag attached to the flow meter.

**Note:** Copy the information from the tag for future reference as tags may fade or be lost during operation.

If operating in a granular application mode, the Product Density button replaces the meter cal value. Touch the Product Density button to enter the measured product density.

### Rate Cal

Enter the target rate for the product controlled by the selected product node. Consult with a dealer to ensure spray nozzles or gate height of the machine is capable of applying at the target application rate for the product being applied. See Appendix A, *Calculating the Calibration Values*, for more information on calculating the rate cal.

**Verifying Flow Rate Limits.** The target rate for an application must be within the range of that specified for the Raven flow meter installed.

Flow Meter Model	Flow Range	Average Meter Cal Value
RFM 5	0.05 - 5 GPM [0.2 - 18.9 lit/min]	5500
RFM 15	0.3 - 15 GPM [1.1 - 56.8 lit/min]	1750
RFM 60P	1 - 60 GPM [3.8 - 210 lit/min]	720
RFM 100	3 - 100 GPM [11.4 - 380 lit/min]	700
RFM 200/ 200 Poly	15 - 200 GPM [56.8 - 760 lit/min]	164
RFM 400	25 - 400 GPM [94.6 - 1515 lit/min]	80

### Valve Delay

Use the valve delay option to include a delay in seconds between turning on the control valve (turning on sections) and when the product control nodes begin to control the flow rate.


**Note:** *A value of zero must be entered when using a close-type valve, such as a Fast Close or PWM Close valve. A zero value must also be entered when programming a standard valve with an injection system.*

### Pump or Fan Cal

The pump or fan cal is used to calibrate the field computer to the specific fan (granular) or pump (liquid) on the machine. Enter the number of pulses sensed per one revolution of the fan or pump.

## Tiered Boom Settings

A tiered boom configuration has two or more booms stacked one directly in front of the other and may or may not have different sets of nozzles capable of applying different rates.

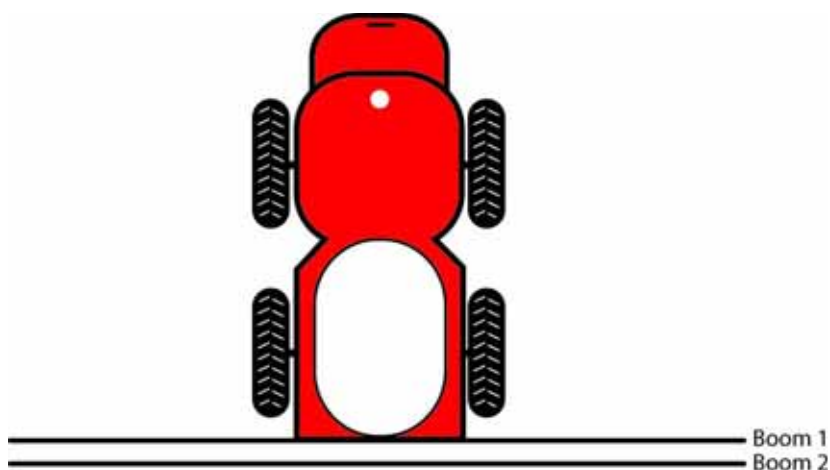

**Note:** *Specialized plumbing, cabling and a relay box are required to utilize a tiered boom configuration. Generally, sprayers are not setup for this feature from the factory.*

Refer to the *Tiered Boom Settings* section on page 181 for more information on calculating the tiered boom settings.

## Spreader Constant (Granular Systems)

The field computer uses the programmed spreader constant to accurately control granular products. To maintain system accuracy, re-calibrate the spreader constant anytime the gate height of the machine is adjusted. Refer to Appendix A, *Calculating the Calibration Values*, for assistance calculating the spreader constant.

## Rate Bump

The rate bump value sets the increment by which the target rate will increase or decrease when using the Rate Bump buttons on the Guidance screen. Each product node or control channel must be programmed with the desired rate bump value. If no value, or a value of zero, is entered the rate bump buttons will have no effect on the selected product application rate on the Guidance screen.


## Pressure 1 and 2 Cal

For each product node connected to the CANbus, the field monitor can monitor and display up to two pressure readings.

Touch the Pressure 1 or Pressure 2 buttons to enter the pressure cal for each pressure transducer. With no pressure in the machine product lines, enter a pressure cal of '0' to calibrate the pressure display.

## Prescription (Rx) Settings

If an optional variable rate application (VRA) key has been activated, the Rx Settings button will be displayed on the Calibration Settings screen.

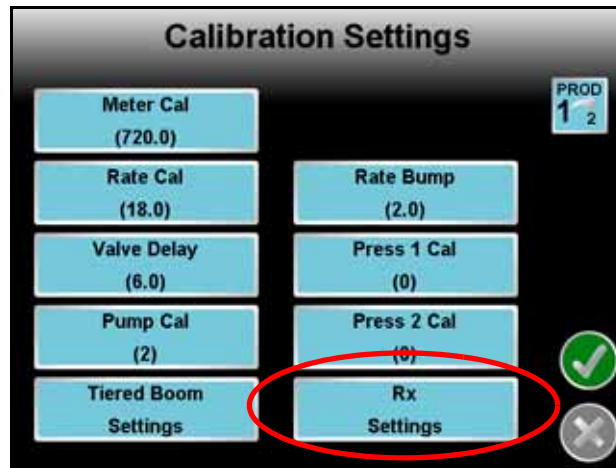

Touch the Rx Settings button to display the Rx Settings screen.




**Zero Rate Shut Off.** Enable the Zero Rate Shut Off option to allow the field computer to close product control valves based on zones with a target rate of zero on the prescription map. Refer to Chapter 8, *Software Updates and File Maintenance*, for more information on transferring prescription maps.

**Rx Look Ahead.** Set the Rx Look Ahead setting to the number of seconds (determined by speed) the field computer is allowed to scan in front of the vehicle's current position. This feature may help to compensate for the time it takes a valve to adjust to a different rate or to fully open or close.

**Rx Default Rate.** Set the Rx Default Rate at the Target rate for areas without Prescription information. The field computer will apply the default rate within any areas of a prescription map without a rate. Product control in Zero Rate zones will remain at zero. The Default Rate only affects areas where prescription rate information has not been entered.

## Volume and Area Settings

The volume/area Settings screen allows the operator to program the tank or bin volume for the machine, the field volume, total volume, field area and total area.

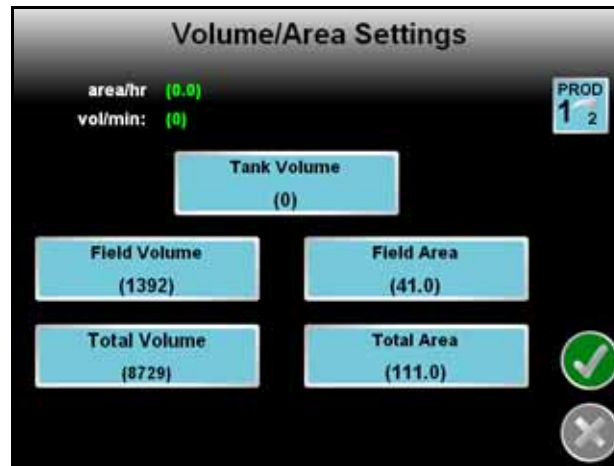

### Tank or Bin Volume

The tank or bin indicator on the Guidance screen displays a tally of product remaining based upon this value. The tank or bin volume is the volume of product in, not the capacity of, the tank or bin. Set this value to the normal volume of product in a full tank or bin. This setting also determines the value of the 'Reset Tank or Bin Volume' button.

### Field Volume and Area


The field volume and field area displays on the Volume/Area screen can be reset independently of the total volume and total area displays. Reset the field volume and field area to keep a record of the volume of product applied to a field and the acres applied in that field.

### Total Volume and Area

The total volume and total area displays on the Volume/Area screen can be reset independently of the field volume and field area displays. For example, reset the total volume and total area to keep records of the total volume of product applied and the total acreage covered.

## Feature Settings

Touch the Feature Settings icon to configure additional features settings on the field computer. The Feature Settings screen may display the following options:

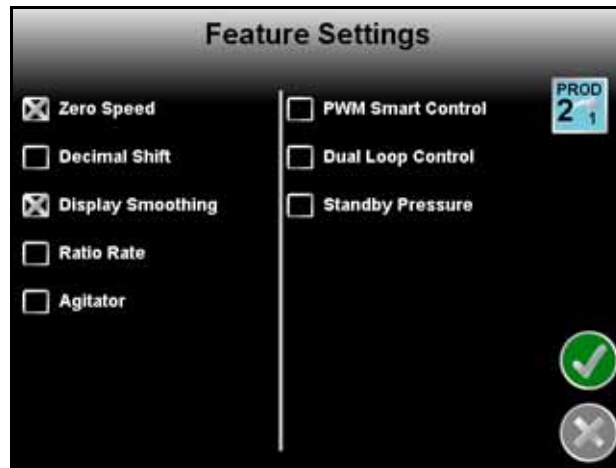

### Zero Speed

The zero speed feature will automatically turn off product application if the vehicle speed drops below 0.7 mph [1.1 km/h] while in automatic mode. To restart the system, cycle the master switch 'Off' then back 'On.' A speed of 0.7 mph [1.1 km/h] must be maintained for more than 10 seconds or the zero speed feature will reactivate.

### Decimal Shift

Use the decimal shift feature to increase the system accuracy for low application rates. In the standard mode, the field computer displays values to one decimal place. With decimal shift mode active, the field computer displays values to two decimal places.

**Note:** *If the decimal shift feature is changed, be sure to verify all calibration settings to ensure accuracy of the product control system. Change settings as necessary.*

### Display Smoothing

Toggle the display smoothing feature to allow the field computer to smooth the rate display on the Guidance screen. With the feature selected, as long as the actual rate is within 10% of the actual application rate, the target rate will display as the actual rate on the Guidance screen. The actual rate will be displayed if the actual rate does not reach the target rate dead band ( $\pm 10\%$ ) within 10 seconds.

### Ratio Rate

The ratio rate feature configures the selected control channel to apply an injected chemical at a rate proportional to the carrier product flow rate. The ratio rate application mode must be enabled via the control console and a ratio rate cal value must be entered for each product controlled in ratio to the carrier.

**Note:** *The carrier product must be programmed on control channel 1. If a carrier product is not set as product 1, the low pressure alarm will not function. If the off rate alarm is triggered frequently during injection applications in ratio rate mode, access the volume per minute display on the control console and verify that the target flow rate is within the application range for the pump.*



The ratio rate calibration value is entered as the ratio of injected chemical to carrier in ounces per gallon [deciliters per liter].

### ***For Example:***

If the desired ratio of injected chemical concentration is 2 ounces per gallon [0.59 deciliters per liter], enter a value of 2 [0.59] for the ratio rate cal value. Once the operation conditions in the Normal Application Mode section on page 29 are set, the system will automatically adjust the rate of injected product in proportion with the carrier product flow rate.

### **Agitator**

If equipped with an injection system featuring an agitator enabled output, this option enables or disables a chemical agitator.

### **PWM Smart Control**

The PWM smart control feature may be enabled to allow the control system to estimate the required PWM duty cycle for changes in vehicle speed or target rate, or when the hydraulic valve is toggled on. When this feature is enabled, control response will be much more aggressive.

### **Dual Loop Control**

The dual loop control feature is designed for use with low application rates and requires a pressure transducer with a liquid application system controlled with a PWM valve. The dual loop feature uses both the flow meter and pressure transducer to enhance the control response during operation at low application rates. The default setting for this feature is disabled.

### **Standby Pressure**


**Note:** *To enable the standby pressure feature, the product control system must have a PWM valve controlling a liquid application system and a pressure transducer connected to the control node. If these requirements are not met, the console will automatically disable the standby pressure enable feature.*

*When enabled, the standby pressure setting will replace the 'Preset PWM' setting on the Valve Calibration screen. Review the Preset PWM or Standby Pressure section on page 104.*

The standby enable setting allows the operator to enable the standby pressure feature and enter a minimum pressure value. Refer to the *Preset PWM or Standby Pressure* section on page 104 for information on the standby pressure value.

## Alarm Settings

The Alarm Settings screen is used to set the values at which the field computer will display visual alarms on-screen. The Alarm Settings screen also allows the operator to enable an audible alarm tone when the visual alarm notice is displayed.

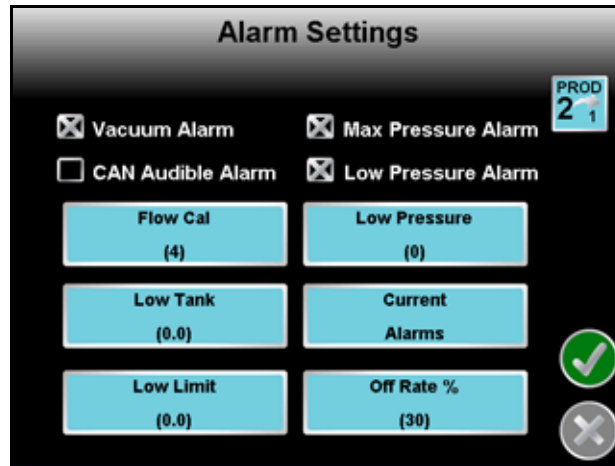

**Note:** Enter a value of zero to disable an alarm feature.

*Some alarm settings or features are only available in specific control modes or when the field computer detects specific components or features on the CANbus.*

### Bin Alarm

In any of the granular modes, a bin alarm option is displayed on the Alarm Settings screen. Enable the Bin Alarm if a bin level sensor is connected to the control system. When the sensor detects a low level in the bin, the field computer displays the alarms window to alert the operator of the condition.

### Vacuum Alarm

The vacuum alarm is available when a CAN motor control or injection node is detected on the CANbus. Enable this alarm to display an alert if the injection system begins running in a vacuum state.

### CAN Audible Alarm

Select the CAN Audible Alarm to enable the audible alarm tone for the configured settings on this screen. If any of the following settings are encountered, the field computer plays an audible tone to warn the operator of the condition.

### Flow Error Cal (CAN Motor Control)

If a CAN motor control node for an injection pump is connected to the CANbus, the Alarm Settings screen will display the Flow Cal alarm feature. This alarm may be used to indicate that the chemical tank is empty or the pump is unable to prime or inject product.

Enter a value between 0 and 100 for the percentage of error allowed between the flow switch and pump encoder before a flow alarm will be displayed. For example, set this value to 100 to disable the flow error cal

alarm or 0 to display an error any time the flow switch and pump encoder do not match. The default value for the flow error cal alarm is 50.

**Note:** *The Flow Error Cal is replaced with the FER (Flow to Encoder Ratio) value when operating a Raven Sidekick Pro™. Refer to the Sidekick Pro Installation and Operation Manual for more information about operation with the Envizio Pro or Envizio Pro II field computers.*

## Dual Flow (%) Percent

When controlling a dual bed system in Gran 3 mode, the Dual Flow Percent feature may be set up on the Alarm Settings screen. Set the dual flow percent alarm for the tolerance between belt encoder readings before the field computer will display an alarm condition. This alarm may be used to indicate that the belts are travelling at different rates or one belt is not moving. The out of tolerance condition must be met for at least 5 seconds before the alarm is displayed.

Enter a value of 100 to disable the dual flow percent alarm or 0 to display an error any time the belt encoders do not match. The default value for the dual flow percent alarm is 50.

## Low Pressure

The Low Pressure setting is only displayed on the Alarm Settings screen when a pressure transducer is connected to the system and detected by the field computer and if the 'PWM Smart Enable' feature is selected. Refer to the *PWM Smart Control* section on page 111 for more information.

Enter the minimum desired pressure in PSI [kPa] for product at the pressure transducer location. If the product pressure falls below the programmed, the field computer will display an alert.

**Note:** *The product control valve will stop closing when the Low Pressure setting is reached.*

## Low Tank or Bin

Enter the tank or bin volume at which alarms area will activate indicating that a product is running low.

## Low Limit

The Low Limit value sets the minimum volume per minute which a product will be applied. If the flow meter drops below this setting, the field computer will display an alert.

**Note:** *The product control valve will stop closing when the Low Limit setting is reached.*

## Off Rate Percent

Enter the percentage at which the Off Rate alarm will activate. The Off Rate alarm activates when the actual rate differs from the target rate by the programmed value for longer than five seconds.


The off rate alarm percent value will also determine the coverage mapping colors during an active job.

## Current Alarms

Touch the Current Alarms button to display any current product alarms.

## Section Assignments

The Section Assignment screen allows the operator to assign products to a section. Place a green check mark below a section to assign the selected product to that section.

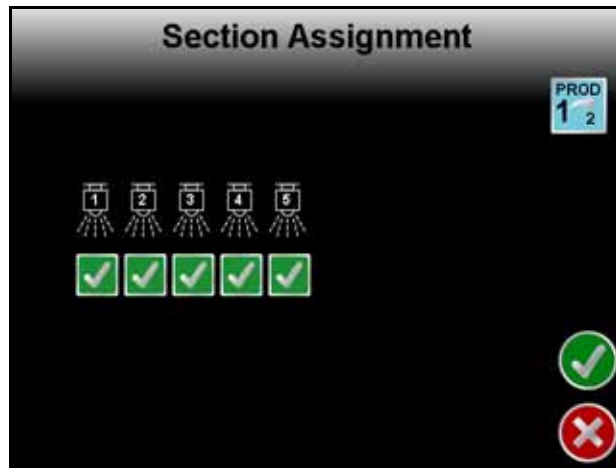

**Note:** The vehicle or implement's plumbing must accommodate the selected section assignments.

---

## AccuBoom™

Touch this icon to display the AccuBoom Setup screen. See Chapter 9, *Using AccuBoom™*, for more information on setting up and using AccuBoom with the Envizio Pro or Envizio Pro II.

**Note:** If no AccuBoom node is detected by the CANbus, a Function Disabled screen will appear. If an AccuBoom node has been installed, troubleshoot the node and readdress the CANbus. See Chapter 4, *CAN Networking and Diagnostics*, for CAN installation and troubleshooting information.

---

## AutoBoom™

Touch this icon to display the AutoBoom Setup screen. See Chapter 10, *Using AutoBoom™*, for a brief overview of this feature on the Envizio Pro and Envizio Pro II. Refer to the AutoBoom Calibration & Operation Manual for calibration and detailed operation instructions.


**Note:** If no AutoBoom node is detected by the CANbus, a Function Disabled screen will appear. Troubleshoot the node and readdress the CANbus. See Chapter 4, *CAN Networking and Diagnostics*, for CAN installation and troubleshooting information.

## Steering

If an optional automated steering system has been installed, the Steering icon will be displayed in the System menu. Touch this icon to access the Steering Settings screen. For more detailed installation and calibration Information, refer to the *SmarTrax Calibration and Operation Manual*.

## GPS Menu

The GPS menu displays available options for the DGPS source. The GPS menu contains the DGPS Source selection options as well as settings for Message Outputs, Differential Sources and a DGPS Status, or Health, screen.

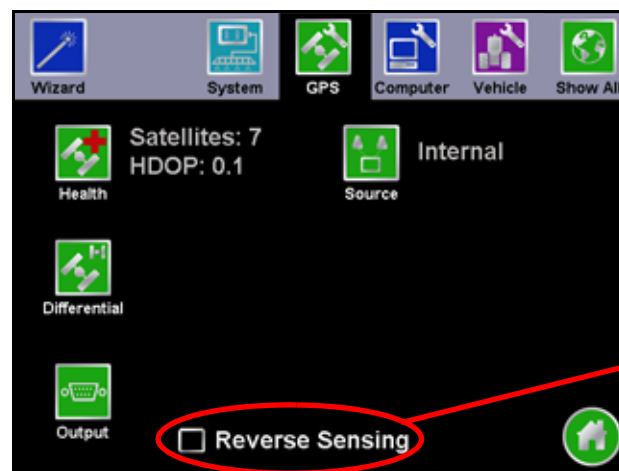

Enable/Disable  
Reverse Sensing  
Feature

**Note:** The Source and Output screens are only available on consoles featuring the built-in receiver. These screens are only accessible if the built-in receiver is selected as the source of DGPS signal.

## Reverse Sensing

**Note:** If this feature is disabled, the guidance display will assume all vehicle motion is in the forward direction.

Touch the 'Reverse Sensing' option at the bottom of the GPS Menu screen to toggle the reverse sensing feature. This feature should be enabled if the Envizio Pro or Envizio Pro II will be used to spray while reversing (i.e. backing into corners). With this feature enabled, the field computer detects course direction changes and will display the course direction indicator and boom sections appropriately for reverse movement and spraying.

**Note:** When the reverse sensing feature is enabled, the field computer may occasionally require the operator to manually override the current direction of travel during field operations. Review the GPS Health section on page 116 and the Direction of Travel Indicator section on page 118 before starting a job to ensure that the operator can toggle the direction of travel if necessary.

The reverse sensing feature is not displayed if a SmarTrax terrain compensation node is connected to the field computer.


The direction of travel icon (shown to the right) will be displayed on the Guidance screen any time the field computer detects that the vehicle is travelling in reverse. Touch the reverse direction icon to manually toggle the direction of travel displayed on the Guidance screen.



If the reverse direction icon is not displayed on the Guidance screen, touch the GPS Status Indicator and touch the direction of travel icon along the right side of the screen to manually toggle the displayed vehicle course.

## GPS Health

The GPS Health screen displays the status of GPS reception and can be used to troubleshoot the DGPS receiver and signal.

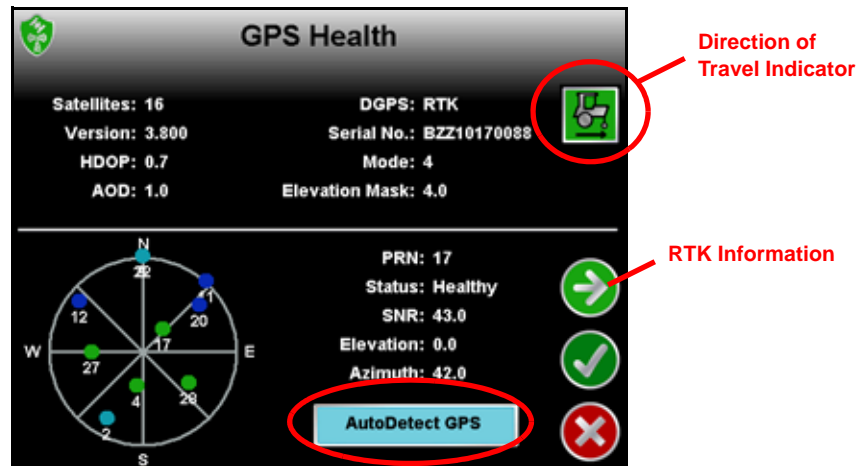

**Note:** The GPS Health screen is quickly accessible from the Home screen or from the Guidance screens by touching the GPS Status icon.



## GPS Status Display Information

The upper portion of the GPS Health screen displays the following information:

**Satellites.** •Number of satellites locked onto and used to determine correction. The field computer requires a minimum of 5 satellites to provide differential correction.

**DGPS.** •Displays the source of differential correction being used.

**Note:** If using the e-Dif correction source with the Envizio Pro internal receiver, the DGPS field will display AUTO.

**Version.** •The firmware version of the DGPS receiver. This information may not be available for all receivers.

**Serial Number.** •The serial number of the DGPS receiver. This information may not be available for all receivers.

**HDOP.** •The Horizontal Dilution of Precision must be below 2.0 to maintain differential. If HDOP exceeds 2.0, the GPS Status shield will change to yellow to alert the operator of the DGPS condition.

**Mode.** •Displays the current differential fix status. The mode value will display:

- '0' or '1' if no differential corrections are being received
- '2' or when the DGPS receiver has locked on to a differential source
- '4' for RTK fixed mode for fine GPS course correction mode
- '5' for RTK float mode or coarse GPS course correction mode

**Note:** Refer to the *RTK Fixed and Float Modes* section on page 54 for more information on RTK fixed and float modes.


**AOD.** •The Age of Data corrections is shown in seconds. This is the time since the last GPS message update has been received. If the AOD value is greater than 60 seconds, the GPS status indicator will a yellow caution shield and the differential fix mode will display a 1.

**Note:** The Raven SmarTrax or SmartSteer system will disengage after a few seconds without a GPS message update.

**Elevation Mask.** •The elevation mask sets the minimum elevation of a satellite above the horizon which the field computer may use for differential correction. This value is displayed in degrees above horizontal. Refer to the *Elevation Mask* section on page 119 to modify the elevation mask setting.

The lower portion of the GPS Health screen displays the following satellite constellation information:

**Satellite Constellation Map.** •The field computer displays the constellation of satellites currently locked and used to determine differential. Touch a satellite displayed in the constellation to display information about each satellite in the constellation.

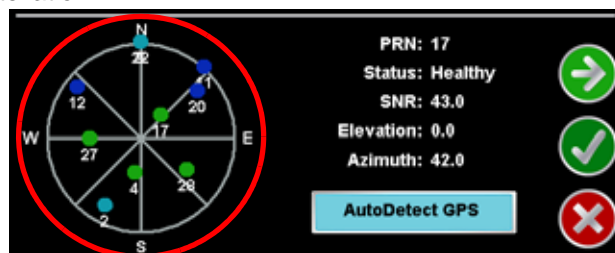

**Note:** To view the satellite constellation, be sure to set the GSA message to 1 Hz from an external DGPS receiver.

The satellites being tracked by the field computer will display green in the constellation map if the signal to noise ratio (SNR) value is 42 or higher. Satellites displayed as blue have an SNR value between 30 and 41 while satellites with an SNR below 30 will display as light blue.

**PRN.** •Displays the PRN for the satellite currently selected in the constellation map area.

**Status.** •The signal status of the selected satellite is displayed in this field. Satellites with a Signal to Noise Ratio (SNR) at 40 or above will display a Healthy status and appear green in the satellite constellation map while an SNR below 40 will show an Unhealthy status and appear blue in the map.

**SNR.** •Displays the Signal to Noise Ratio of the selected satellite. To maintain differential signal, at least two satellites in the constellation must have a Signal to Noise Ratio higher than 50.

**Elevation.** •This value represents the elevation of the satellite and is displayed as degrees above the horizon.

**Azimuth.** •The azimuth, or bearing, of the satellite is displayed as degrees from due North.

### Direction of Travel Indicator

This indicator displays the last direction of travel detected by the field computer. Touch the indicator to toggle the direction of travel manually if the indicator or map display is incorrect.

**Note:** *When operating with an optional Raven SmartSteer™ or SmarTrax™, automated steering system, the direction of travel icon may not be displayed in this location if the terrain compensation feature is enabled. Review the SmartSteer or SmarTrax Calibration and Operation Manual for details on using these systems with the Envizio Pro or Envizio Pro II field computers.*

### AutoDetect GPS

Touch the 'AutoDetect GPS' button on the GPS Health screen to allow the Envizio Pro or Envizio Pro II to attempt to automatically detect GPS information coming from an external device. The autodetect feature is normally only required when interfacing with an external receiver or when receiving GPS information back from a SmarTrax or TM-1 Tilt Module.

### RTK Information Screen


When using the internal GPS receiver, or a compatible external GPS receiver such as the Raven Phoenix 300, in RTK mode, touch the 'Next' icon on the GPS Health screen to view RTK base station information such as the base station I.D. and baseline distance. This information may be used to help troubleshoot issues with the system if necessary.





## Differential

Select the Differential icon from the GPS menu to set up the internal receiver for the desired GPS correction source. Generally, the SBAS (WAAS/EGNOS) option is selected by default.

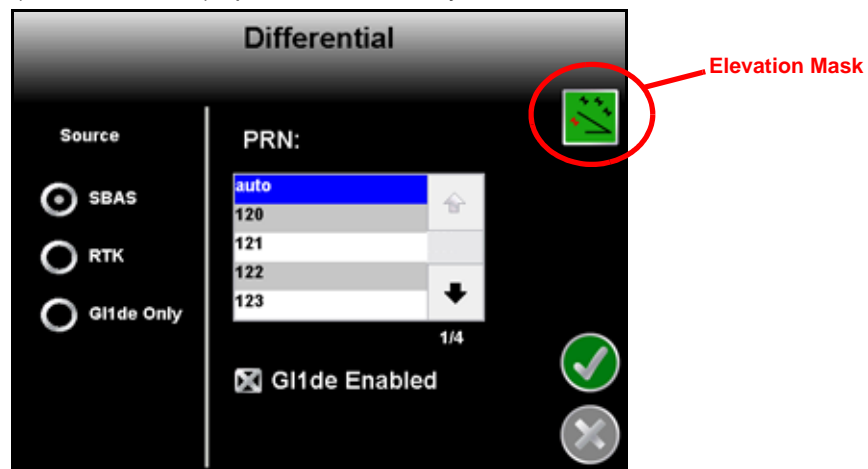

**Note:** Touch the 'Auto Detect' button on the GPS Health screen if a Raven receiver is connected directly to the 'GPS Receiver/DGPS' port on the chassis interface or main interface cables. If the field computer detects a Raven receiver, the field computer can be used to select the differential source and PRN of the external receiver.

If GPS is routed through an automated steering system such as the Raven SmarTrax or SmartSteer, the receiver cannot be configured with the field computer.

### Elevation Mask

The elevation mask sets the minimum elevation of a satellite above the horizon which the field computer may use for differential correction. This value is displayed in degrees above horizontal.

Touch the Elevation Mask icon in the upper, right corner of the Differential screen and use the on-screen keypad to modify the elevation mask setting. The default value for the elevation mask is 4.0.

The current elevation mask value is displayed on the GPS Health screen.

### SBAS (Satellite Based Augmentation System)

**Note:** Some Envizio Pro field computers may have an internal receiver enabled for e-Dif and L-Dif only. These receivers do not have an SBAS option and will not be able to utilize SBAS correction signals.

Select the SBAS option to utilize the Wide Area Augmentation System (WAAS) or European Geostationary Navigation Overlay Service (EGNOS) correction signals. For most internal GPS receivers, this is the default option selected. An optional Global Navigation Satellite System (GLONASS) authorization key is also available to enhance the standard GPS satellite constellation. This key allows the dual frequency receiver to utilize the GLONASS satellite constellation which can increase the number of satellites visible at any given time and help improve satellite coverage.

**Note:** The GLONASS satellites will be utilized when set to SBAS or RTK correction sources.

The PRN scroll list allows the operator to manually set the PRN, or pseudo-random number, for the differential satellite which provides coverage for the operation area if desired. Selecting a PRN from the list locks the correction signal to the selected satellite. If the 'auto' option is selected, the field computer will scan and automatically set the PRN throughout an operation.

**Note:** *If the vehicle position jumps on screen during field operations in 'auto' mode, try selecting a PRN manually. The jumps may be a result of the internal receiver switching between differential satellites.*

Toggle the "GI1de Enabled" option to enable the NovAtel GI1de<sup>®</sup> algorithm while using SBAS corrections. When enabled, the NovAtel GI1de<sup>®</sup> feature helps to smooth reported GPS positions and reduce position jumps during operation and provides for a more stable position input for guidance systems.

**Note:** *The NovAtel GI1de<sup>®</sup> feature is only available on Envizio Pro II field computers with the dual frequency GPS receiver. Visit the NovAtel website for a full description and additional information on the NovAtel GI1de<sup>®</sup> feature.*

[www.novatel.com](http://www.novatel.com)

### e-Dif (Envizio Pro Only)

If an optional e-Dif key has been authorized, an option to enable e-Dif will be displayed on this screen.


Select the e-Dif option to display the timer for the last time the e-Dif was reset. Touch the Reset button to reset the timer.

**Note:** *The Envizio Pro internal DGPS receiver is e-Dif capable. If connecting an external receiver to the Envizio Pro console, make sure that it is capable of using e-Dif prior to purchasing or authorizing an e-Dif code.*

*Contact a local Raven dealer for more information about the optional e-Dif correction source and upgrades.*

### RTK (Envizio Pro II Only)

With an optional RTK authorization key, the Envizio Pro II dual frequency receiver may be used with a Slingshot Field Hub™ to receive RTK corrections via a wireless or cellular service provider or via a Continuously Operating Reference Station (CORS) network.

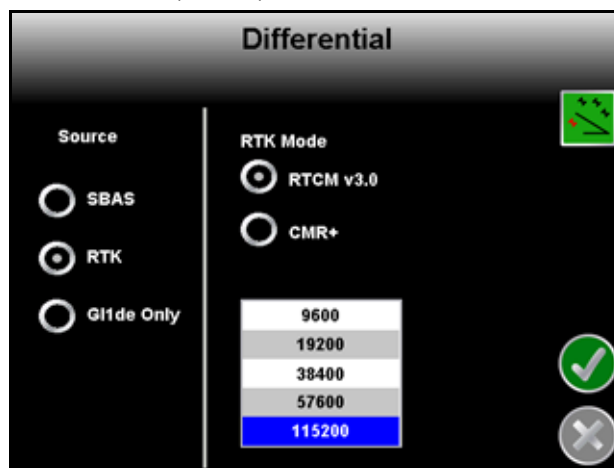

With RTK selected as the differential source, select the type of corrections which will be sent to the receiver as

well as the baud rate for those messages. Contact a local Slingshot dealer for more information on the Slingshot RTK services.


**Note:** *The RTK option is only displayed after an RTK authorization key is entered using the procedure in the Special Features Registration section on page 127. Contact a local Raven dealer to obtain the authorization code.*

### GI1de® Only

For areas with limited SBAS coverage, the Envizio Pro II dual frequency receiver features the NovAtel GI1de® as a GPS correction source option. In GI1de only mode, the Envizio Pro II will use existing GPS or EGNOS satellites to locate the vehicle position within 20 in [50 cm].

## Output

To setup the type, frequency and baud rate of message outputs from the built-in receiver, touch the Output icon.

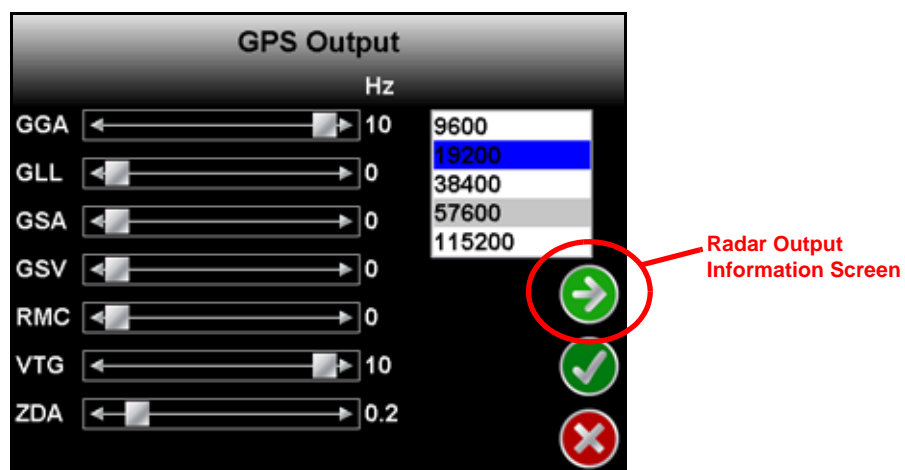

**Note:** *The GPS Output screen is only available when using the internal GPS receiver. Message outputs from an external GPS receiver must be setup through the external hardware.*

### Message Types and Frequency

Use the sliding bar next to the desired message type to set the frequency of the output message. Messages may be sent out at 0.2, 1, 5 or 10 Hz, depending upon the message. Set the slider to 0 Hz to turn the corresponding message off.

Messages sent out of the built-in receiver are sent out of the connector labeled 'GPS Out' on the auxiliary interface cable or chassis interface cable. Contact a local Raven dealer for more information.


### Baud

Select the Baud Rate of the message strings sent from the built-in receiver.

**Note:** *Some GPS or Assisted Steering components may require specific Baud Rate settings.*

## Simulated Radar Output

Touch the 'Next' icon displayed on the GPS Output screen to view the simulated radar output from the field computer. These settings may be used to help set up an external device to receive GPS speed signal output from the internal GPS receiver.

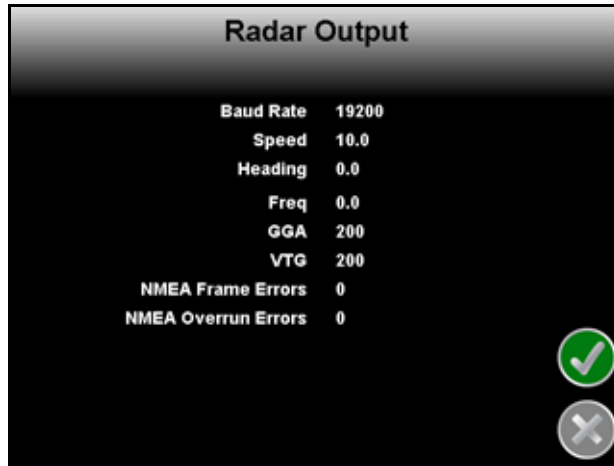


## External Lightbar, TM-1 Tilt Module and SmarTrax™

If an optional SmarTrax or SmartSteer system, external lightbar or TM-1 Tilt Module is connected to the field computer, the GPS Output Baud setting must be set to 19,200 before changing the Source selection. For more information on the GPS Source settings, see the *Source* section on page 122.

## Source

The GPS Source screen allows the operator to select between the internal GPS receiver or an optional external receiver such as a Raven Phoenix 200/300.

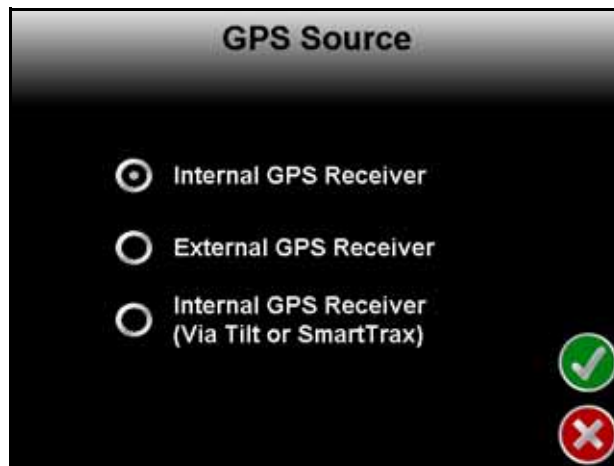

**Note:** The GPS Source screen is only available on field computers with the internal DGPS receiver.

The GPS Source screen also displays an option to automatically setup the output messages from the built-in receiver to route through an optional TM-1 Tilt Module or the SmarTrax or SmartSteer systems.

## Internal GPS Receiver

To use the internal receiver, select the 'Internal GPS Receiver' option. Verify settings on the GPS Output screen to ensure that any required messages are properly configured.

## Via TM-1 or SmarTrax™

To output DGPS signal from the built-in receiver to an optional TM-1 Tilt Sensor or SmarTrax controller, select the Internal GPS Receiver (Via Tilt or SmarTrax) option.

**Note:** *The GPS Output Baud must be set to 19,200 before selecting the Via TM-1 or SmarTrax option (see the External Lightbar, TM-1 Tilt Module and SmarTrax™ section on page 122). Do not select this option if the optional hardware components are not connected. The field computer may take several minutes to properly setup these components or may lock up if the TM-1 or SmarTrax controller are not connected.*

*This option requires additional cables to route DGPS signal from the internal receiver out to the TM-1 or SmarTrax controller and then back into the field computer. Review the installation sections for these optional system components or contact a local Raven dealer for more information.*

## External GPS Receiver

If an optional external GPS receiver is connected to the field computer via the connector labeled 'DGPS' on the main interface cable (P/N 115-0171-746) or chassis interface cable (P/N 115-0171-926) select the External Receiver option. Selecting this option overrides the internal DGPS receiver.

## Tilt Sensor

If the TM-1 Tilt Sensor is connected directly to the DGPS connector on the main interface cable (P/N 115-0171-746) or chassis interface cable (P/N 115-0171-926), the Envizio Pro or Envizio Pro II may be used to configure the TM-1. Touch the Tilt icon to access the Tilt Configuration screen.

**Note:** *When routing tilt corrected signal through a SmarTrax controller and back into the field computer, the TM-1 must be calibrated through the SmarTrax controller rather than the Envizio Pro or Envizio Pro II. See the SmarTrax Quick Start Guide or Operator's Manual for more information.*


## Information

Touch the blue Information icon to display a brief explanation of the settings and options available on the Tilt Configuration screen.

**Note:** *Refer to the TM-1 Tilt Module Installation and Operation Manual for detailed installation and calibration information.*


## Computer Menu

The Computer menu contains settings and preferences for the Envizio Pro or Envizio Pro II field computer and display. Settings such as the display mode, brightness, language, lightbar and display units are modified through the Computer menu. Features available with a USB flash drive, such as software updates and file maintenance are also accessed via the Computer menu.

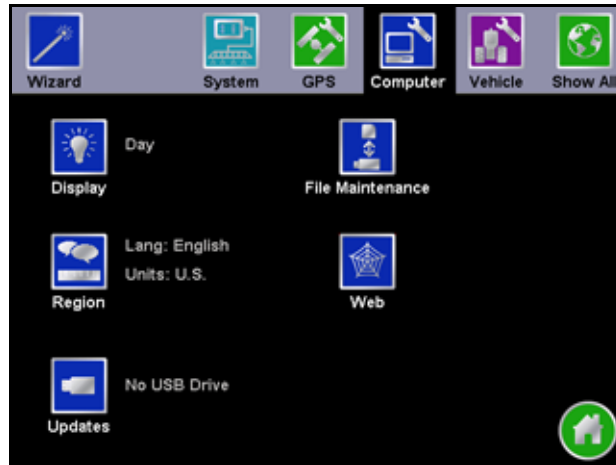


## Display

The Display settings screen allows the user to change settings for the field computer screen display and the on-screen lightbar.

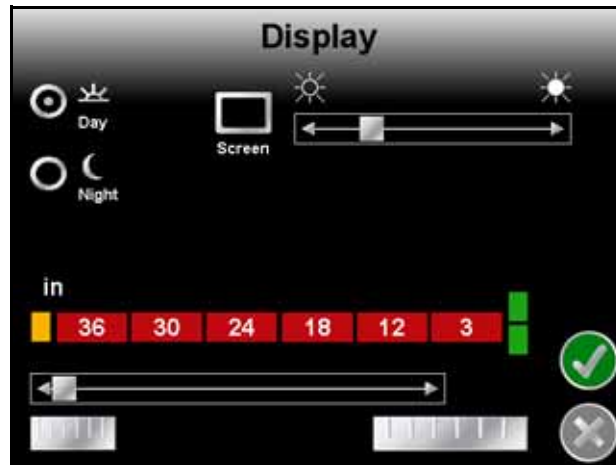

## Display Mode

Select Day or Night to adjust the guidance screen for day or night operations.

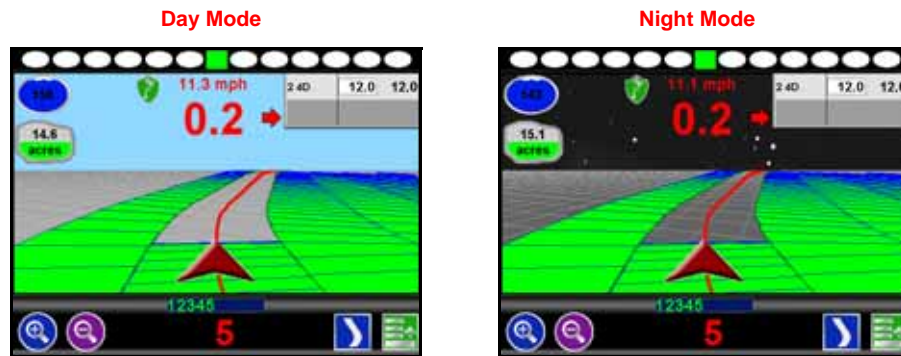

## Screen Brightness

The Screen slider adjusts the brightness of the field computer display.

## On-Screen Lightbar

**Offset Scale Sensitivity.** The lightbar sensitivity can be adjusted to match the type of application with which the field computer will provide guidance. Select between the coarse, normal and fine adjustments. The example lightbar displays the units and measurements used for each setting.


## External Lightbar

The brightness of an external lightbar, controlled by the field computer, may be adjusted using the External Lightbar slider on the Display screen.

**Note:** *The External Lightbar adjustment will only display if the field computer is configured to control an external lightbar. See the Serial Port Configuration section on page 97 to setup the external lightbar interface.*

## Region

Select the Region icon to modify display settings for the region in which the field computer will be used. The Region screen displays settings for the following:

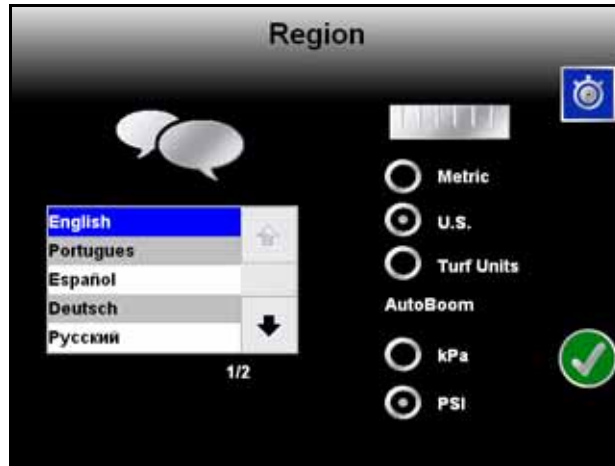

- Language
- Display Units
- Pressure Units

### Language

The available languages are displayed in the scroll list. Select the desired language displayed on the field computer from the list.

### Unit System

Select the desired system (English or Metric) used with the control system.

Unit System	Units
Metric	centimeters (cm), liters (L), hectares (ha), kilometers per hour (km/h)
English	inches (in), gallons (gal), acres (ac), miles per hour (mph)
Turf Units	inches (in), gallons per 1000 square feet (gal/1000 ft <sup>2</sup> ), miles per hour (mph)

All measurements will be displayed by the field computer in the selected system. All user inputs must be entered using the selected system.

### AutoBoom™ Pressure

The units used to display pressure of an optional AutoBoom system are also selected on this screen. Select between pounds per square inch (PSI) or kilo pascals (kPa).

### Time Zone Settings



Touch the Time Zone icon in the upper right corner to view and modify time zone settings. The default selections will allow the field computer to automatically configure the time zone and daylight savings for the region. To manually change the time zone, select the 'Manual Time Zone' option and enter the UTC (Coordinated Universal Time) offset hours for the local time zone.



## Updates

Access the Updates screen to update the field computer software or to register a special feature, such as VRA or planter population control. The Updates screen also provides access to the demonstration, or demo, mode.

### To apply a software update:

1. Go to the Raven web site:

[www.ravenprecision.com](http://www.ravenprecision.com)

Software updates will be available periodically from this web site.

**Note:** Sign up for e-Alerts while on the Raven web site to receive e-mail notification when new software updates are available for the field computer or other Raven products are available. Sign up for product manual e-Alerts to receive notification when updates for Raven product manuals are available on the Raven web site.


2. Locate the newest Envizio Pro or Envizio Pro II software and download the zip file to a home or office computer.
3. Download the latest update to a home or office PC and extract or unzip the files to a USB flash drive. See Chapter 8, *Software Updates and File Maintenance*, for more update information.

**Note:** To apply a software update, the unzipped files must be on the flash drive's root directory. The field computer will not search subdirectories or folders to find updates.

4. Insert the flash drive with the unzipped software update into one of the USB ports on the field computer.
5. With a USB flash drive inserted in a USB port, touch the Updates icon. Select the desired software update to apply to the field computer.

### Special Features Registration

The Updates screen is also used to enter and validate Special Features of the Envizio Pro or Envizio Pro II field computers. While on the Updates screen, touch the 'Special Features Registration' button to begin activation of available features for the field computer.

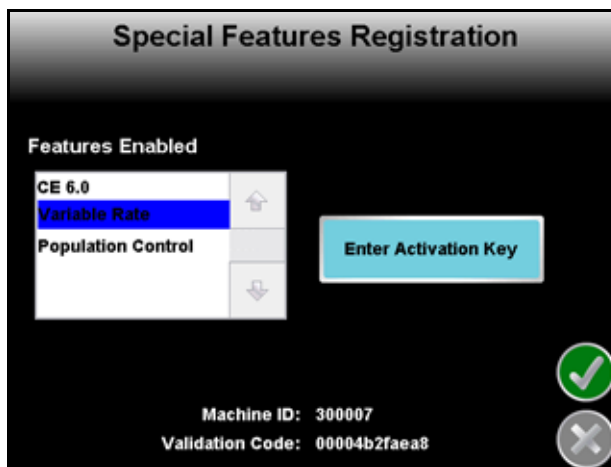

**Note:** Contact a local Raven dealer for a complete list of features available for use with the Envizio Pro or Envizio Pro II. Consoles with software version 3.0 or higher will require an authorization code to allow operation. If 'CE 6.0' is not listed in the enabled features list, contact a local Raven dealer or the Raven Technical Support Center for assistance.

The Raven dealer will require the Machine ID and Validation Code information displayed at the bottom of the Special Features Registration screen.

### To activate a Special Feature:

1. Touch the 'Enter Activation Key' button and use the on-screen keyboard to enter the authorization code from the Raven dealer.
2. Touch the 'Accept' icon in the lower, right corner of the on-screen keyboard to enter the authorization code.
3. If the code has been entered correctly, the activated feature will be displayed on-screen.  
If the authorization code does not activate the feature, verify that the code has been entered correctly.

### Demo Mode

Touch the Demo icon in the upper-right corner of the Updates screen to toggle the demonstration mode. This mode enables a GPS simulation. The field computer will create a coverage map based on the simulated GPS position.

To start the demonstration mode:



Touch the Start Demo icon to toggle the demo mode on. The field computer must be restarted before the demonstration mode will be activated.

Shutdown and power off the console. Wait a few seconds and turn the console power back on.



To end demo mode, return to the Updates screen and select the Stop Demo icon to toggle demo mode off.

Be sure to restart the field computer to restore the Envizio Pro or Envizio Pro II to normal operation.

## File Maintenance

To transfer files to or from the field computer, select the File Maintenance icon in the Computer menu. The following File Maintenance may be conducted directly from the field computer:

- Setup required file structure for use with the field computer on the USB drive
- Copy files to USB drive
- Copy files from USB drive
- Delete files from internal memory

Raven recommends performing File Maintenance at least once a week and storing or backing up these files on a home or office PC. See Chapter 8, *Software Updates and File Maintenance* for details on using the File Maintenance feature.


**Note:** *Depending upon the size of the completed job(s), file maintenance may take several minutes to complete. Large jobs with several sections may take longer. If a large job is*

## Web

If the required components are connected to the ethernet port on the back of the field computer, pressing the Web button will allow the operator to access the world wide web via the field computer touch screen. Refer to the Field Hub Quick Start Guide for set up and wireless navigation instructions.


## Vehicle Menu

Use the Vehicle menu to configure the field computer for the machine or implement configuration. The field computer requires calibration for the GPS antenna location on each vehicle as well as the swath width (guidance width) and the section configuration for the machine or implement. Once configured, vehicle profiles can be saved for later use, transferred to a USB drive, or loaded onto another Envizio Pro or Envizio Pro II field computer.

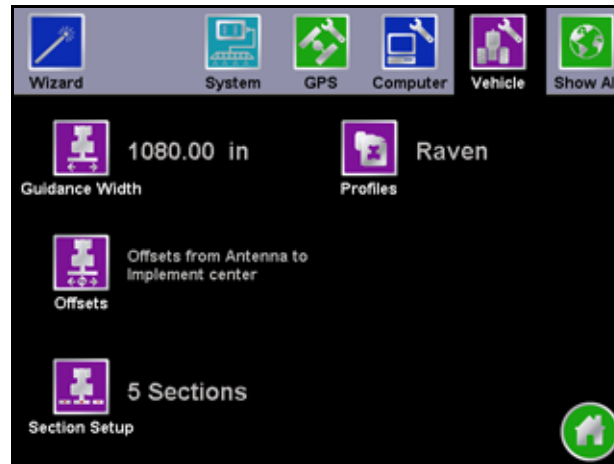

### Guidance Width

The guidance width is the width of the boom or implement without fence row nozzles, foam markers, etc. This is the width of each swath used when calculating and displaying guidance paths.

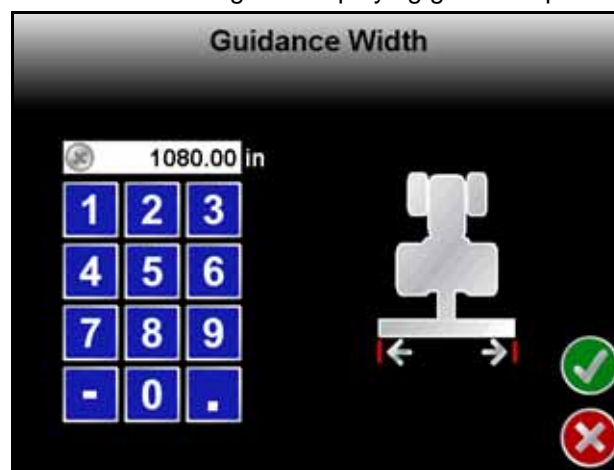


Use the on-screen keypad to enter the guidance width in inches or centimeters depending upon the units selected in the Computer menu. To save the entered width, touch the Accept icon or, to discard any changes made to the Width screen, touch the Cancel icon.

## Offsets

To properly display the vehicle location within a field and create accurate coverage information, the field computer must be calibrated for the location of the center of the boom or implement relative to the GPS antenna. This allows the field computer to provide accurate field guidance and create coverage maps based on the location of the boom or implement.

Touch the Offsets icon to display the Raven Offsets Setup screen.

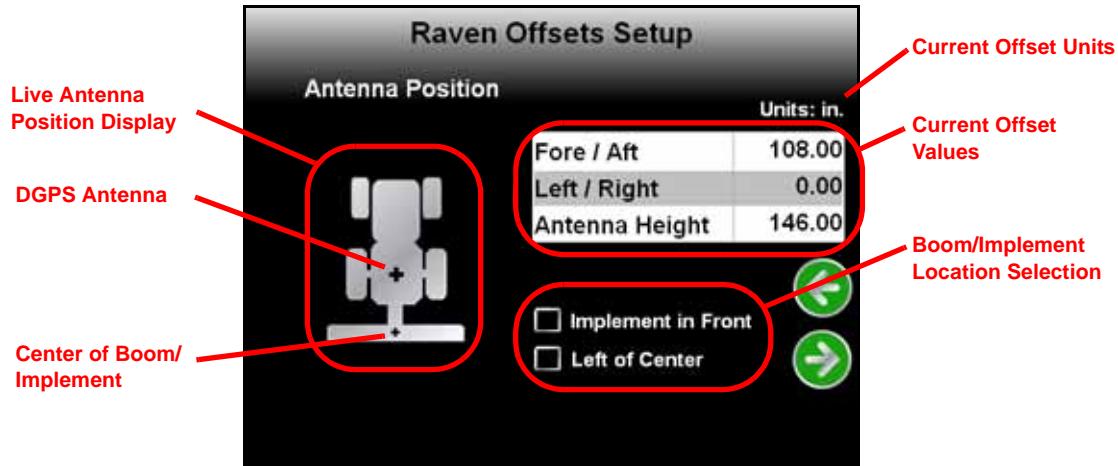

The Offsets Setup screen displays the following:

- Antenna Position Display - Displays a visual reference of the location of the boom or implement and DGPS antenna. After the antenna offsets are programmed, the antenna position display should show a general representation of the machine configuration.

**Note:** *The direction of forward travel shown on the antenna position display is toward the top of the screen.*


- List of offsets and currently set values for each setting. To enter or change an value, touch the desired offset and use the on-screen keypad to enter the new value.
- Current boom or implement location selection.

## Fore/Aft

The fore/aft offset is the distance of the boom or implement in front or behind the GPS antenna. The fore/aft offset must be measured perpendicular to the boom or implement width.

**Note:** *The fore/aft offset must be measured perpendicular to the boom or implement width.*

FIGURE 1. Example of the Fore/Aft Measurement

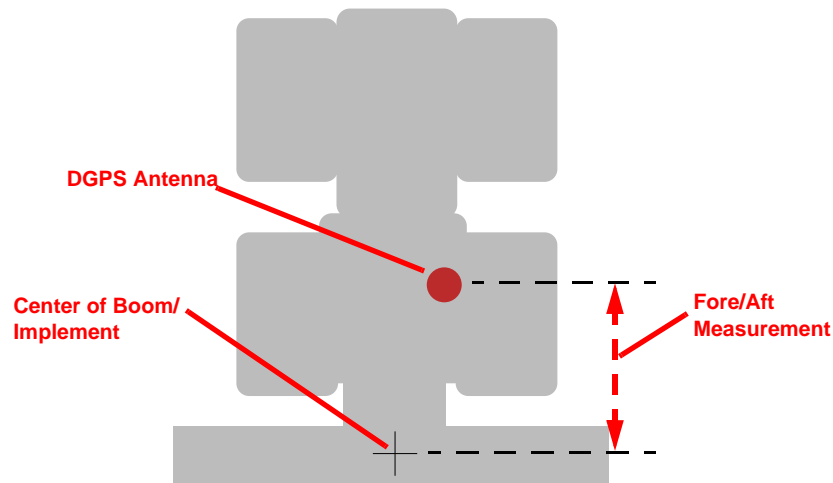

To set the fore/aft value:


1. Touch the current fore/aft value displayed on the Raven Offsets Setup screen.
2. Use the keypad to enter the measured fore/aft value in inches (U.S.) or centimeters (Metric) (see Figure 1 above).
3. If the boom or implement is in front of the GPS antenna, select the 'Implement in Front' option.

## Left/Right

The left/right offset is the distance from the GPS antenna to the center line of the boom or implement.

**Note:** *The left/right offset must be measured parallel to the boom or implement width.*

FIGURE 2. Example of Left/Right Measurement

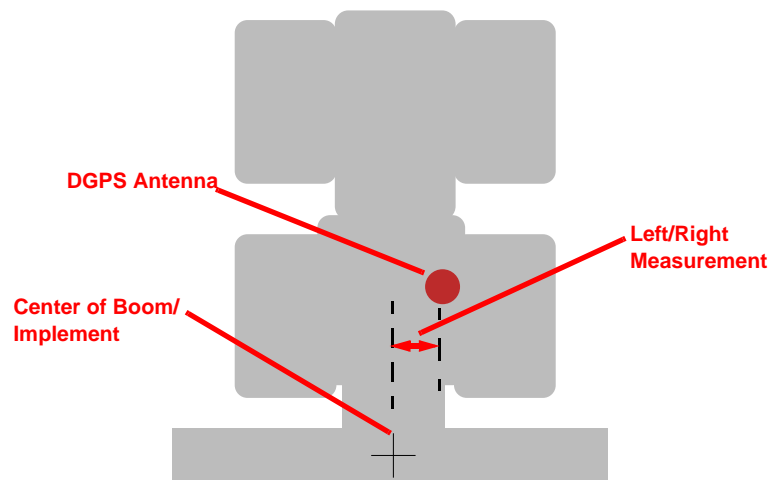


To set the left/right value:

1. Touch the current left/right value displayed on the Raven Offsets Setup screen.
2. Use the keypad to enter the measured left/right value in inches (U.S.) or centimeters (Metric) (see Figure 2 above).
3. If the center line of the boom or implement is to the left of the GPS antenna, select the 'Left of Center' option.

### Height

Touch this icon and use the on-screen keypad to enter the height (in inches or centimeters) of the DGPS antenna above ground. This value is only required if a tilt corrected DGPS signal is sent to the field computer.

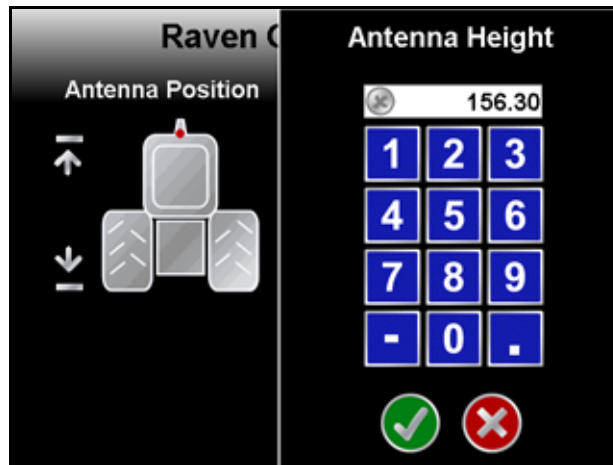

### Boom Sections


Touch the Boom Sections icon to display the Section Configuration screen.



The Section Configuration screen shows an overview of the current section configuration including section widths, left or right offsets and fore or aft offsets. This screen is used only to review the current section configuration.


## Section Setup

1. On the Section Configuration screen, touch the Next icon to begin configuring sections.

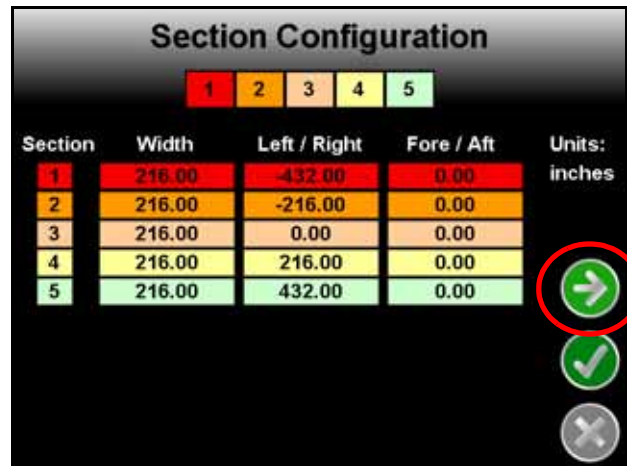

Section	Width	Left / Right	Fore / Aft	Units:
1	216.00	-432.00	0.00	inches
2	216.00	-216.00	0.00	
3	216.00	0.00	0.00	
4	216.00	216.00	0.00	
5	216.00	432.00	0.00	

The Number of Sections screen is displayed.

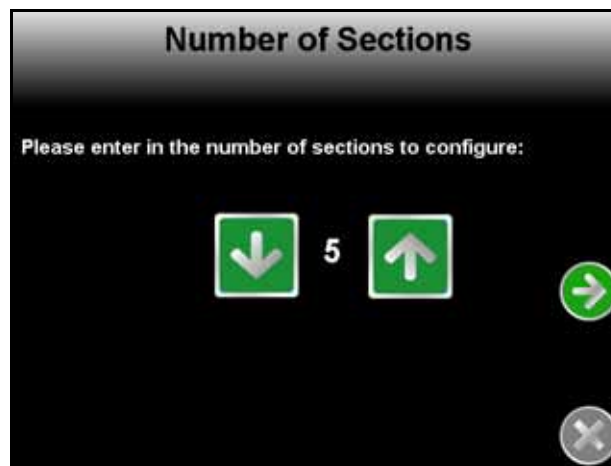

Number of Sections

Please enter in the number of sections to configure:


↓ 5 ↑

→

2. Use the Up and Down arrow buttons to setup the number of sections for the vehicle or implement. Touch the Next icon to proceed to the Section Width screen.


**Note:** To utilize AccuBoom, automatic boom section control, plumbing on the vehicle or implement must allow for individual section control. If the equipment is not capable of controlling individual sections, set the number of sections to 1 and enter the overall boom or implement width on the Section Width screen.

3. Configure the width of each section starting with the far left section. Use the on-screen keypad to enter the section width.

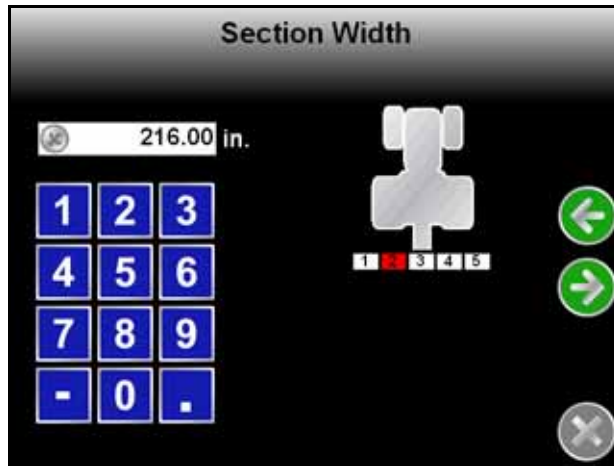

Touch the Next icon to accept the entered value and advance to the next section to the right. To skip a section, enter a value of zero as the section width.

4. Repeat Step 3 until widths have been entered for all sections. Touch the Next icon on the last Section Width screen to advance to the Configure Sections screen.
5. Touch the Configure Section Labels button to edit the section labels displayed on the field computer.

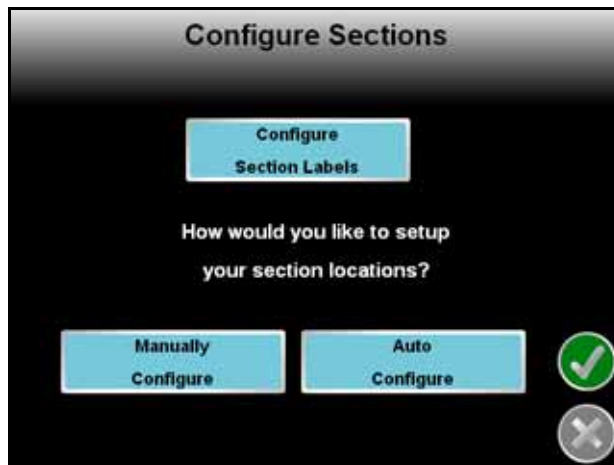


The Manual and Auto Configure buttons on the Configure Sections screen allow the operator to select the preferred method for configuring boom or implement sections.



## Configuring Section Labels

To customize the section labels displayed on the field computer, touch the 'Configure Section Labels' button. The Section Labeling screen will be displayed.

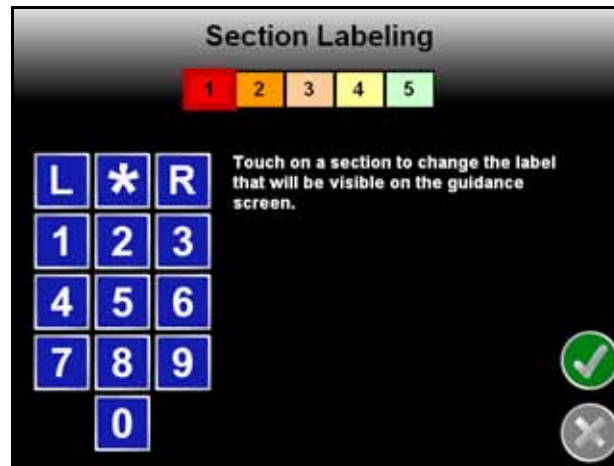

The currently configured section labels are displayed in boxes along the top of the screen. To begin configuring section labels:

1. Touch the box of the first section to relabel. A red box will appear around the selected section.
2. Use the displayed keypad to enter the new section label. The asterisk (\*) label can be used for "skipped" sections or sections with a zero width value.
3. Repeat steps 1 and 2 until all sections have been configured with the desired label.
4. Touch the green check mark to return to the Configure Sections screen.

## Automatically Configure Sections


If sections of the boom or implement are aligned end-to-end along the swath midpoint, select 'Auto Configure.' The field computer will automatically configure section locations.

After the field computer has configured sections, section locations can be modified by touching the Manually Configure button.

## Manually Configure Sections

If the boom or implement is not aligned end-to-end on the swath midpoint, the boom or implement sections will need to be manually configured.

1. Select Manually Configure to begin locating boom or implement sections. The Section Location screen will appear.

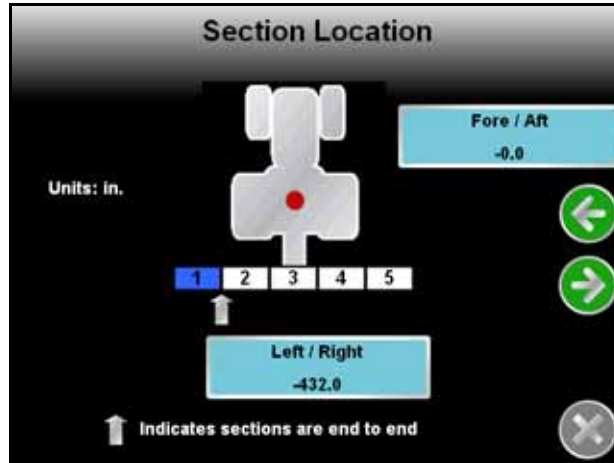

The currently entered offsets (if any) are displayed in the Left/Right and Fore/Aft buttons.

**Note:** The offset distances represent the offset from the DGPS antenna to the center of the selected section.

2. Touch the left/right button to enter a left or right offset for the first section. Enter a negative value if the center of the section is located to the left of the of the DGPS antenna.
3. Touch the fore/aft button to enter a fore or aft offset for the first section. Enter a negative value if the center of the section is located behind the DGPS antenna.
4. Touch the Next icon and repeat steps 2 and 3 to continue programming individual section locations. When finished, touch the Next icon to return to the Configure Sections screen.
5. Touch the Accept icon to return to the Section Configuration screen.

## Profiles


Select the Profiles icon within the Vehicle submenu to select a previously created profile, or to save the current settings as a new profile.

Profiles save the following settings:

- GPS Antenna Height and Offsets
- Swath Width
- Section Widths and Configuration

## Show All

The Show All icon along the top of the screen displays the Tools Menu overview screen. Touch this icon to display the System, Vehicle, Computer and GPS menus and the individual pages accessible in each menu on one screen. Touch the Show All icon to display the Tools Menu overview.

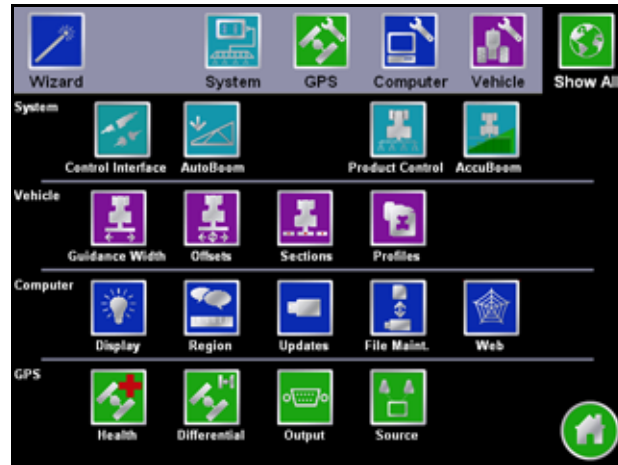



---

CHAPTER

8

*Software Updates and  
File Maintenance*

---

*Overview*

The Envizio Pro and Envizio Pro II File Maintenance feature allows the operator to manage job related files right in the cab.

Raven recommends performing File Maintenance at least once a week and storing job related files on a home or office PC. Printable job reports may be created from files stored on a home or office PC.

**Note:** *The File Maintenance feature requires a specific file structure on the USB drive which the field computer uses to automatically transfer job files. The field computer will not be able to locate files if the file structure is modified. Make sure to save the files to the correct folder on the USB drive before attempting to load files back onto the Envizio Pro or Envizio Pro II field computer.*

*Depending upon the size of the completed job(s), file maintenance may take several minutes to complete. A typical job of 200 acres should take approximately 5 minutes. Larger fields and coverage maps with multiple sections or rate change zones could take significantly longer. Check the File Maintenance screen available memory display periodically and perform file maintenance as necessary.*

Job related information transferred to a USB drive or stored on a PC may also be transferred back to the field computer as necessary for new job applications.

This chapter also contains detailed instructions for downloading and applying software updates for the Envizio Pro or Envizio Pro II field computers.

## File Maintenance

Coverage maps and field boundaries, saved A-B Lines, as well as AccuBoom spray zone maps can be transferred to a USB drive or deleted from memory using the File Maintenance feature.

### File Outputs

When performing file maintenance, the field computer transfers job and file information in both a bitmap and shapefile formats.

- Bitmap, or .bmp files, can be opened on nearly any computer operating system without special software.
- The shapefile format requires specialized software to view the shapefiles on a home or office PC. Shapefiles consist of four separate files, each with the same name. The .shp, .shx, .prj and .dbf files created for each report are essential for the shapefile format to function correctly.

To save memory resources on the field computer, the Envizio Pro and Envizio Pro II only generates the printable bitmap and shapefile reports when file maintenance is performed. For this reason, actual memory requirements for the USB drive will be greater than the disk space used on the field computer internal memory.



Available memory resources of the field computer and the connected USB drive are displayed at the bottom of the File Maintenance screen. Raven recommends using a USB flash drive with at least 512 MB.

## Performing File Maintenance

1. Open the Tools menu and select the File Maintenance icon in the Computer Menu.




2. If the connected drive has not previously been used to transfer job files from the Envizio Pro or Envizio Pro II, touch the icon along the right side of the screen to setup the required file structure.




For more information regarding the file structure on the USB drive, refer to the *File Structure* section on page 143.

3. Select the type of file on which the file maintenance operation will be performed.

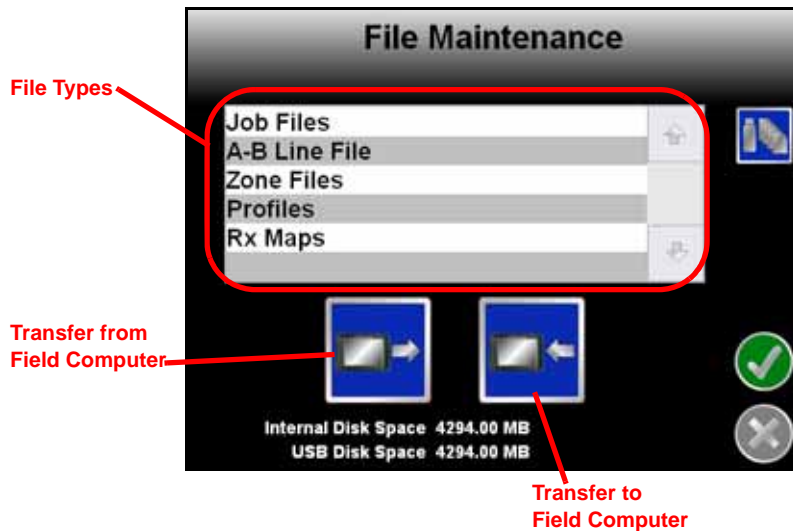

4. To begin working with the selected file type, touch the transfer to or transfer from field computer icon below the list of file types. For example, if the operator selects “Job Files” and the “from Field Computer,” the Job Files screen will display similar to the following:

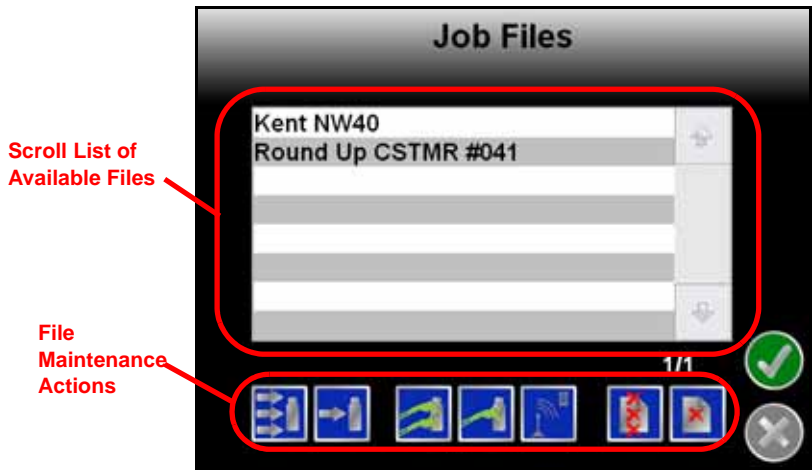

5. Use the following icons to perform the desired file maintenance actions:

### Transfer From Field Computer



Select left icon to transfer a selected file to the connected USB flash drive or the right icon to transfer all files of the selected type currently saved on the field computer.



Select the left icon to export the Slingshot™ data package for a selected job file to the connected USB flash drive or the right icon to export data packages for all job files currently stored on the field computer



**Note:** Jobs exported to a USB flash drive may be uploaded to the Slingshot web site using a home or office computer.

[www.ravenslingshot.com](http://www.ravenslingshot.com)



Select the left icon to delete a selected file from the field computer or the right icon to delete all files of the selected type currently saved on the field computer.



**Note:** The Delete button will not affect any files on the flash drive. To remove files from the flash drive, use the PC's file browser (i.e. Windows Explorer) to remove, delete or copy files from the flash drive.



Touch this icon to manually initiate upload of a selected file currently stored on the field computer via a SlingShot™ Field Hub and available wireless connection.

**Note:** Refer to Appendix D, Wireless Communications & Remote Service, for more information on transferring files using the Slingshot service.



## Transfer To Field Computer




Select the left icon to transfer a selected file to the field computer or the right icon to transfer all files of the selected type currently stored on the USB flash drive.



6. A confirmation screen will appear. Touch the Accept icon to proceed with the selected action or the Cancel icon to return to the File Maintenance screen without moving or deleting the selected files.
7. Once the action has been completed, touch the Accept icon again to return to the previous file type screen.

## File Structure

When the File Structure is properly setup on the USB drive, the following directories and files are created and can be found on the flash drive when the flash drive is inserted into a home or office PC. Below is a list of files and folders that the field computer automatically creates on the USB drive:

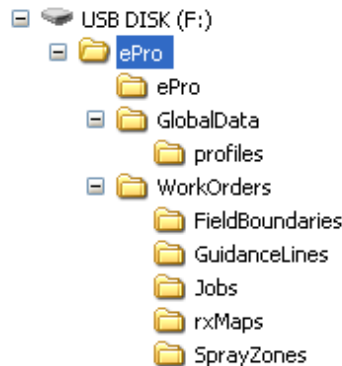

### ePro Directory

The main directory containing all of the information transferred from the field computer. The ePro directory keeps all Envizio Pro or Envizio Pro II files separated from other files which may be stored on the flash drive.

#### ePro

The ePro subfolder contains files used by the field computer.

#### Global Data

Information not specific to individual job files is stored in the Global Data folder.

**Profiles.** The .pfl files contained within the Profiles folder contain configuration information for each profile. The field computer creates one .pfl file for each saved profile.

Profile files are used by the field computer OS and are not viewable.

### Work Orders

Job information for each job transferred to the USB flash drive is stored in subfolders contained within the folder labeled Work Orders.

**Field Boundaries Folder.** Not currently used.

**Guidance Lines Folder.** All transferred Guidance paths are saved in the Guidance Lines folder. Line or path files have the .ab file extension.

Guidance Line files are used by the field computer OS and are not viewable.

**Jobs Folders.** Each job transferred to the USB drive is stored in a separate folder within the jobs directory. Each job folder contains the Coverage, Shapefiles and Reports subfolders. A Slingshot folder may also display in the job folder if a Slingshot job data package is exported to the USB flash drive. To save memory resources on the field computer, files saved within the Shapefiles and Reports folders are created only when the job files are transferred to the USB drive.

- The Coverage folder contains product coverage map files that have a .cov, .ini or .jdf extension. The field computer saves one coverage file for each product and each job. Coverage files are used by the field computer OS and are not viewable.
- The Shapefiles folder contains reports which the field computer generates during file maintenance. Each product applied during each job will have a .shp, .shx, .prj and .dbf file. Specialized software may be required to view the shapefile reports.
- The Reports folder contains bitmap reports which the field computer generates during file maintenance. Each product applied during each job will have a .bmp file. Bitmap reports are viewable on any computer.
- A Slingshot folder will be created for any job for which a job data package (\*.jdp.zip) is exported to the USB flash drive. The Slingshot folder contains the files required to upload to a Slingshot viewer or user account to create reports or archive job information. Review the *Performing File Maintenance* section on page 141 for more information on exporting a job data package to a connected USB flash drive.

**Rx Maps Folder.** Prescription maps saved on the USB drive are located in the rxMaps folder. Each map must have the .shp, .shx, and .dbf files associated with the prescription map saved in this folder.

Special software may be required to view the rxMaps files.

**Spray Zones Folder.** Any AccuBoom spray zone maps transferred to the USB drive are stored in the spray zones folder. Files saved in this folder will have the .zone extension. Each spray zone map creates one .zone file.

Spray zone files are used by the field computer OS and are not viewable.

# Updates

Software updates for the field computer will be available periodically from the Raven web site:


[www.ravenprecision.com](http://www.ravenprecision.com)



1. Locate the latest Envizio Pro or Envizio Pro II update and select it to display the release notes page.

**Note:** Verify that the correct product and software version is displayed at the top of the release notes before proceeding.


2. The release notes page may have important information about the software update and how updating the field computer may affect operation. Please read this page and be sure to follow any special instructions.
3. Select the 'Download Now' link at the bottom of the page to begin downloading the software update.
4. If the following dialog displays, select the 'Save' option to save the files to a home or office computer.

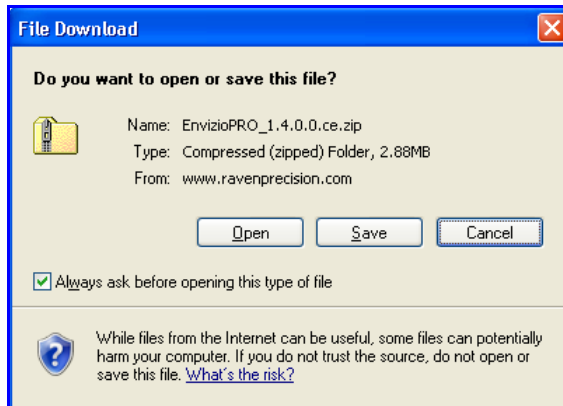

Use the computer's navigation utility to select a location for the download.

**Note:** Select an easily accessible location for the download or write down the location to help locate the downloaded files later.

- Once the download has finished, unzip or extract the software update to a USB flash drive.

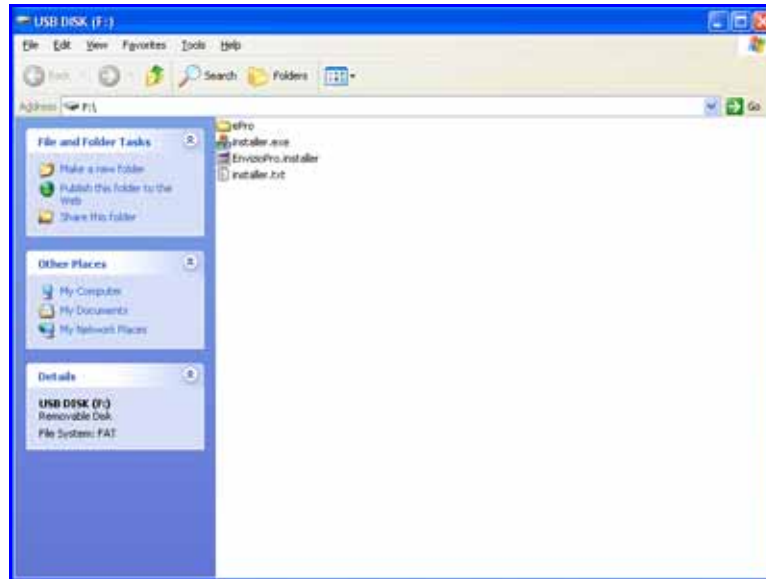


**Note:** Unzip the software update directly to the flash drive's root directory (i.e. "F:\", where F is the drive letter of the USB flash drive). The field computer will not search subdirectories or folders to find these updates.

## Applying Software Updates

Use the following procedure to apply software updates to the field computer.

- Before inserting the flash drive into the Envizio Pro or Envizio Pro II, switch the power on and wait for the field computer to power up.
- From the Home screen, select the Tools menu icon and touch the Updates icon located in the Computer Menu.

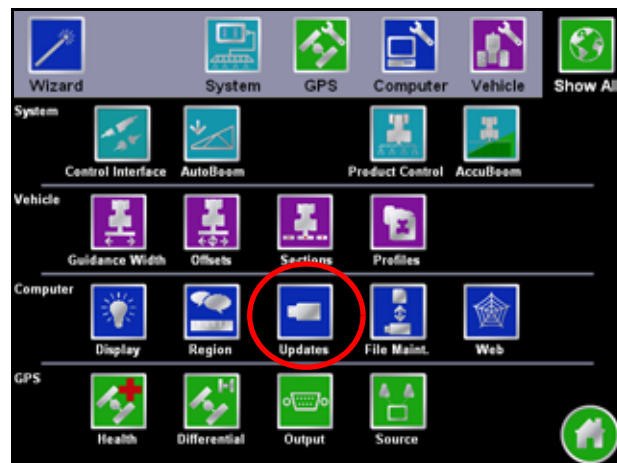

3. Insert the USB flash drive with the extracted software update into an available USB port on the field computer. A list of the available updates will appear on the screen.



**Note:** The 'EnvizioPro\_NoCanDemo' update is for demonstration purposes only. Do not select this option for normal operation applications.

4. Select the software update and touch the Accept icon to begin updating the field computer.
5. Once the software update is finished, restart the field computer.





---

## *Introduction*

AccuBoom is an automatic boom or implement section control feature that can be used in conjunction with the Envizio Pro or Envizio Pro II field computers. The AccuBoom feature allows the field computer to automatically control boom or implement sections by referencing the as-applied or coverage map. When AccuBoom detects a section entering an area where a product has previously been applied, AccuBoom will automatically turn that section Off. When the section leaves the previously applied area, AccuBoom automatically turns the section back On.

**Note:** *Prior to using the AccuBoom feature with the Envizio Pro or Envizio Pro II, the supporting hardware components must be purchased and installed for the specific machine. Contact a local Raven dealer for more information.*

## CAN Switch Box


If a Raven CAN Switch Box is installed with the field computer, the section switches must be in the 'Accu' position to allow AccuBoom control over the assigned sections. If the section switches are in the 'On' or 'Off' position, the AccuBoom system will treat the section as overridden and will not automatically turn the section on or off based on previous application areas or field boundaries.

**Note:** *The CAN Switch Box must be used as the primary control interface for section, master or product control status.*

***Make sure to toggle the master switch to the off position when closing or exiting a job to avoid unintentional product application once the field computer or control console closes application management functions. It is also good practice to shut off product and section switches when the application system is not being used.***

## AccuBoom™ Setup

Prior to using the AccuBoom feature of the field computer, the AccuBoom node must be programmed. Touch the AccuBoom icon located within the System menu of the Tools menu to display the AccuBoom Configuration screen.

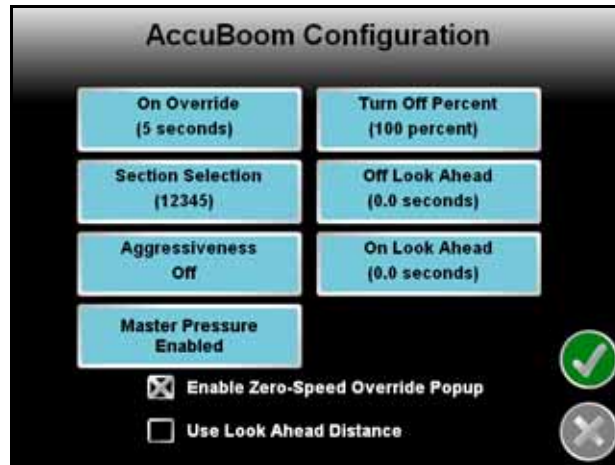

**Note:** If the Function Disabled screen appears when the AccuBoom icon is selected, troubleshoot the AccuBoom node. See the CAN Troubleshooting section in Chapter 4, CAN Networking and Diagnostics or Chapter 11, Troubleshooting, for help troubleshooting the AccuBoom node.

The following options are available on the AccuBoom Configuration screen.

### On Override

If AccuBoom is enabled during a job, the AccuBoom icon is displayed in the lower left corner of the Guidance screen.




If the CAN Switch Box is installed with the field computer, the AccuBoom On Override feature can be activated by toggling the 'Master' switch to the 'Override' position momentarily. The AccuBoom On Override time will begin when the switch returns to the 'On' position.

**Note:** Holding the 'Master' switch in the 'Override' position will allow the operator to extend the override time without modifying the override time.



To enable the AccuBoom Override:

1. Touch this icon to display the AccuBoom Popup.

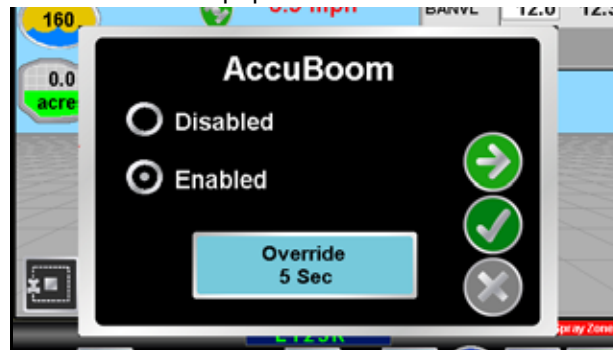

2. Touch the Override button. AccuBoom section control will toggle all sections on for the number of seconds displayed.

The On Override feature is useful when backing into corners during boundary spraying, to begin applying product from a complete stop or to apply additional product to specific area of a field.

**Note:** Touch the Next icon to quickly access the AccuBoom Configuration screen while a job is in progress.

## Section Selection

The section selection feature allows the operator to select which sections will be controlled by AccuBoom.

For example, if the machine has fence row nozzles which the operator wants to control manually, deselect the corresponding sections on the Section Selection screen by removing the green check below the desired sections. The vehicle's individual section switches must be used to manually turn the fence row nozzles on or off.

**Note:** With the AccuBoom feature installed, the status of the boom sections may appear as follows:


- Green - The boom section is currently on. AccuBoom will control this section if AccuBoom control has been enabled and any section switches in the machine are in the on position.
- Amber - The boom section is currently off, but AccuBoom control is enabled for the boom section. AccuBoom has shut off this section due to coverage or spray-zone mapping.
- White - The boom section is currently off and AccuBoom control is disabled for the section. AccuBoom will not control this section automatically.

## Aggressiveness Factor

The look-ahead values set the amount of time ahead of the vehicle (based on vehicle speed) which the field computer will scan for zone boundaries or unapplied areas when turning boom sections on or off. By default, AccuBoom overrides any additional zone boundaries detected until the look-ahead time has passed. For example, if the turn-on look-ahead value is set to 5 seconds and AccuBoom detects an unapplied area 5 seconds ahead of a boom section, AccuBoom toggles that section on and will ignore subsequent commands to turn that section off until the section has entered the unapplied area.

For sections at the end of larger booms or where sharp turns or aggressive maneuvering is necessary, this override may cause unexpected skips in coverage. The aggressiveness factor uses the user defined look-ahead values to adjust AccuBoom response for these driving styles and/or field areas requiring aggressive

maneuvering when crossing spray zones. Higher aggressiveness settings will increase the override time for subsequent AccuBoom section control commands.

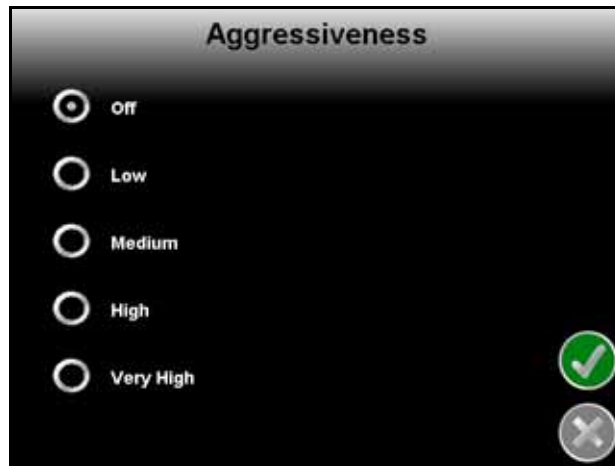

To set the AccuBoom aggressiveness from the main screen:

1. Touch the Tools Menu and select the AccuBoom icon located within the System menu.
2. Touch the Aggressiveness button.
3. Select the desired aggressiveness setting to match the operator driving style or requirements.
4. Touch the accept icon to save the aggressiveness factor setting and return to the AccuBoom Configuration screen.

## Master Pressure

If the product control node is capable of controlling the AccuBoom feature based upon boom pressure, the Master Pressure button will be displayed on the AccuBoom Configuration screen.

Touch the master pressure button to display the AccuBoom Master Pressure screen and configure the master pressure feature. This feature allows the field computer to enable or disable AccuBoom control based upon the liquid pressure at the booms.

**Note:** *The master pressure feature requires a pressure transducer to monitor the pressure in the main product line. Contact a local Raven dealer for details or to purchase an optional pressure transducer. Disable the master pressure feature if a pressure transducer is not installed with the CANbus system.*

## On Pressure

Set the pressure at which the field computer will allow the AccuBoom feature to automatically control boom sections.

Since boom pressure may fluctuate slightly when sections activate, it is recommended to set this value above the minimum desired boom pressure to ensure adequate pressure to maintain the spray pattern.

## Off Pressure

Set the pressure at which the field computer will shut off all AccuBoom controlled sections and disable automatic section control. All AccuBoom controlled sections will be overridden off until the boom pressure rises above the set 'On Pressure' value. If the boom pressure falls below the off pressure as sections are enabled when the on pressure setting is reached, reduce the off pressure value to allow the system to being application.

**Note:** *The 'On Override' feature will not override boom sections on if the boom pressure is below the 'Off Pressure' setting.*

## Turn Off Percent

This value controls the percentage of the boom that must cross a field or spray boundary, or enter a previously applied area, before AccuBoom will control that boom section. The default value is 100%.

Using the default setting, when 100% of a boom section crosses into a no-spray zone or previously applied area, AccuBoom will toggle the boom section off.

**Note:** *If the value is set to 0%, the booms will not turn off automatically.*

## Look Ahead

Set the AccuBoom Look Ahead setting to the number of seconds (determined by speed) the field computer is allowed to scan in front of the vehicle's current position for spray zone map features. The On and Off Look Ahead settings may help to compensate for the time it takes to open or close control valves based upon the spray zone map.

A non-zero "On" Look Ahead value allows AccuBoom to begin opening control valves while a non-zero "Off" Look Ahead will allow AccuBoom to begin closing valves.

**Note:** *Setting the Look Ahead values too high may cause the control valves to begin opening or closing too early. This may cause overlaps, skips or undesirable product application in some areas. Generally, these settings should not exceed 5 seconds and a value between 1 to 2 seconds will yield the best results.*

## Use Look Ahead Distance

Enable the Use Look Ahead Distance option on the AccuBoom Configuration screen to set look-ahead values in units of distance rather than time.

**Note:** *The vehicle must travel at a constant speed while using the look-ahead distance.*

## Enable Zero Speed Override Popup

Check the Enable Zero Speed Override Popup option to display the AccuBoom Popup screen during AccuBoom enabled jobs.

## Enabling AccuBoom™

To use the AccuBoom feature with the product control system, AccuBoom must be enabled. AccuBoom cannot be enabled while a job is in progress. To Start or Resume a job with the AccuBoom feature enabled:

1. Select the Start Job icon on the Home screen.




2. Touch the AccuBoom button on the Verify Settings screen (See Chapter 6, *Basic Operation*, for details on other settings and features enable on the Verify Settings screen).



3. Select the Enable AccuBoom option to allow the AccuBoom feature to automatically control boom or implement sections. Leaving this option blank will disable AccuBoom. Once the Enable AccuBoom option is selected, the AccuBoom screen will appear similar to the following:



4. Leave the 'Use Spray Zone Map' option deselected to use Standard AccuBoom section control only. See the *AccuBoom™ Modes* section on page 156 for more information on the AccuBoom modes.  
Touch the Accept icon and skip to step 7 if Standard AccuBoom is the desired mode of operation for this job. Proceed to step 6 to setup a spray zone map for this job.
5. Select the 'Use Spray Zone Map' option to enable the spray zone mapping mode.  
The Start Job - Select Spray Zone Map screen is displayed when the 'Use Spray Zone Map' option is enabled.

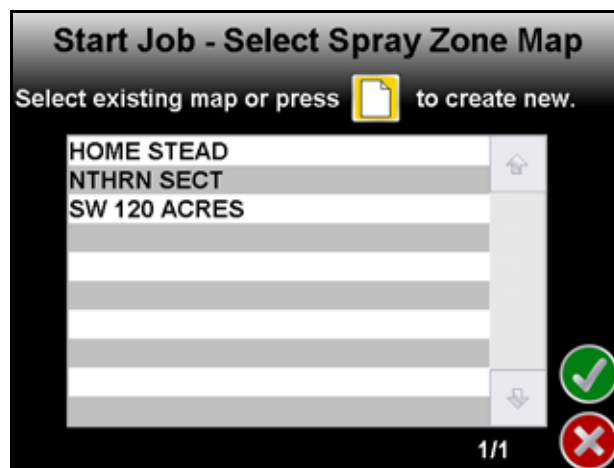

- a. Select the name of a previously saved spray zone map to use with this job and touch the accept icon to return to the Start Job - Verify Settings screen.
- b. To create a new map, touch the Create New icon and enter a name for the spray zone map that will be created within the job.

**Note:** Spray zone maps and map file names cannot begin with a space.

6. Touch the Accept icon to save the entered name and return to the Verify Settings screen.
7. Verify the other available settings or features are setup correctly before beginning the job.

# AccuBoom™ Modes

The available modes for operating AccuBoom are:

- Standard AccuBoom Mode
- Spray Zone Mapping Mode

## Standard AccuBoom™ Mode

In jobs using Standard AccuBoom mode, spray zone maps cannot be created or loaded. Automatic section control is based upon the coverage map only. As boom sections enter previously applied areas, AccuBoom will automatically turn that section Off. When the section leaves the previously applied area, AccuBoom automatically turns the section back On.

The standard field boundary tools are used while operating in Standard AccuBoom mode. Refer to the *Field Boundary* section on page 81 for information on the standard field boundary tools.

Spray zone maps cannot be loaded or created in the Standard AccuBoom mode. To use or create a spray zone map, be sure to select the 'Use Spray Zone Map' option during the Start Job - Verify Settings procedure. See the *Enabling AccuBoom™* section on page 154 for help enabling spray zone maps.

## Spray Zone Mapping Mode

Spray zone maps create features within a field which allow AccuBoom and the field computer to automatically shut off or turn on product application as the machine travels through the field. The field computer may be used to create and save AccuBoom spray zone maps for each field in which automatic section control is desired.

**Spray Zones.** In areas where product application is desired, a spray zone allows AccuBoom to turn on boom sections and the field computer to control application rates as normal.

**No-Spray Zones.** No-spray zones may be created and saved around any areas in which product application should be avoided, such as waterways or around well heads. AccuBoom uses the spray zone map to control boom sections as the machine travels through the field.

For example, as the boom crosses into a no-spray zone, AccuBoom will automatically shut off any boom section that enters the no-spray zone while other sections remain enabled. As the sections re-enter unapplied spray zones, AccuBoom will automatically toggle product application back on.

**Field Boundaries.** Field boundaries within an AccuBoom enabled job automatically create a spray zone map based upon the completed boundary. A field boundary recorded without the AccuBoom feature enabled can be converted to an AccuBoom field boundary later. See the *Loading a Field Boundary* section on page 157 for details.

**Note:** *A job file can be saved with any number of spray or no-spray zones, but a job file may only contain a single field boundary.*

Within the completed boundary, AccuBoom assigns the area as a normal spray zone. No-spray zone's can be recorded later to edit the area within the field boundary. AccuBoom assigns a minimum of three boom or implement widths outside of the completed field boundary as a no-spray zone.

**Note:** *Do not approach nurse trucks or refilling stations while automatic section control is enabled. Toggle the vehicle's master switch to keep AccuBoom from turning on sections unexpectedly.*

*If the 'Use Spray Zone Map' option is not selected during the Start Job - Verify Settings process, AccuBoom will not assign spray/no-spray zones to completed field boundaries.*


## Using Spray Zone Maps

An AccuBoom spray zone map may contain numerous spray and no-spray zones for each field. Spray zone maps may be modified at any time using the available tools and features of the spray zone mapping mode. The following sections will cover various methods of using spray zone maps and field boundaries stored on the field computer.

### Loading a Field Boundary

A field boundary recorded without the AccuBoom feature enabled can be loaded as an AccuBoom field boundary within a spray zone mapping enabled job. To load a standard field boundary into an AccuBoom enabled job:

1. Touch the Menu icon in the lower right corner of the Guidance screen.
2. Select the Spray Zone Mapping Tools icon.
3. Select the Load Field Boundary icon.  
A list of available field boundaries currently saved on the field computer will display.
4. Select the name of the job with the desired field boundary and touch Accept icon. The selected field boundary is displayed on the Guidance screen.

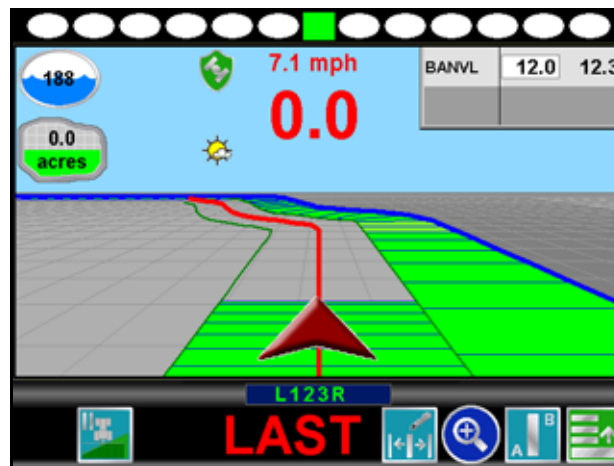

## AccuBoom™ Mapping Tools

The following tools are available via the Menu on the Guidance screen during an AccuBoom enabled job with spray zone mapping.



Select the spray zone mapping tools to display AccuBoom and spray zone map tools available for the current job. Tools displayed in this menu may only appear if certain map features are present within the current job. Read the descriptions of the following tools for more information regarding when the tool or feature is available.



While editing spray zone maps, the Home button is replaced with the Accept button. To save the currently displayed map and restore normal Menu tools, select the Accept button.



Touch the Record No-Spray Zone icon to begin recording points along a no-spray zone boundary. The area inside of the completed boundary will become a no-spray zone.



Touch the Record Spray Zone icon to begin recording points along a spray zone boundary. The area inside of the completed boundary will become a spray zone.



Touch the Record Field Boundary icon to create a new AccuBoom field boundary. With spray zone mapping mode enabled, AccuBoom will assign a minimum of three boom widths outside of the completed boundary as a no-spray zone.

## On-Screen Tools

While recording a spray zone map feature, the following icons will be displayed on the Guidance screen.

### Pause

Select the Pause button displayed on the Guidance screen to temporarily interrupt recording the current spray zone map feature.

Pause No-Spray Zone



Pause Spray Zone



Pause Field Boundary



This feature is useful if the vehicle course will move away from the boundary path to refill a tank, etc.

### Resume

While Paused, a Resume button will replace the Pause and End buttons on the Guidance screen. Touch this button to resume recording the paused spray zone feature.

Resume No-Spray Zone



Resume Spray Zone



Resume Field Boundary





## Stop

When finished recording a Zone or Boundary, touch the Stop button to close Zone or Boundary.




**Note:** The field computer will draw a straight line from the starting point of the feature to the machine's current location when closing the spray zone map feature.

## Creating an AccuBoom™ Spray Zone Map

The following is an example of recording an AccuBoom field boundary in the spray zone mapping mode. Other spray zone features may be recorded using the same procedure by using the buttons and tools as described in the *AccuBoom™ Mapping Tools* section on page 158.


1. On the Guidance screen, access the Menu and select the AccuBoom Boundary Tools icon.

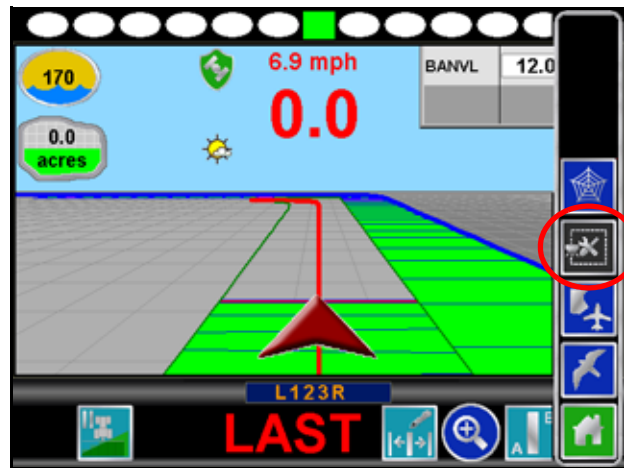


While editing spray zone maps, the Guidance screen will display a notice above the Menu button.



2. Select the Record Field Boundary button to begin recording a new AccuBoom field boundary.

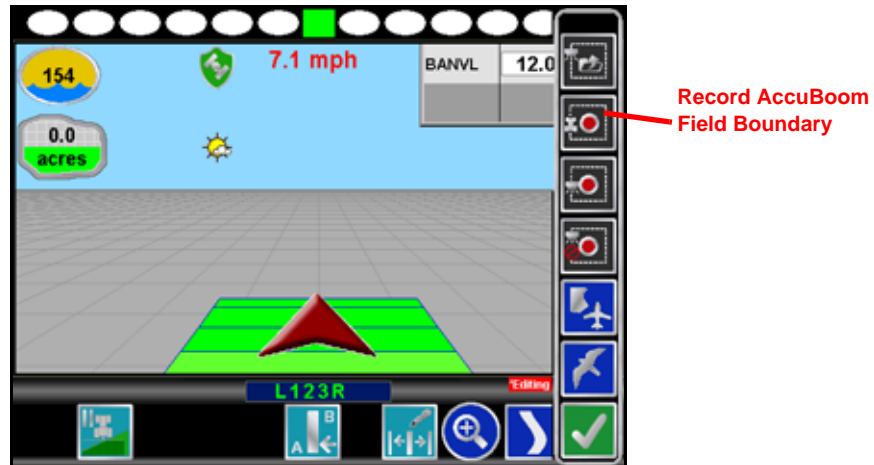


3. The Select Reference Point screen appears.

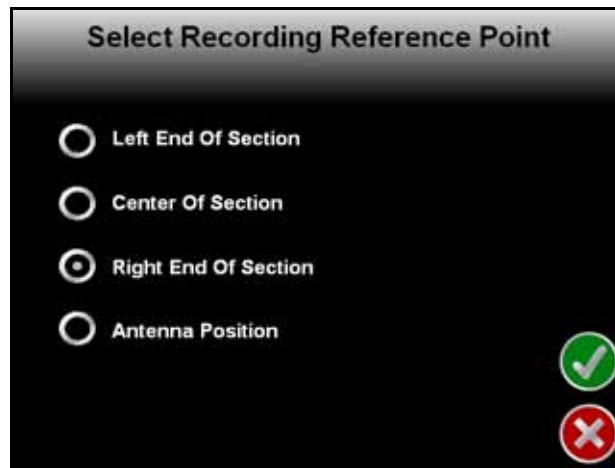

The Reference Point is the point on the vehicle where the field computer will record the selected feature's boundary.

- Left and Right End of Boom options set the Reference Point at the left or right end of the guidance width.
  - Center of Boom sets the Reference Point at the center of the configured guidance width.
  - Antenna Position uses the left/right and fore/aft offset values to determine the DGPS antenna location.
4. To set the Reference Point, select the option that corresponds to the orientation of the vehicle with respect to the feature being recorded and then touch the Accept icon.

- The Guidance screen will re-appear and the field computer will begin recording the feature at the selected Reference Point. On the Guidance screen, a Pause and End icon appear for the feature currently being recorded.

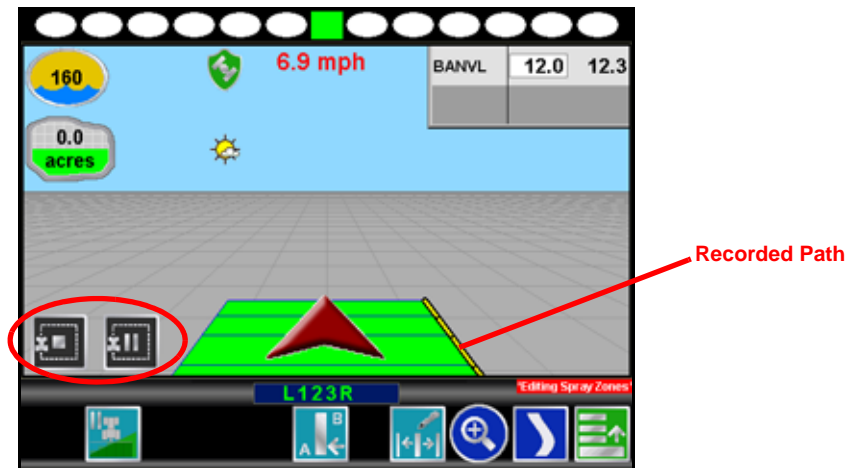

- Begin driving along the boundary while keeping the Reference Point aligned with the field boundary. A yellow path will be created on screen to display the path recorded.
- Touch the Stop button to finish recording the current feature on the AccuBoom map.

**Note:** The field computer will close the feature by drawing a straight line from the machine's current location to the point where recording of the feature was started. Area's inside and outside of the feature will be treated accordingly.

- Repeat step 2 through step 7 for any additional features.
- When finished recording features for the AccuBoom map, touch the Accept button to save the currently displayed AccuBoom map and close the AccuBoom tools menu.

**Note:** Spray/no-spray zone features created while recording a field boundary will not appear until the Save and Close icon is selected from the AccuBoom Tools Menu.

## AccuBoom™ Spray Zone Map Examples

The following screens are examples of AccuBoom maps displayed on the Envizio Pro or Envizio Pro II field computers.

FIGURE 1. Field Review Mode While Recording a Boundary

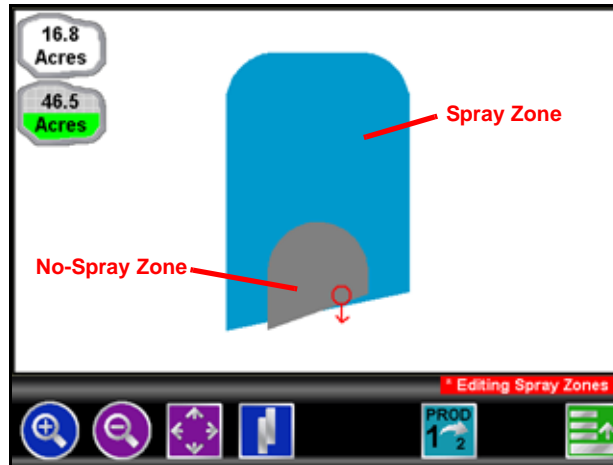


FIGURE 2. Field Review Mode with Completed AccuBoom™ Field Boundary and No-Spray Zone

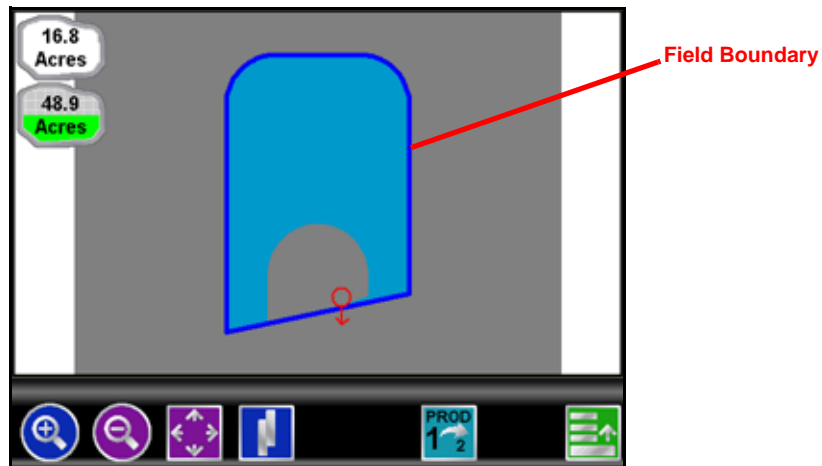


FIGURE 3. Guidance screen in Down Field View with Completed Field Boundary


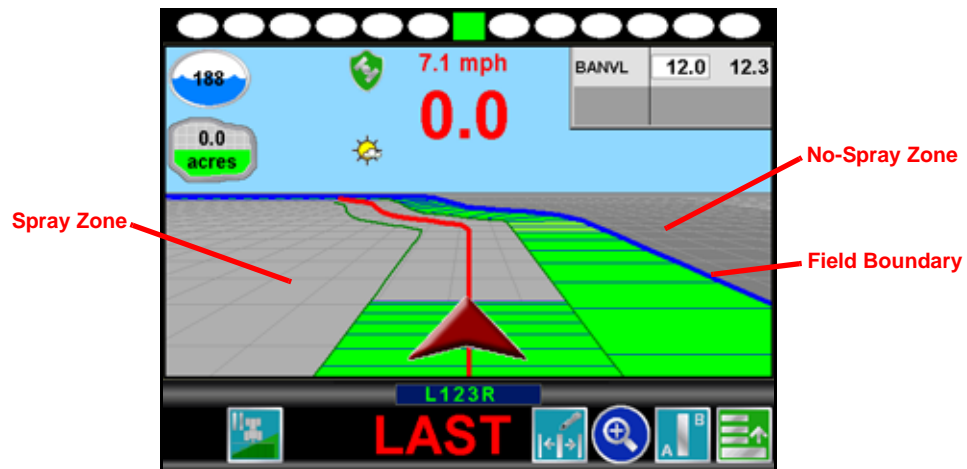


FIGURE 4. Field Review Mode with Completed AccuBoom™ Field Boundary and No-Spray Zone



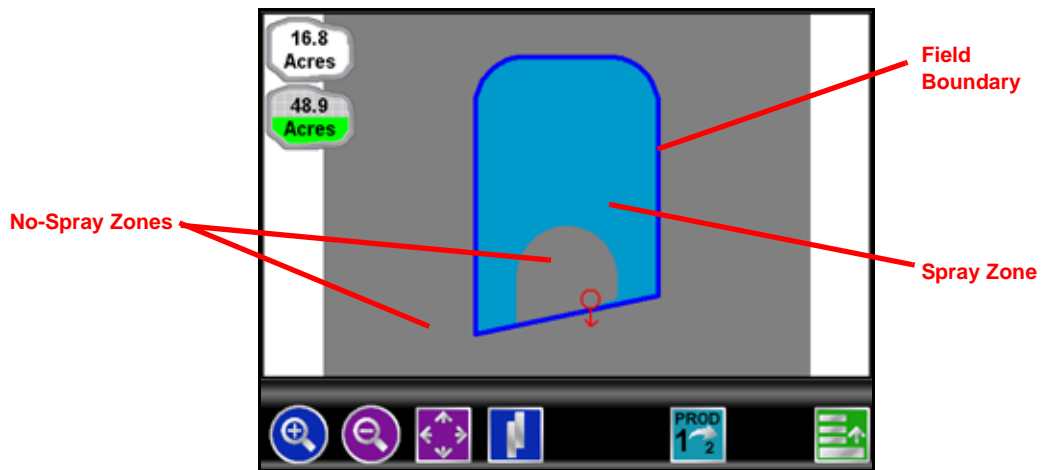


---

## *Introduction*

The AutoBoom feature, used in conjunction with an Envizio Pro or Envizio Pro II, adjusts the height of the booms automatically. Using the machine's boom hydraulics, the AutoBoom parallel hydraulic system always keeps the hydraulic valves open, gently balancing the hydraulic cylinders and allowing the booms to raise or lower effortlessly.

The field computer and AutoBoom system must be calibrated and properly setup prior to using the AutoBoom feature with the Envizio Pro or Envizio Pro II. See the calibration instructions specific to the Glide Series AutoBoom system for details on setting up the AutoBoom system.

	<b>NOTICE</b> Read all safety requirements and precautions in the machine specific installation manual prior to operating a machine equipped with the AutoBoom feature. Failure to follow safety precautions may lead to damage to equipment, injury or death.
---	---

**Note:** *If the Function Disabled screen appears when the AutoBoom icon is selected, troubleshoot the AutoBoom node. See Chapter 11, Troubleshooting or the CAN Troubleshooting section in Chapter 4, CAN Networking and Diagnostics, for help troubleshooting the node.*

There are two AutoBoom systems that can be controlled by the Envizio Pro or Envizio Pro II:

### PowerGlide Plus

PowerGlide Plus AutoBoom utilizes gauge wheels to maintain optimum boom height while state-of-the-art hydraulics are used to maintain constant hydraulic pressure in the lift cylinders. PowerGlide Plus systems are typically used in pre-emergent applications.

## UltraGlide

UltraGlide AutoBoom replaces the gauge wheels with state-of-the-art ultrasonic sensors to measure the boom's height above the ground. Since no part of the machine must come into contact with the ground or crop, UltraGlide systems are ideal for use in post-emergent as well as pre-emergent applications.

**Note:** *Terrain conditions as well as the machine's hydraulic system will dictate the actual speeds which may be achieved while applying with an Engaged AutoBoom system. Typically, rougher and more varied field terrain will require slower AutoBoom application speeds.*


---

## AutoBoom™ Operation

Once properly calibrated, operation of the AutoBoom feature with the Envizio Pro or Envizio Pro II is as easy as toggling the feature on and enabling height control for each boom. AutoBoom must be both On and Enabled for each boom before the system will manage boom height. The field computer does not require an active job to enable the AutoBoom feature.

### Status Display

During a job, the status of the AutoBoom system is displayed on the Guidance screen.

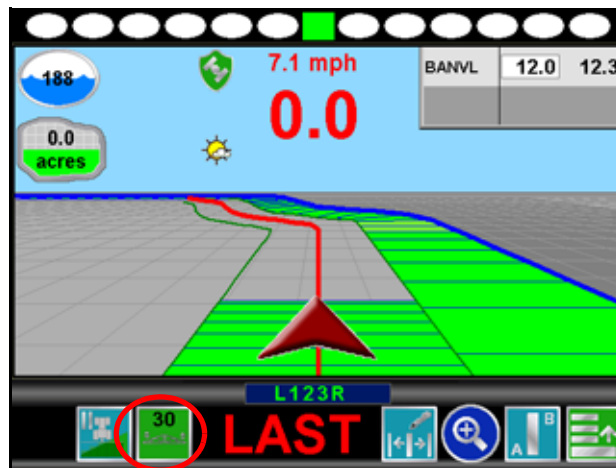

Touch the AutoBoom Status Display to view the main AutoBoom Settings screen.

**Note:** *If operating with an UltraGlide AutoBoom system, the set Sensor Height is displayed in the Status Display. If an optional center rack sensor is installed, the actual height of the center rack will be displayed in this area.*



## AutoBoom™ Indicators

The following sections offer examples of the AutoBoom status indicators which may be displayed on the Guidance screen during a job. The AutoBoom status display will appear differently depending on the capabilities of the AutoBoom system installed and connected to the field computer.

### Standard AutoBoom

The following indicators may be displayed on the Guidance screen for a standard AutoBoom system:



The AutoBoom Off indicator is displayed when the AutoBoom feature is turned off. Boom height management is not enabled.



The AutoBoom On/Disabled indicator is displayed when the AutoBoom feature is On but boom height management is not enabled.



The AutoBoom On/Left Enabled indicator displays when AutoBoom is On and boom height management is only Enabled for the left boom. AutoBoom will not adjust the height of the right boom.



The AutoBoom On/Right Enabled indicator displays when AutoBoom is On and boom height management is only Enabled for the right boom. AutoBoom will not adjust the height of the left boom.



The AutoBoom On/Enabled indicator displays when AutoBoom is On and boom height management is Enabled for both booms.

### AutoBoom Center Rack Control

For AutoBoom systems with the center rack control feature installed, the Guidance screen will also display the current status of the center rack.

#### ***For Example:***



Autoboom is on and the system will automatically control the height of the center rack. AutoBoom height control of the left and right booms is not enabled.



Autoboom is on and the system will automatically control the height of the center rack and right boom. AutoBoom height control of the left boom is not enabled.



Autoboom is on and the system will automatically control the height of the center rack and booms.



*Troubleshooting Information*

This chapter contains information on troubleshooting possible issues with the Envizio Pro or Envizio Pro II control system. Please read through this chapter before contacting technical support, as many common issues and solutions are covered here.

## General Issues

Issue	Possible Cause	Solution
Field computer does not power up.	<ul style="list-style-type: none"> <li>• No power to unit</li> <li>• Blown fuse</li> <li>• Poor ground</li> <li>• Unit is locked up</li> </ul>	<ul style="list-style-type: none"> <li>• Check for +12V DC on pin 16 of the power cable.</li> <li>• Check for continuity in 10 amp fuse in power cable.</li> <li>• Make sure that pin 1 is connected to the battery ground.</li> <li>• Disconnect power for approximately 3 seconds and re-connect.</li> </ul>
CAN node(s) not detected.	<ul style="list-style-type: none"> <li>• No power to CAN node(s)</li> <li>• Weak or dirty power to the CAN node(s)</li> <li>• Water in CAN node(s)</li> <li>• Corrosion in CAN connections</li> <li>• Broken cable to node</li> <li>• Low power voltage</li> </ul>	<ul style="list-style-type: none"> <li>• Verify that there is 12 volt power and ground to the CAN node's logic power</li> <li>• Verify that the 12 volt power to the CAN node is coming from the switch relay that is connected to the battery</li> <li>• Do not direct any pressure or wash stream directly at the CAN node(s) to prevent water and moisture from building up in the nodes.</li> <li>• Disconnect and clean the CAN connections.</li> <li>• Repair or replace cable.</li> <li>• Verify at least +10V DC at node.</li> </ul>
Touch screen does not respond to touch	<ul style="list-style-type: none"> <li>• Area touched does not include a selectable function</li> <li>• System is busy processing a previous request</li> </ul>	<ul style="list-style-type: none"> <li>• Touch an area of the screen that contains a selectable function.</li> <li>• Wait for system to finish processing previous requests.</li> </ul>

Issue	Possible Cause	Solution
Red DGPS Status indicator on the Home screen	<ul style="list-style-type: none"> <li>• GPS cable is not connected</li> <li>• No power to the GPS receiver</li> <li>• Incorrect port setting</li> <li>• Incorrect GPS source selected</li> </ul>	<ul style="list-style-type: none"> <li>• Check the cable between the GPS receiver and the field computer.</li> <li>• Check power to the GPS receiver.</li> <li>• Make sure that the port settings on the field computer and the GPS receiver are the same.</li> <li>• Verify that the correct GPS Source is selected. <b>(Tools Menu&gt;GPS menu&gt;Source)</b></li> </ul>
Product node(s) not detected.	<ul style="list-style-type: none"> <li>• Wrong control type selected on the control interface screen.</li> <li>• Node connection issue in CAN system</li> </ul>	<ul style="list-style-type: none"> <li>• Verify the control type setting is correct for the control system. <b>(Tools Menu&gt;System menu&gt;Control Interface)</b>.</li> <li>• See the <i>CAN Troubleshooting</i> section on page 34 for CAN troubleshooting information.</li> </ul>
Field computer does not completely power down	<ul style="list-style-type: none"> <li>• The orange wire is connected directly to a 12V power source</li> </ul>	<ul style="list-style-type: none"> <li>• Do not connect the orange wire to a source of +12VDC.</li> </ul>
Vehicle battery discharges overnight	<ul style="list-style-type: none"> <li>• CAN nodes are wired directly to the battery</li> </ul>	<ul style="list-style-type: none"> <li>• Wire the CAN nodes through a relay or switched power source.</li> </ul>

## Setup Issues

Issue	Possible Cause	Solution
Previous settings have been lost	<ul style="list-style-type: none"> <li>• Settings data deleted from memory</li> <li>• Poor CAN connections</li> </ul>	<ul style="list-style-type: none"> <li>• Review Chapter 7, <i>Tools Menu</i> or Chapter 8, <i>Software Updates and File Maintenance</i>, for data information.</li> <li>• See the <i>CAN Troubleshooting</i> section on page 34 for more information.</li> </ul>

## Job Issues

Issue	Possible Cause	Solution
Section numbers do not turn green (remain white)	<ul style="list-style-type: none"> <li>• Boom switches are turned off</li> <li>• AccuBoom enabled but machine not spraying</li> <li>• CAN is disconnected</li> <li>• The section is not set up properly</li> <li>• Wrong boom master option selected</li> <li>• Nodes not completely programmed</li> <li>• The section is disconnected</li> </ul>	<ul style="list-style-type: none"> <li>• Turn section and master switches on.</li> <li>• Move the machine out of the applied zone.</li> <li>• See the <i>CAN Troubleshooting</i> section on page 34 for more information.</li> <li>• Check the section setup in the Boom Sections screen of the Vehicle menu.</li> <li>• Verify the boom master option setting is correct for the control system. <b>(Tools Menu&gt;System menu&gt;Control Interface)</b></li> <li>• Check node calibration and ensure all settings have been completed.</li> <li>• Check the connection and wiring to the boom or implement.</li> </ul>
AccuBoom with Raven serial console, sections will not turn off	<ul style="list-style-type: none"> <li>• Console section switches are in the 'On' position</li> </ul>	<ul style="list-style-type: none"> <li>• Section switches on Raven serial console must be in the 'Off' position.</li> </ul>

Issue	Possible Cause	Solution
CAN AccuBoom will not turn on	<ul style="list-style-type: none"> <li>Section switches are in the 'Off' position</li> </ul>	<ul style="list-style-type: none"> <li>Section switches for CAN AccuBoom must be in the 'On' position.</li> </ul>
Date and time are incorrect (Default job name on the Verify Settings screen shows incorrect date and time)	<ul style="list-style-type: none"> <li>No GPS</li> <li>No GPS RMC or ZDA</li> <li>Incorrect time zone selected</li> </ul>	<ul style="list-style-type: none"> <li>Make sure that the GPS receiver is operating properly and that the DGPS Status indicator displays as a green icon in the upper left corner of the Home screen.</li> <li>Check the GPS receiver to make sure the RMC or ZDA string is selected.</li> <li>Verify the settings on the Time Zone Settings screen are correct (<b>Tools Menu&gt;Computer menu&gt;Time Zone</b>).</li> </ul>

## Coverage Map Issues

Issue	Possible Cause	Solution
Gaps displayed in coverage map	<ul style="list-style-type: none"> <li>Section widths not set correctly</li> <li>Guidance and section width not the same</li> </ul>	<ul style="list-style-type: none"> <li>Check sections widths and section center values.</li> <li>Set guidance width and section width to the same value.</li> </ul>
Cannot achieve target rate	<ul style="list-style-type: none"> <li>Driving too fast for vehicle</li> <li>Calibration numbers incorrect</li> <li>Speed calibration incorrect</li> </ul>	<ul style="list-style-type: none"> <li>Speed may exceed capabilities of the vehicle to deliver product. Slow down or configure the vehicle to supply a higher amount of product.</li> <li>Check and adjust the calibration settings and values.</li> <li>Check and adjust the speed calibration setting.</li> </ul>

## Error Messages

This section contains information regarding possible error messages displayed on the field computer and troubleshooting procedures.

### Job Error Messages

Issue	Possible Cause	Solution
AutoBoom node has gone offline		Refer to CAN Troubleshooting
AccuBoom node has gone offline		Refer to CAN Troubleshooting
Boom sense node has gone offline		Refer to CAN Troubleshooting
No CAN nodes have been found		Refer to CAN Troubleshooting

## GPS Error Messages

Issue	Possible Cause	Solution
Guidance Not Available	<ul style="list-style-type: none"> <li>• Displays when starting a job without a GPS signal</li> </ul>	<ul style="list-style-type: none"> <li>• Make sure a GPS receiver is connected to the field computer and that the receiver is powered up, then select Auto-Detect.</li> <li>• Make sure the correct GPS Source is selected (<b>Tools Menu&gt;GPS menu&gt;Source</b>)</li> </ul>
No Differential	<ul style="list-style-type: none"> <li>• Differential GPS has not been detected by the field computer</li> </ul>	<ul style="list-style-type: none"> <li>• Check the GPS receiver to make sure that it has the differential correction function. Contact the manufacturer for additional information.</li> </ul>
No GPS	<ul style="list-style-type: none"> <li>• Field computer does not detect a GPS signal</li> </ul>	<ul style="list-style-type: none"> <li>• Make sure that the GPS receiver is turned on and receiving a signal.</li> <li>• Make sure that the port setting for the field computer and the GPS receiver match.</li> <li>• Make sure that the required NMEA messages are turned on in the GPS receiver.</li> </ul>
High HDOP	<ul style="list-style-type: none"> <li>• Satellite constellation issue</li> </ul>	<ul style="list-style-type: none"> <li>• There is no issue with the DGPS system or cabling. Wait for the constellation issue to resolve before continuing job.</li> </ul>

## CAN Troubleshooting

Although the control algorithm is located within the CAN node, all of the same troubleshooting techniques used in a traditional hard-wired system still apply to a CAN system. CAN allows for modularization of the control system, but the behavior of the system remains the same. Flow and speed sensors, as well as the control valve and boom valves, are used in the same fashion. Below are some common causes for communication failures:

Issue	Possible Cause	Solution
CANbus cannot read the product node	<ul style="list-style-type: none"> <li>The node is not connected to the CANbus</li> </ul>	<ul style="list-style-type: none"> <li>Connect the node and re-initialize the field computer to read the product node.</li> </ul>
	<ul style="list-style-type: none"> <li>Node is not properly powered</li> </ul>	<ul style="list-style-type: none"> <li>Connect the clean power - 16 gauge red wire and high current power - 12 gauge red wire from the product node to a 12V DC power source that is capable of supplying power to all nodes connected to the CANbus system</li> </ul>
	<ul style="list-style-type: none"> <li>Node is not properly grounded</li> </ul>	<ul style="list-style-type: none"> <li>Connect the clean ground - 16 gauge white wire and the high current ground - 12 gauge white wire to a good, quality ground source. Raven recommends grounding the wires to the negative terminal of the battery.</li> </ul>
	<ul style="list-style-type: none"> <li>The nodes share power and ground connections</li> </ul>	<ul style="list-style-type: none"> <li>Make sure that each node has a separate power and ground connection.</li> </ul>
	<ul style="list-style-type: none"> <li>CANbus ends not terminated</li> </ul>	<ul style="list-style-type: none"> <li>Make sure that both ends of the CANbus system are properly terminated. Refer to the <i>Raven CANbus Network Installation Manual</i> for information on properly terminating the CANbus network.</li> </ul>
	<ul style="list-style-type: none"> <li>Corroded pins in CANbus connections</li> </ul>	<ul style="list-style-type: none"> <li>Check CANbus cable connectors for any highly corroded pins.</li> <li>Ensure dielectric grease has been applied to all cable connections exposed to weather and field conditions.</li> </ul>
	<ul style="list-style-type: none"> <li>Moisture in connection</li> </ul>	<ul style="list-style-type: none"> <li>Check CANbus cable connectors for any corroded pins.</li> <li>Ensure dielectric grease has been applied to all cable connections exposed to weather and field conditions.</li> </ul>
	<ul style="list-style-type: none"> <li>Connectors not seated properly</li> </ul>	<ul style="list-style-type: none"> <li>Check that all CANbus cable connectors are inserted fully (until the locking tab is engaged).</li> <li>Be sure to remove any moisture in connections which were not properly seated. Check for corroded pins and apply dielectric grease when reconnecting CANbus cables.</li> </ul>





## APPENDIX

# A

## *Calculating the Calibration Values*

### *Speed Cal*

Raven industries recommends the following values for the initial speed cal:

Sensor Type Setting	Used with	English	Metric
Radar/GPS	External Raven GPS Receiver	785	199
	Internal DGPS Receiver	812	206
	GPS Speed over CANbus	1000	254
	Raven Radar	598	152
Wheel	Wheel Magnets	1000	254
	Speedometer Drive Speed Sensor	612	155

These values are usually a good starting point and will generally yield adequate results; however, the speed cal should still be refined for each vehicle.

**Note:** *The GPS speed over CANbus feature is only available with specific Raven speed sense nodes.*

1. Make sure any section switches are turned OFF before powering the console ON.
2. In the System menu, touch the Product Control icon and touch the Speed button.
3. Touch the Distance button and then reset the odometer display to "0" using the keypad.
4. Drive 1 mile [1 kilometer]. The field computer will measure the distance driven using the original (or last programmed) speed cal.

**Note:** *Accelerate and decelerate slowly. To achieve the most accurate calibration, do **not** use the vehicle odometer or the field computer distance display to measure the actual distance driven. Use section lines or highway markers to determine the actual distance.*

5. At the end of the driven distance, view the distance display again and record the value.
  - a. The field computer distance should read a value of approximately 5280 [1000]. If the display reads between 5260-5300 [990-1010], the default value of 598 [152] is accurate for the speed cal value.
  - b. If the distance displayed is not between 5260-5300 calculate the speed cal with the formula:

$$CSC = \frac{OSC \times 5280}{D}$$

where CSC = Corrected Speed Cal, OSC = Old Speed Cal (speed cal number used to drive the test distance) and D = the field computer Distance reading. Round to the nearest whole number.

**For Example:**

Assume that the field computer odometer reads 5000 [980] after a known 1 mile distance has been driven using an initial speed cal value of 598 [152].

$$CSC = \frac{598 \times 5280}{5000} = 631.48$$

or

$$CSC = \frac{[152] \times [1000]}{[980]} = [155]$$


The Corrected Speed Cal value is 631 [155].

6. Touch the Speed button and use the keypad to enter the new value as the speed cal.
7. Verify the new speed cal derived in Step 5 by repeating Steps 2 through 4.

**Wheel Drive Speed Sensor**

1. Mark the tire on which the speed sensor is installed using chalk or a piece of tape as shown below.
2. Mark the corresponding spot on the ground.
3. Count 10 full revolutions of the wheel while traveling in a straight path. The mark must stop with the chalk or tape in the same orientation that it began at the starting point.

**FIGURE 1. Calculating the Speed Cal with a Wheel Magnet Speed Sensor System**

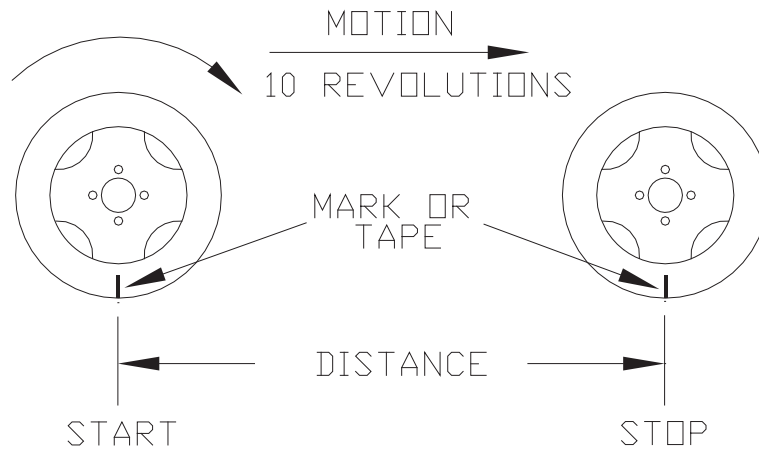

4. Mark the stopping point and measure the distance between the starting and stopping marks on the ground in inches [dm]. Round to the nearest whole number.

**Note:** *This measurement is critical to the performance of the console. **Measure Carefully.** Be sure tire is properly inflated before measuring. If possible, measurements should be made in the type of soil in which the vehicle will be operating. Tire circumference will vary when measured in soft or hard packed soil. For best results, measure several times and average the results.*

5. Enter this measurement as the new speed cal.

### Adjusting for Additional Magnets

Typically, four magnets are used with the wheel drive speed sensor. However, to ensure accurate speed readings for large tires and very low speed applications, additional wheel magnets may be necessary. Any even number of magnets may be used as long as they are of alternating color and equally spaced. After calculating the speed cal, this number must be adjusted according to the number of magnets installed using the following formula:

$$\frac{4}{NM} \times D = ADJ$$

where ADJ = Adjusted Speed Cal, NM = Number of Magnets used and D = the Distance Measured.

#### For Example:

The distance measured between starting and stopping marks is 1200 and six magnets are installed.

$$\frac{4}{6} \times 1200 = 800$$

The Adjusted Speed Cal is 800.

### Speedometer Drive Speed Sensor

1. In the System menu, touch the Product Control icon and then select Speed. Touch the Distance button and use the keypad to enter "0" as the distance displayed on the field computer.
2. Touch the Speed Cal button and use the keypad to enter a speed cal value of 612 [155].
3. Drive 1 mile [1 km]. The field computer will measure the distance driven using the speed cal value of 612.

**Note:** *Accelerate and decelerate slowly. To achieve the most accurate calibration, do **not** use the vehicle odometer or the field computer distance display to measure the actual distance driven. Use section lines or highway markers to determine the actual distance.*

4. Touch the Distance button.
  - a. The field computer odometer should display a value of approximately 5280 [1000]. If it reads between 5200-5350 [990-1010], the speed cal for the vehicle is 612 [155].
  - b. If the field computer odometer displays any other value, perform the following calculation:

$$\frac{OSC \times D_A}{D_o} = CSC$$

where OSC = Old Speed Cal, DA = Actual Distance travelled, Do = the field computer odometer Distance and CSC = the Corrected Speed Cal. Round to the nearest whole number.

#### For Example:

Speed Cal = 612 [155]  
 Actual Distance = 5280 [1000]  
 Field computer odometer reading = 5000 [980]

English Units:

$$\frac{612 \times 5280}{5000} = 646.3$$

Metric Units:

$$\frac{[155] \times [1000]}{[980]} = [158.1]$$

The Corrected Speed Cal value is 646 [158].

5. Touch the Speed button and use the keypad to enter the Corrected Speed Cal. To verify the corrected speed cal calculated above:
  - a. Re-zero the distance display as in step 1.
  - b. Repeat step 3 and step 4. If the field computer odometer reading still does not match the distance driven, use the new values and redo the calculation and repeat step 5.

---


## Liquid Applications

Use the following formulas to help calculate the boom or implement section widths for either broadcast or band applications.

### Boom Cal

For liquid sprayers, the boom cal value is the width of the individual boom sections

Calculate the width of each section by measuring the spacing between spray tips in inches [cm] and then multiplying by the number of tips in each boom section



### For Example:

20 tips in a section with spacing of 40 inches would yield:

$$20 \times 40 = 800 = SW$$

or a Section Width of 800 inches (approximately 67 feet). Enter 800 as the width for this section.

### Band Spraying Adjustment

To calculate the adjusted applied rate for band spraying applications, use the following formula:

$$\frac{BR \times BW}{S} = AR$$

Where BR = the Broadcast Rate, BW = the band width, S = the spacing between the tips and AR = the Adjusted Rate for band spraying.

### For Example:

If the Broadcast Rate is 20 GPA [200 L/ha], the band width is 14 inches [40 cm] and the tip spacing is 40 inches [100 cm]:

$$\frac{20 \times 14}{40} = 7$$

or

$$\frac{[200] \times [40]}{[100]} = [80]$$

Therefore, the adjusted rate is 7 gallons per acre or 80 liters per hectare.

## Meter Cal

The flow meter calibration number can be found on the tag attached to each flow meter. Copy the information from the tag for future reference as the tags may fade or be lost during equipment operation.


## Valve Cal

To ensure that the proper amount of product is being applied, the valve cal must be programmed for the type of control valve(s) connected to the control system. The field computer uses the valve calibration number to adjust the response time of the control valve motor to changes in the vehicle speed.

The following control valve calibration numbers are recommended for the valves listed:

Control Valve Type	Valve Cal
Standard (C-SD)	2123
Fast (C-F) or Fast Close (C-FC)	743
PWM (C-P) or PWM Close (C-PC)	43

Each digit in the calibration number corresponds to a specific function of the valve. The following functions apply to the digits in the valve calibration number:

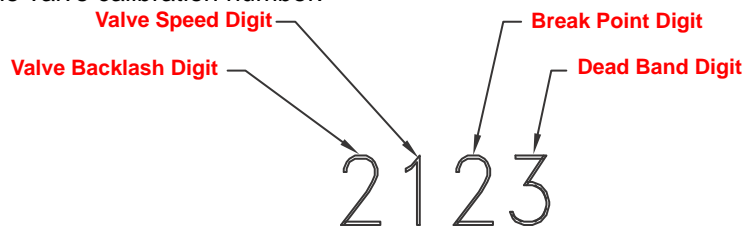

### Valve Backlash Digit

This value controls the time of the first correction pulse after detecting a change in correction direction. The values range from 1 to 9, where 1 is for a short pulse and 9 is for a long pulse.

**Note:** *The backlash digit is not used with a fast, fast close, PWM, PWM close or standard motor control valve.*

### Valve Speed Digit

This value controls the response time of the control valve motor. If the valve speed setting is too fast, the valve will over correct and the system can start to oscillate. The following valves have specific values:

- Standard Control Valve: This valve has a range of values from 1 to 9, with 1 being slow and 9 being fast.
- Fast and Fast Close Control Valve: These valves have a range of values from 0 to 9, with 0 for fast and 9 for slow.

**Note:** *The speed digit is not used with a PWM or PWM close valve.*

### Brake Point Digit

The Brake Point digit sets the percent away from the target rate at which the control valve starts to turn at a slower rate so that it does not overshoot the target rate. The values range from 0 to 9, where 0 is a 5% rate, 1 is a 10% rate and 90 is a 90% rate.

## Dead Band Digit

The Dead Band digit is the allowable difference between the target rate and the actual application rate. The values range from 1 to 9, where 1 equals 1% difference and 9 equals 9% of the difference.

## Rate Cal

The following information must be known in order to determine which spray nozzles to use with the sprayer.

- Nominal Application Pressure \_\_\_\_\_ PSI [kpa]
- Target Application Rate \_\_\_\_\_ GPA [lit/ha]
- Target Speed \_\_\_\_\_ MPH [km/h]
- Nozzle Spacing \_\_\_\_\_ inches [cm]

From this information, calculate the volume per minute per nozzle as follows:

$$NVPM = \frac{Rate \times Speed \times NS}{5,940 [60,000]}$$

where NVPM = Nozzle Volume per Minute (Gallons/Acre or [lit/ha]), Rate = Target Application Rate, Speed = Target Speed of Application and NS = Nozzle Spacing.

### **For Example:**

Application Pressure = 30 PSI, Target Application Rate = 20 GPA, Target Speed = 5.2 MPH and Nozzle Spacing = 20 inches

$$NVPM = \frac{20 \times 5.2 \times 20}{5,940} = 0.35$$

Using the calculated Nozzle Volume per Minute of 0.35 at an Application Pressure of 30, select a tip that is capable of these application specifications. Contact a local sprayer supply dealer for available nozzles or spray tips.

## Verifying Flow Rate Limits

The target rate for a field application also must be within the specified range of the flow meter measuring flow rate for the control channel.

Flow Meter Model	Flow Range
RFM 5	0.1 - 5 GPM [0.2 - 18.9 L/min]
RFM 15	0.3 - 15 GPM [1.1 - 56.8 L/min]
RFM 60P	1 - 60 GPM [3.8 - 210 L/min]
RFM 100	5 - 100 GPM [11.4 - 380 L/min]
RFM 200/ 200 Poly	15 - 200 GPM [56.8 - 760 L/min]
RFM 400	25 - 400 GPM [94.6 - 1515 L/min]

---

## Tiered Boom Settings

A tiered boom configuration has two or more booms stacked one directly in front of the other and may or may not have different sets of nozzles capable of applying different rates.

**Note:** *Specialized plumbing, cabling and a relay box are required to utilize a tiered boom configuration. Generally, sprayers are not setup for this feature from the factory.*

The boom tiers are connected to shut-off valves, which are controlled by a CAN single product control node (P/N 063-0172-373). This configuration allows the machine to control a much wider range of application rates than a standard, single boom configuration.

For example, a low application rate may be applied by turning on the first tier sections only. Higher application rates may be applied by switching to the second tier booms with larger nozzles. A third and an even higher rate can be achieved by using both boom tiers in tandem.

**Note:** *The spray tips used on a tiered boom system must be extended range tips. In addition, the volume per minute of the second tier tips should not exceed 1.5 times the volume of the first tier's tips. The tier switching points should be set to 80% of the full flow volume for the boom tier tips.*

To access the Tiered Boom Settings screen:

1. Touch the Tools Menu icon from the Home screen.
2. Select the Product Control icon from the System submenu.
3. Touch the Calibration Settings button and select the Tiered Boom Settings button on the screen.

**Note:** *The tiered boom feature is not available in a granular control mode. Be sure that the configuration screen is set to a control channel set to control a liquid product application.*

The following settings may be configured on the Tiered Boom Settings screen:

**Tier 1 Max.** Set the desired maximum rate applied through the first tier boom sections.

**Tier 2 Max.** Set the desired maximum rate applied through the second tier boom sections.

**Percent Tier Disable.** The Percent Tier Disable is used to determine the percentage of the maximum tier rate at which tiers are disabled as the required volume per minute decreases. Using a Percent Tier Disable value allows the control valves to adjust to the target rate more quickly as the required rate decreases.

### **For Example:**

A machine has a tiered boom configuration with the following capacities:

- Tier 1 Capacity up to 25 GPM [94.6 L/min]
- Tier 2 Capacity up to 38 GPM [143.8 L/min]


Using the given capacities, the following values should be entered as the Tiered Boom Settings:

- Tier 1 Max. = 25 GPM [94.6 L/min] x 0.8 = 20 GPM [94.6 L/min]
- Tier 2 Max. = 38 GPM [143.8 L/min] x 0.8 = 30 GPM [143.8 L/min]

## Appendix A

Thus, as the volume per minute increases, the following tier switching should occur:

- 10 GPM [37.8 L/min] increasing to 20 GPM [75.7 L/min] = only tier 1 enabled
- 20 GPM [75.7 L/min] increasing to 30 GPM [113.6 L/min] = only tier 2 enabled
- 30 GPM [113.6 L/min] increasing to maximum flow rate = tier 1 and tier 2 enabled

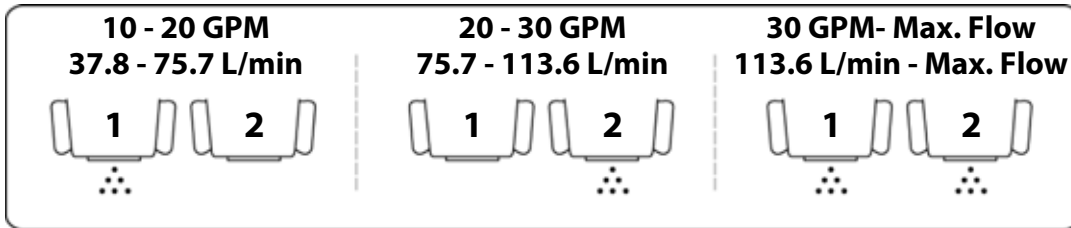

**Note:** Percent Tier Disable only affects tier switching when the required volume per minute is decreasing.

As rates begin to decrease from maximum, the Percent Tier Disable value is figured in. Thus, using the Tier 2 Max of 30 GPM [113.6 L/min] previously calculated and with the Percent Tier Disable set to 10%, tier 1 and 2 will switch to only tier 2 when the target rate decreases to 27 GPM [102.2 L/min].

So, for rates in gallons per minute:


$$30 \text{ GPM} - (10\% \text{ of } 30 \text{ GPM}) = 30 \text{ GPM} - 3 \text{ GPM} = 27 \text{ GPM}$$

or, for rates in liters per minute:

$$113.6 \text{ L/min} - (10\% \text{ of } 113.6 \text{ L/min}) = 113.6 \text{ L/min} - 11.3 \text{ L/min} = 102.3 \text{ L/min}$$

In operation, as the volume per minute decreases, the following boom tier switching should occur.

- Maximum flow rate decreasing to 27 GPM [102.2 L/min] = tier 1 and tier 2 enabled
- 27 GPM [102.2 L/min] decreasing to 18 GPM [68.1 L/min] = only tier 2 enabled
- 18 GPM [68.1 L/min] decreasing to 10 GPM [37.8 L/min] = only tier 1 enabled

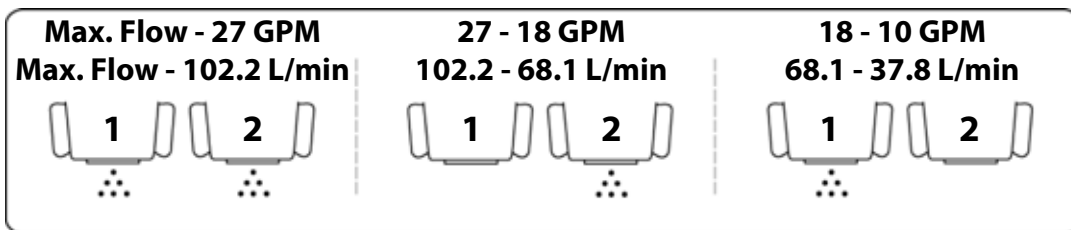



---

## Granular Applications

### Boom Cal

For Gran 1 (single belt) applications, enter the total width of the spread pattern in inches [cm] as boom 1 cal.

For Gran 2 (split belt) or Gran 3 (dual encoder) applications, enter the left side spread pattern as boom 1 cal and right side spread pattern as boom 2 cal.

### Spreader Constant

**Note:** *The spreader constant should be verified by performing the procedure in Verification of Spreader Constant section on page 184.*

*For Gran 2 or Gran 3 applications, gate width is the total of both openings.*

### Standard Rate display

For Rates displayed in 1 pound increments, the formula to calculate the spreader constant is:

$$SC = \frac{311,040}{L \times GH \times GW}$$

Where SC = the Spreader Constant, L = Length of belt travel in inches per 1 revolution of the encoder, GH = Gate Height in inches, GW = Gate Width in inches.

### For Example:

Given a Length of belt travel of 13 inches, a Gate Height of 7 inches and a Gate Width of 15 inches:

$$\frac{311,040}{13 \times 7 \times 15} = 228$$

Enter 228 as the Spreader Constant if the field computer is set to display English units.

### Metric Rate Display

For Rates displayed in 1 kg increments, the formula to calculate the spreader constant is:

$$SC = \frac{18,000,000}{L \times GH \times GW}$$

Where SC = the Spreader Constant, L = Length of belt travel in centimeters per 1 revolution of the encoder, GH = Gate Height in centimeters and GW = Gate Width in centimeters.

### For Example:

Given a Length of belt travel of 33 cm, a Gate Height of 18 cm and a Gate Width of 38 cm:

$$\frac{18,000,000}{33 \times 18 \times 38} = 797$$

Enter 797 as the Spreader Constant if the field computer is set to display Metric units.

## Verification of Spreader Constant

To verify and refine the spreader constant, perform the following procedure:

1. Weigh loaded truck and record the initial weight.
2. Enter the product density in lbs/cu. ft. [grams/liter] under the Density button in the Calibration Settings screen.
3. Set the total volume to zero for the product node being tested.
4. With the product node in the Manual mode, unload a portion of the load by toggling the boom switch on.
5. Determine the actual weight unloaded by re-weighing the truck.
6. Compare this weight to the total volume displayed on the field computer display. Perform the following calculation to refine the spreader constant, if desired:

$$\frac{OSC \times TV}{AW} = CSC$$

Where OSC = the Old Spreader Constant, TV = the Total Volume and AW = the Actual Weight unloaded and CSC = the Corrected Spreader Constant.

### **For Example:**

Using an Old Spreader Constant = 228 [797], Total Volume = 2000 lbs [4400 kg] and an Actual Weight Unloaded = 1950 lbs [4290 kg]:

English:

$$\frac{228 \times 2000}{1950} = 234$$

The new Spreader Constant is 234.

Metric:

$$\frac{797 \times 4400}{4290} = 817$$

Repeat this procedure until the weight of the metered materials equals the total volume value.

## Product Density

The density of the current product being applied must be entered in lbs/cu. ft. [grams/liter] when controlling a granular application.

**Note:** *To increase the system accuracy when applying at low rates, use the decimal shift feature as explained in the Decimal Shift section on page 110.*

## Rate Cal

The target application rate must be entered in lbs/acre [kg/ha] as the rate cal value. Consult the equipment manual to ensure that the selected gate opening is capable of applying at this application rate.

**Note:** *The spreader constant must be recalculated anytime the gate opening is changed.*

## Spinner RPM

For spinner box machines, use a product control node capable of controlling spinner speed.

### Valve Type

Select the valve type currently used on the machine in which the field computer is installed.

### Application

Select 'Spinner' as the application type. If spinner does not show up on the application rate, check that a CAN control node capable of controlling spinner applications is connected to the CANbus. Check the CAN control node and install a node that is capable of spinner control.

### Meter Cal

The machine should be configured with a magnetic pickup coil mounted near the bolt heads on the spinner. Calculate the meter cal by multiplying the number of pulses (bolt heads) per revolution by 10.

$$\text{MeterCal} = N \times 10$$

### ***For Example:***

If the number of pulses per revolution is 4:

$$4 \times 10 = 40$$

then the value for the meter cal would be 40.

### Spreader Constant

The spreader constant should be set to 0.

### Rate Cal

The rate cal should be set to the desired RPM of the spinner.

## *Additional Calibration Data*

Although not required operation, the following values may be programmed to enhance feedback for the operator during field application.

### Entering Tank Volume

Press VOLUME/TANK and use the Edit mode to enter an estimated volume of product in the tank or bin. This setting must be reset each time the tank or bin is refilled.

### **Low Tank Alarm**

The field computer may be set to display or sound or an alarm when the calculated volume of product remaining in the in the tank falls to a user defined level. To setup the Low Tank Alarm, refer to the *Alarm Settings* section on page 112.

### Reset Volume/Area Display Information

The current total area, total volume, field area and field volume information is displayed as applied information that can be reset at any time. Refer to the *Volume and Area Settings* section on page 109 to reset these display values.


### Reset Display Distance

The current display distance, or odometer, registered by the field computer may be reset at any time. Refer to the *Speed* section on page 99 for more information.

## *Speed Sensor Extension Cable*

Disconnect the extension cable from the speed sensor assembly cable. Hold the extension cable connector so that the keyway is pointing in the 12 o'clock position as shown below.

**FIGURE 1. Speed Sensor Extension Cable Pin Diagram**

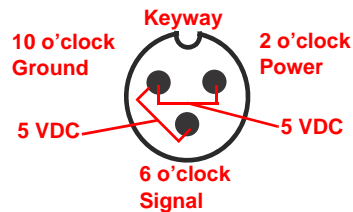

**Note:** *If a radar type speed sensor is used, the voltage between the 10 o'clock and 2 o'clock positions may read 12 VDC.*

*If a +5V DC voltage reading is not present, disconnect the flow meter cable and re-test the speed sensor cable. If the voltage reads +5V DC when the flow meter cable is disconnected, test the flow meter cable per Testing the Flow Meter/Encoder Cable section on page 188.*

## Testing the Speed Sensor Extension Cable


1. Enter a speed cal of 9999 by touching the Speed button on the Product Control screen.
2. Zero the odometer by entering a zero value in the Distance button.
3. With a small jumper wire (or paper clip), short between the 10 o'clock and 6 o'clock sockets with a 'short-no-short' motion. Each time contact is made, the distance total should increase by increments of 1 or more.
4. If the distance total does not increase, remove the section of cable and repeat the test at the connector that is the next closest to the node. If the distance total now increases with the short-no-short test, replace the defective cable as required.
5. If no pulses are registered, perform the above voltage checks.
6. If all of the cables test 'good', replace the speed sensor.

**Note:** *After testing is complete, re-enter the correct speed cal before starting an application.*

## Flow Meter/Encoder Extension Cable

Before starting this test, disconnect the flow meter cable from the flow meter. Hold the flow meter cable so that the keyway is pointing in the 12 o'clock position as shown below.

FIGURE 2. Flow Meter Extension Cable Pin Diagram

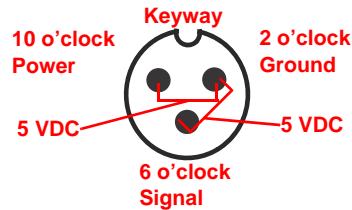

### Testing the Flow Meter/Encoder Cable

1. Enter a meter cal of 1 in liquid or direct injection modes, or density of 1 and spreader constant of 0 in granular mode, on the Calibration Settings screen in the Product Control menu.
2. Touch the Volume/Area Settings button and note the total volume for each product node connected to the CANbus.
3. Turn the boom and master switch On.
4. With a small jumper wire (or paper clip), short between the 2 o'clock and 6 o'clock sockets with a 'short-no-short' motion. Each time contact is made, the total volume number should increase by increments of 1 or more.
5. If the total volume value does not increase, remove the section of cable and repeat the test at the connector that is the next closest to the node. Replace the defective cable as required.
6. Verify the pin connection and voltage from the previous chart.
7. If all of the cables test good, replace the Rate Sensor.

**Note:** After testing is complete, re-enter the correct cal values before starting an application.

## APPENDIX

# C

## *Bogballe Calibrator Zurf Interface*


Interface the Envizio Pro or Envizio Pro II with the Bogballe Calibrator Zurf console to add the datalogging, mapping, 2D/3D guidance and AccuBoom features to current Calibrator Zurf operations. If the single product variable rate key (P/N 077-0180-031) has been activated on the Envizio Pro or Envizio Pro II, the field computer may be used to variable rate product application via the Bogballe console.

**Note:** An AccuBoom control node is not required to enable the AccuBoom feature on the field computer in this configuration.

### *Console Connection*

Connect the COM2 connector on the main interface cable (P/N 115-0171-746) or chassis interface cable (P/N 115-0171-926) with the Bogballe Calibrator Zurf serial input via a null terminated serial cable (P/N 115-0171-040 or 115-0159-822).

**FIGURE 1. Connecting the Envizio Pro or Envizio Pro II and Bogballe Calibrator Zurf Console**

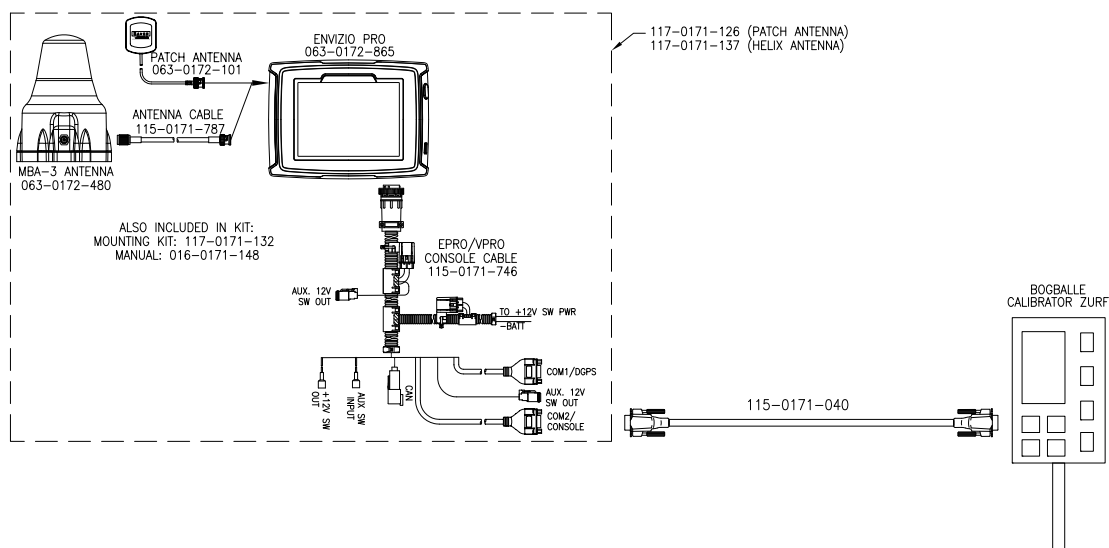


Connect the Bogballe speed interface cable (part number not yet determined) to send GPS speed from the field computer to the Bogballe Calibrator Zurf console.

## Bogballe Setup and Configuration

**Note:** When the Envizio Pro or Envizio Pro II is setup to interface with the Bogballe Calibrator Zurf console, the “Profiles” feature within the field computer will be disabled.

1. From the field computer Home screen, touch the Tools Menu icon.
2. Touch the Control Interface icon within the System submenu.
3. Select the “Bogballe Calibrator Zurf” from the product control options list.

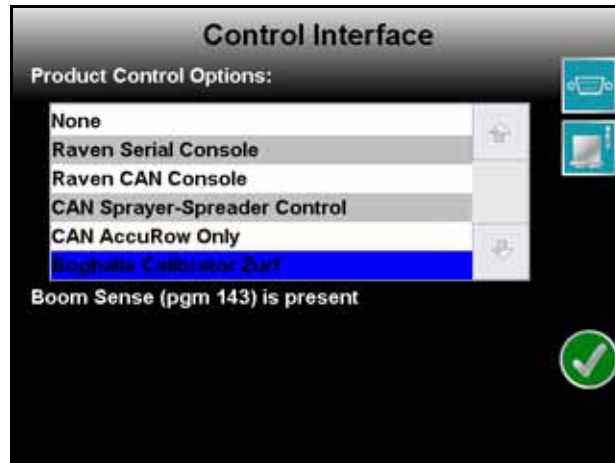

4. Touch the green check mark icon to return to the main Tools Menu screen.

## Section and Guidance Width Configuration

**Note:** The field computer automatically configures a section width to the spread width value programmed into the Calibrator Zurf console. Any changes to the spread width value on the Calibrator Zurf console will immediately affect the section width on the field computer.

1. From the field computer Home screen, touch the Tools Menu icon.
2. Select the Guidance Width icon within the Vehicle submenu.
3. Use the on-screen keypad to enter the desired swath or spread width in inches (English) or centimeters (Metric). The field computer uses the programmed guidance width to determine guidance paths.
4. Touch the green check mark icon to return to the main Tools Menu screen.

### Antenna Offsets

To ensure accurate mapping and application control, configure the GPS antenna offsets in the field computer Tools Menu.


1. Determine the spread distance using the appropriate Bogballe spread chart.
2. Measure the distance from the GPS antenna to the Bogballe spinners.

**Note:** The Fore/Aft value must be measured parallel with the vehicle’s direction of travel.


3. Add the measured antenna offset and the spread distance together to determine the total offset value.



FIGURE 2. Bogballe Offset Distance Calculation

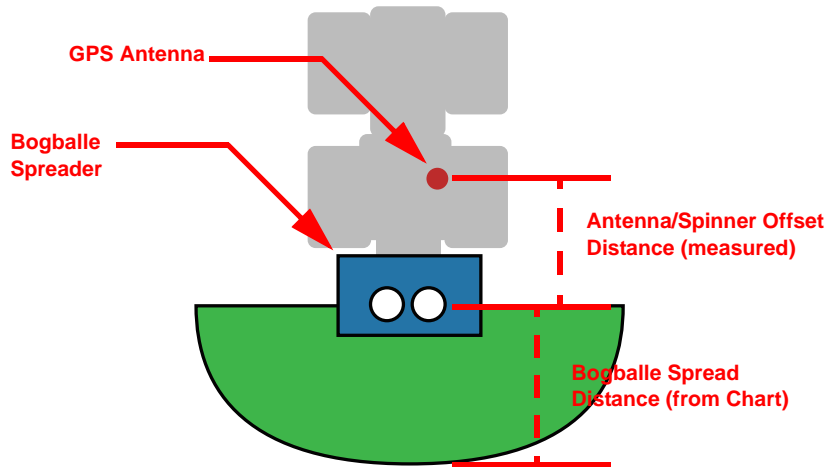

- From the field computer Home screen, touch the Tools Menu icon and select the Offsets icon from the Vehicle submenu.

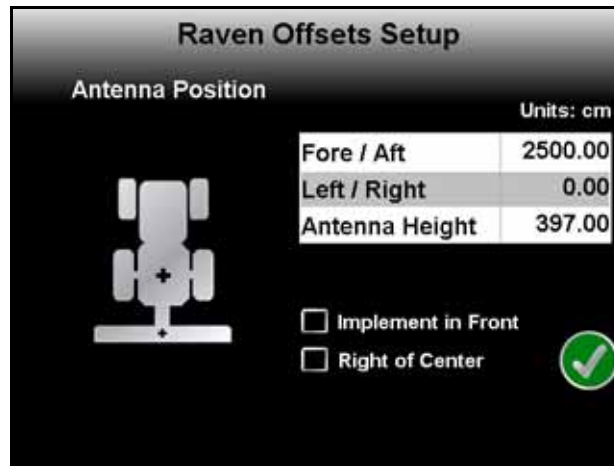

- Touch the Fore/Aft value on the Offsets Setup screen and use the on-screen keypad to enter the calculated total offset value.


**Note:** The values entered for the fore/aft value must be entered in the same units as shown above the fore/aft offset value.

## AccuBoom™ Configuration

Use the following procedure to calibrate the AccuBoom turn-on and turn-off look-ahead values to the Bogballe spreader:

**Note:** *The turn-on/turn-off look-ahead values may be adjusted after this procedure is completed to customize AccuBoom performance to the specific vehicle and Bogballe spreader.*

1. From the field computer Home screen, touch the Tools Menu icon and touch the AccuBoom icon within the System submenu.

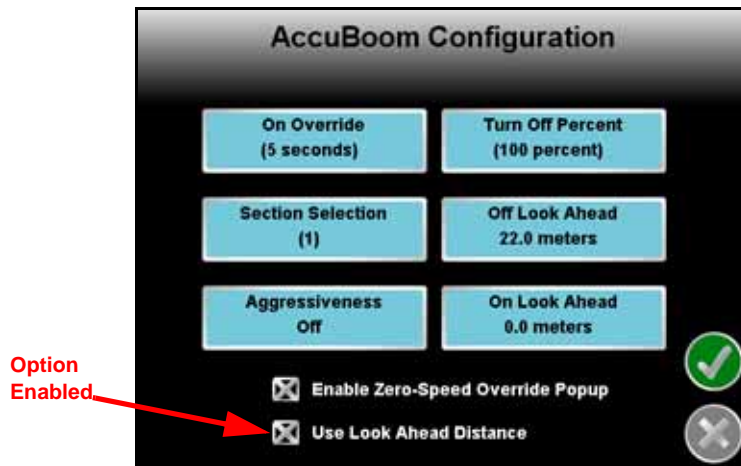


2. Enable the “Use Look Ahead Distance” option at the bottom of the screen by touching the box until a check is displayed.
3. Touch the Off Look Ahead button and use the up or down arrows to set the off look-ahead value to the spread distance value determined from the appropriate Bogballe spread chart.
4. Touch the green check mark to return to the AccuBoom Configuration screen.
5. Touch the On Look Ahead button and use the up or down arrows to set the on look-ahead value to zero.

**Note:** *The procedure above will configure the AccuBoom system for general operation with the Bogballe spreader. To fine tune AccuBoom performance for the specific Bogballe system and the specific vehicle, adjust the look-ahead values in small increments until the desired performance is achieved.*

See Chapter 9, *Using AccuBoom™*, for more information on setting up and operating the AccuBoom feature on the field computer.

## Operation

When interfacing with the Bogballe Calibrator Zurf console, the field computer displays the target and actual rate information from the Calibrator Zurf console in the upper right corner of the Guidance screen.

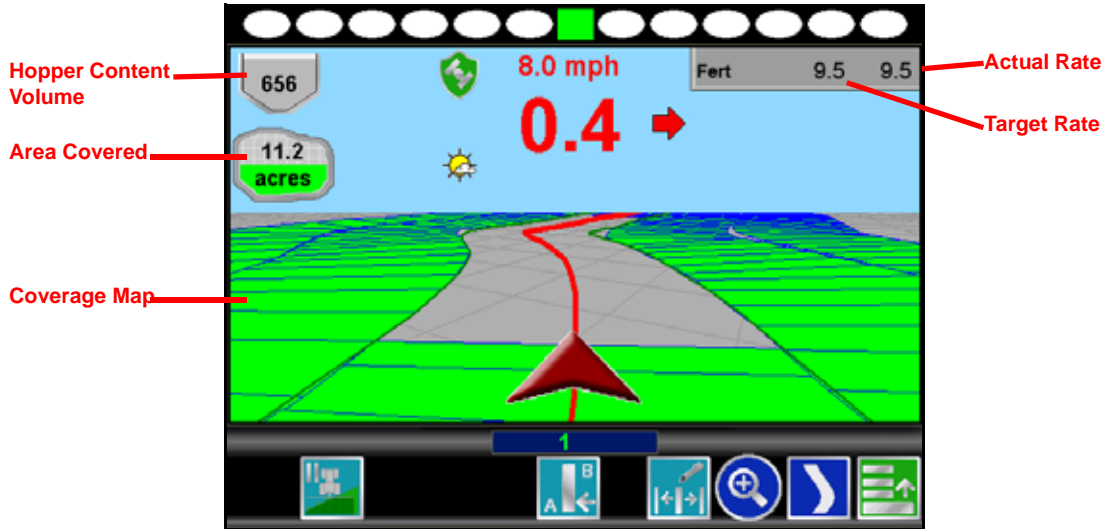

### Hopper Contents


The current hopper content volume registered by the Calibrator Zurf console is displayed in the hopper content volume display on the field computer Guidance screen.

### Area Covered & Coverage Mapping Information

The coverage map and area covered information on the field computer Guidance screen are based on the GPS location recorded by the field computer.

## Application Reports

While interfacing with a Bogballe Calibrator Zurf console, the field computer records coverage area based upon GPS coordinate data. The coverage area in a field may then be output from the field computer on an application report for use on a home or office PC.

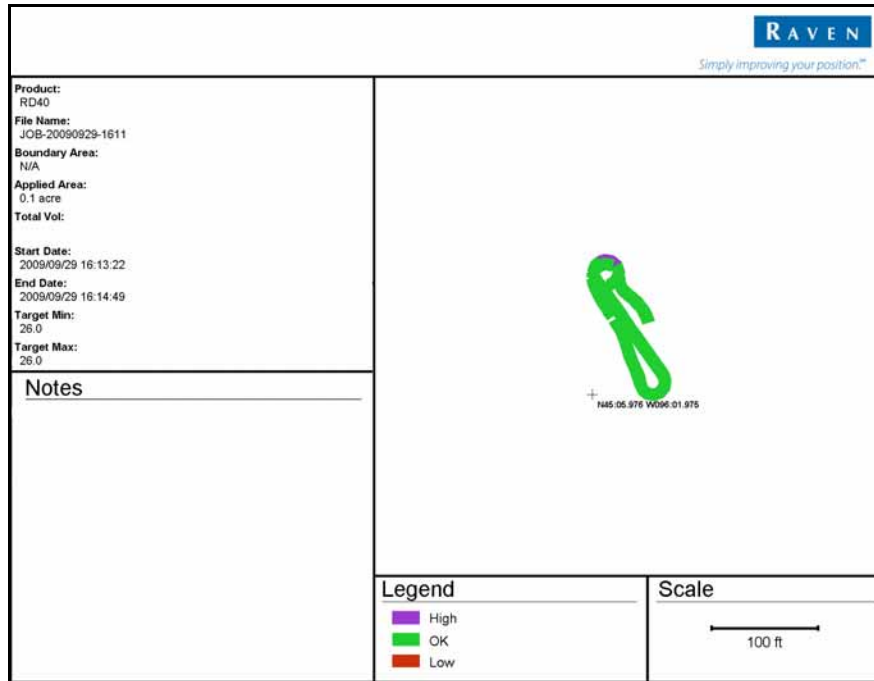

**Note:** No field or total volume information is recorded by the field computer while interfacing with the Bogballe Calibrator Zurf console.

## Automatic Variable Rate

If the single product variable rate key (P/N 077-0180-031) is activated, the field computer will send target rate information to the Calibrator Zurf console for automatic variable rate control and application.

## APPENDIX

# D

## *Wireless Communications & Remote Service*

The Envizio Pro or Envizio Pro II, with a Slingshot Field Hub™, allows the operator to wirelessly transfer application data back to the home or office and transfer prescription data from the office to the field without the hassle of driving. This feature also adds the ability to allow service technicians and support specialists to remotely control the field computer, help is now just a touch away.


Via the Field Hub, the field computer can also be used to keep up-to-date with the latest weather forecasts or crop prices from internet web sites while still managing product application.

**Note:** For instructions on installing and setting up the Slingshot Field Hub, refer to the *Field Hub Installation Guide* provided with the wireless device.

---

### *Wireless Communication Status*



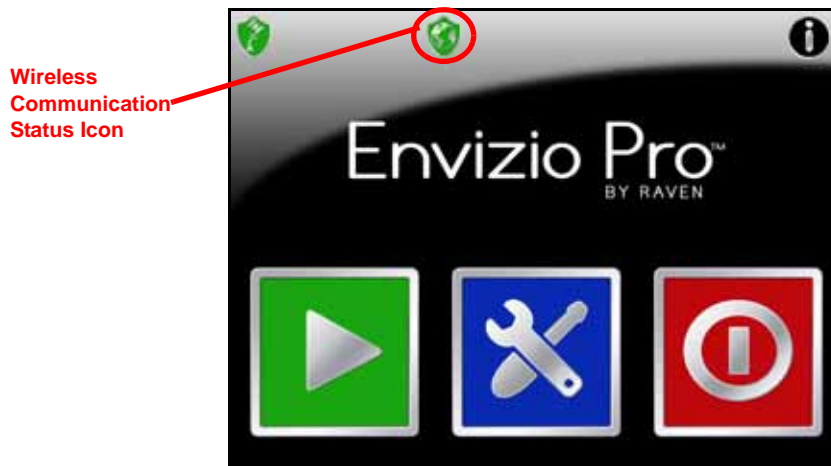

The status of wireless communications is displayed along the top of the Home screen.





## Appendix D

---

The following icons may be displayed in the wireless status area:

	<b>No Device Connected</b> - No supported wireless device is connected to the ethernet port on the field computer. This icon is also displayed if wireless communication is unavailable or has been lost.
	<b>Communication OK</b> - The status of wireless communication is good and no errors or alarms are present.
	<b>Communication Error</b> - An error has occurred with wireless communication or during a file transfer.
	<b>Communication Lost or Unavailable</b> - This icon will be displayed if the registration process has not been successfully completed.


The wireless status symbols also display the file transfer status for any files to or from the field computer.

	<b>Synch In Progress</b> - The arrow symbol is displayed on the wireless status icon while the field computer and the Slingshot™ site are synchronizing.
	<b>Files Received</b> - The envelope symbol is displayed on the wireless status icon when files have been received by the field computer. When this symbol is displayed, touch the icon to display the File Manager tab.

---

## Wireless Status Screen

Touch the wireless status symbol displayed on the Home screen to display the Wireless Status screen.

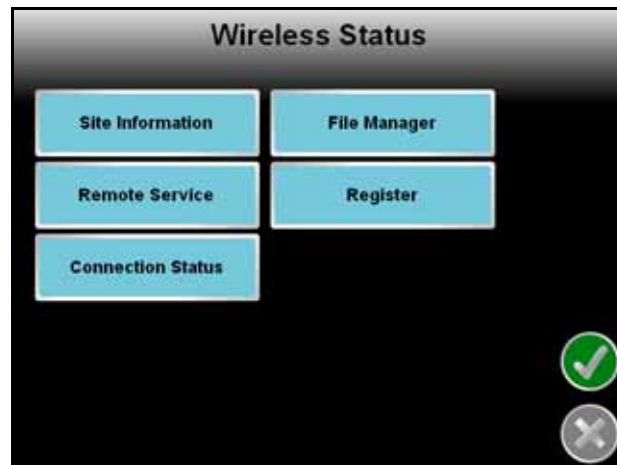

### Site Information

Touch the Site information button to view information from the Slingshot™ site.

## Remote Service

The Remote Service feature allows a service technician to view and control a field computer in the field from his or her service location and assist the machine operator diagnose or troubleshoot the system.

**Note:** *The service technician will be able to determine whether a remote service session is necessary to assist with any issues encountered with the field computer. Contact a local Raven dealer or technical service provider before starting the remote service feature.*

To begin a remote service session:

1. Touch the Wireless Status icon on the Home screen and touch the Remote Service button.
2. Touch the "Enable Remote Service" button. Have the code displayed on the screen available when contacting a local Raven dealer for support.
3. Read the code to the technician to allow them to view and control the field computer and product control system.

**Note:** *If an error code is displayed in place of the remote service code, wait a few seconds for the Field Hub to receive correct data and the error should be cleared automatically. Do not initiate remote service while an error code is displayed. If the error message does not clear after several seconds, contact a local Slingshot or Raven dealer for support.*

## Connection Status

The connection status screen displays the following information:



- **Signal Strength** - Displays bars to represent the current strength of wireless signal. Four bars represent a strong signal.
- **Ethernet Status** - Displays the status of the connection via the ethernet port on the back of the field computer.
- **Internet Status** - View the status of communication with the world wide web in this area.
- **Secure Server Connection** - The connection status with the secure server is displayed in this area.
- **Suggested Solutions** - If any issues or errors are detected, possible solutions will be displayed in the solutions area.

**Note:** *If any error conditions are encountered, the Communication Status screen will display possible solutions.*

## File Manager

Access the Wireless File Manager to view a history of files recently transferred to or from the field computer.



Use the up or down arrows to scroll through the history of files sent from, or received by, the field computer.

Touch a file from one of the lists to view file information such as the file type and size as well as the date and time the file was sent or received.

**Note:** Completed job data may be exported to a connected USB flash drive if desired or if a wireless connection is unavailable. Refer to the Performing File Maintenance section on page 141 to export a Slingshot™ data package using the File Maintenance feature. Jobs exported to a USB flash drive may then be uploaded to the Slingshot web site using a home or office computer.

## Registration

The Registration tab is used to register the Field Hub with the Slingshot™ web site and activate the various features of wireless communication on the field computer.

**Note:** If the Field Hub has been registered previously, the Registration button will display as re-registration. Touching the “Re-Register” button will display the Re-Registration Warning prompt below. To re-register the Field Hub, touch the green check mark and proceed with the registration instructions to re-register the Field Hub.





**To register:**

1. Touch the Wireless Status icon on the Home screen and select the Registration button.



2. Wait while the field computer registers with the Slingshot™ web site and receives the registration code.
3. Once the registration code is received, login to the Slingshot™ site.

<http://slingshot.raveniat.net>

4. Select the “Register a Device” button.
5. Enter the required device information and the six digit registration code from the field computer.

**Note:** Be sure to enable the Remote Service and Web Access features if desired (recommended). These features may be enabled later by accessing the Slingshot™ site.

6. Select the “Register” button.

**To test wireless access:**

1. Test the Wireless File Transfer feature by either one of the following:
  - Wait for the field computer to automatically search for available files for transfer. This process may take up to five minutes.
  - Touch the File Manager tab on the Wireless Status screen and select the “Send/Receive Files” button at the top of the display.
2. If the Remote Service feature was enabled during registration, select the Remote Service tab and touch the “Enable Remote Service” button.
3. If a remote service session is enabled successfully, touch the button now labeled “Disable Remote Service.”
4. Exit the Wireless Status screen by pressing the “OK” button in the lower, right corner of the screen.
5. If the Web Access feature was enabled during registration, touch the Tools Menu icon and select the Web icon within the Computer submenu to open the field computer internet browser and test the web access feature.



## APPENDIX


# E

## *Updating CAN Nodes via the Envizio Pro or Envizio Pro II*

Envizio Pro and Envizio Pro II with version 2.2 or higher software are capable of programming nodes on the CANbus directly through the field computer and connected cabling using a USB flash drive with the CAN Update program.

**Note:** Before trying to update a CAN node, make sure the node is communicating properly over the CANbus. If the node is not communicating properly, the field computer will be unable to update the node.

**NOTICE**



Updating a CAN node erases the current settings in the node. To retain settings and calibration data, be sure to write down all settings stored by the node(s) being updated.

Node updates are available by contacting the Raven customer support center at 1-800-243-5435.


**Note:** Create a folder labeled “canupload” on the root of a USB flash drive (i.e. “G:\canupload”) and place the necessary .hex files within this folder.


### To Update CAN Nodes


**Important:** **DO NOT** remove power or unplug any cabling connections during the node update process. If the update process fails to complete the update successfully, the node may become unresponsive. Unresponsive nodes will need to be returned to Raven for repairs.

1. Start the field computer and touch the Information icon in the upper, right corner of the Home screen.




2. Touch the  icon on the About Envizio Pro screen to display the CAN Diagnostics screen.
3. Insert the USB flash drive with the required .hex files into an available USB port on the field computer.

- On the CAN Diagnostics screen, select the  to begin the CAN Update Program.

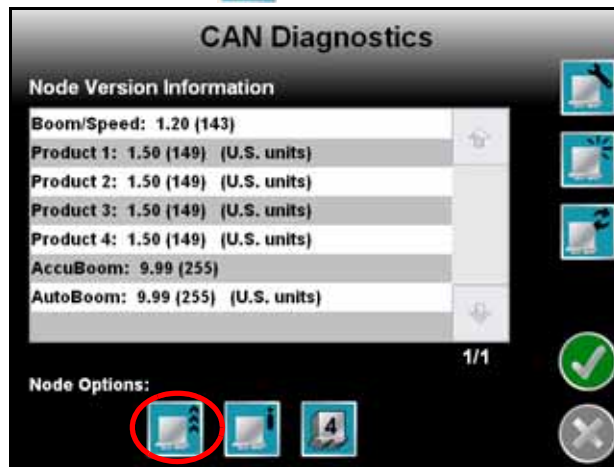

- The Updates screen displays a list of available node updates. This screen also displays the firmware version to which each node will be updated if the update is applied.

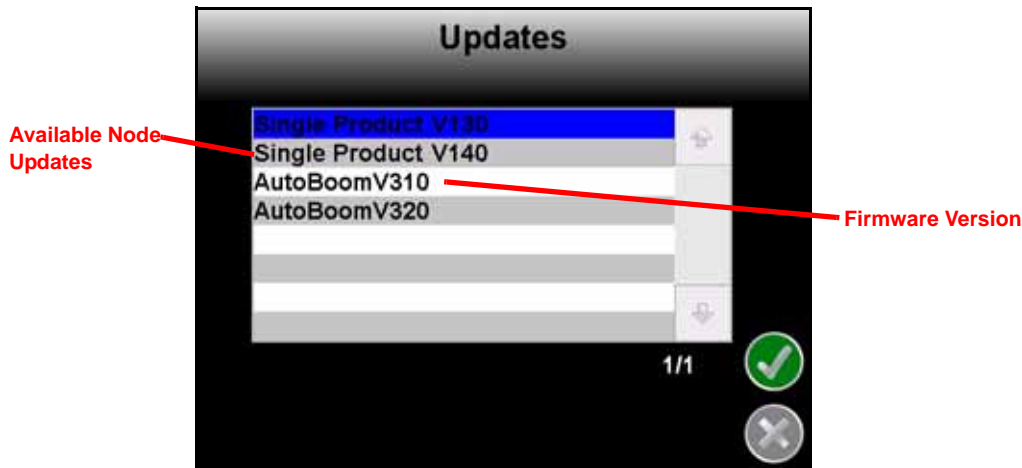

- Touch the Accept icon to start the update.

**Note:** If the field computer cannot communicate with the selected node, the CAN Update Program will display an error. Troubleshoot the node and retry the update.

- The field computer begins communicating with the selected node to update. If communication is successful, the field computer will begin the update by erasing the node's memory.

**Note:** The field computer may take several minutes to prepare and apply the software update to the node. If errors are encountered during the process, re-apply the node update.

- To update other nodes via the CANbus repeat step 6 through 7.

**F**

---

*Navigation*

The following icons will be used to navigate within the menu screens and to edit and save settings.



Touch the Home icon when it appears to return to the Home screen. Any active jobs will continue in the background. Note that some Tools Menus will not be accessible while a job is in progress.



Touch the Accept icon to confirm any changes to a screen. Touching the Accept icon will save those settings and proceed to the next screen.



Touch the Cancel icon to exit the screen without saving any changes made on a screen. If the Cancel icon is displayed in grey, the cancel feature is not available.



Like the Accept icon, the Next icon accepts changes and proceeds to the next screen in a setup procedure. Touch this icon where it appears to access more settings or to continue a setup procedure. The last screen in a setup procedure should display the Accept icon.



Touch the Previous icon to return to the last screen displayed during a setup procedure or wizard.



The Up icon, where it appears, increases displayed values in preset increments. Touch this icon to increase a value until the desired value is displayed.



The Down icon, where it appears, decreases displayed values in preset increments. Touch this icon to decrease a value until the desired value is displayed.



Touch the Create New icon when it appears to create and rename new job related files.

**Note:** Names of jobs, vehicle profiles, guidance lines or boundary maps stored on the field computer cannot begin or end with a space.



Product 1  
Selected



Product 2  
Selected

The Cycle Product icons are used when more than one product is connected to the CANbus system. The Cycle Product icons indicate for which product information is currently being displayed. Touch the icon to cycle the selected product to access settings or display information for additional product nodes or control channels connected to the CANbus system.

---

## Home Screen

The Home screen offers access to the following features of the field computer:



Touch the Start Job icon to begin a new job, select a previous job or to return to the Guidance screen if a job is already in progress.



Touch this icon to access the Tools Menu. The Tools Menu is only available from the Home screen. Refer to Chapter 7, *Tools Menu*, for information about settings and using the Tools Menu.



If a job is in progress, the End Guidance icon will appear on the Home screen. Touch this icon to end the active Guidance session.



When the console is powered on or when Guidance is not active, the Shutdown icon will be displayed. Raven recommends using the Shutdown feature before pressing the power button.

## Information

Touch the information icon in the upper, right corner of the home screen to display the software and image versions currently installed on the field computer.





## GPS Status

The current source and status of DGPS signal is displayed in the upper, left corner of the Home screen.



**Note:** The standard GPS shield will be displayed if the Envizio Pro or Envizio Pro II field computer cannot determine the type of corrections being sent from the DGPS receiver.

The status icon on the Home screen will display:

- Green if the status of GPS is okay.
- Yellow if an error condition has been encountered.
- Red if GPS is non-functional. Make sure the DGPS antenna cable connections are secure and the antenna has a clear, 360° view of the sky.

### RTK Fixed and Float Modes

When using an RTK correction source with the internal dual frequency GPS receiver, the GPS status indicator may be used to determine whether the receiver is operating in RTK fixed or float modes. The RTK shield will display:


- Green to indicate a fixed RTK position. This mode indicates that the receiver has a full RTK position fix and is providing sub-inch corrections. The GPS Health screen will display a value of 4 for the differential mode when operating in RTK fixed mode.
- Yellow to indicate that the receiver is operating in RTK float mode. This mode indicates that the receiver is not able to provide a full RTK position lock due to the distance from the base station, visibility of the sky, time of day or interference around the base station location. In the float mode, the receiver is still providing a course RTK correction signal, but accuracy of the receiver may not be at a sub-inch level. The GPS Health screen will display a value of 5 for the differential mode when operating in RTK float mode.

### Direction of Travel



The last direction of travel detected by the field computer is displayed on the screen when setting up a job on the field computer and may also be found on the GPS Health screen by selecting the GPS Status icon.

If the direction of travel displays incorrectly during a field application, touch the direction of travel icon to manually toggle the course over ground.

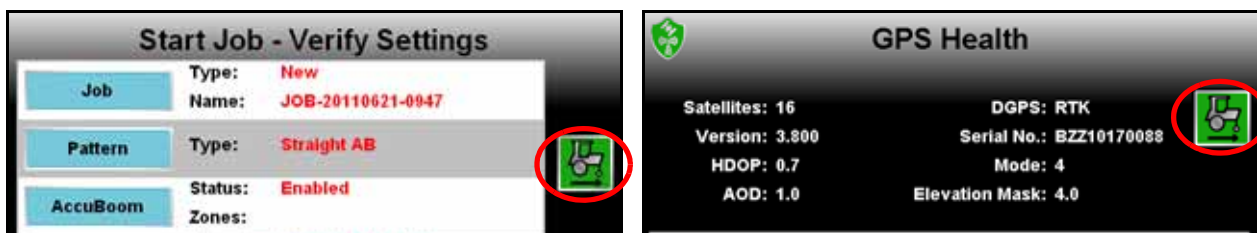

## Wireless Communications Status

The current status of wireless communication is displayed along the top of the Home screen display.



This icon will appear:

- Gray if no wireless communications device is connected to the field computer.
- Green if communication is okay.
- Yellow if an error condition has been encountered.
- Red if wireless communication is not available.

Touch the shield icon to display the Wireless Status screen. Refer to the Appendix D, *Wireless Communications & Remote Service* for more information.

---

## Tools Menu

The following icons may be found within the Quick Access Bar at the top of the Tools Menu screen.



The Setup Wizard Menu is available in the Tools menu. Review the *Setup Wizards* section on page 44 for more details on using the setup wizards.



Access the System Menu to setup the product control system or configure the optional AccuBoom or AutoBoom systems.



The GPS Menu contains screens to setup the internal GPS receiver or to enable the field computer to use signal from an external receiver. The GPS menu also contains screens to review the status of GPS reception, set message outputs (for the internal DGPS receiver only), setup an optional TM-1 Tilt Module or select the PRN.



The Computer Menu sets display and feature settings of the field computer. Access the Computer menu to change the display brightness, language and units, adjust the on-screen or external lightbar, as well as activate features or update the field computer software.



Access the Vehicle Menu to setup or modify vehicle profiles for each machine or implement with which the field computer will be used. Profiles allow the operator to setup GPS antenna heights and offsets as well as the swath width and section setup for each implement once and quickly reload a vehicle's profile when transferring the field computer between vehicles.



Select the Show All icon to show an overview of the Tools menu. The Show All screen is displayed each time the Tools menu is accessed.



## File Maintenance

To begin file maintenance from the Home screen:

1. Touch Tools Menu icon.
2. Select the File Maintenance icon within the Computer menu.

**Note:** Before performing file maintenance with a new USB flash drive, set up the required file structure on the connected USB flash drive by selecting the icon shown to the right.

3. Select the type of files to transfer from the list at the top of the screen.
4. Touch one of the following icons to select the direction in which to transfer files.

From Field  
Computer



To Field  
Computer



### Transfer From Field Computer



Select left icon to transfer a selected file to the connected USB flash drive or the right icon to transfer all files of the selected type currently saved on the field computer.



Select the left icon to export the Slingshot™ data package for a selected job file to the connected USB flash drive or the right icon to export data packages for all job files currently stored on the field computer



Select the left icon to delete a selected file from the field computer or the right icon to delete all files of the selected type currently saved on the field computer.



**Note:** The Delete button will not affect any files on the flash drive. To remove files from the flash drive, use the PC's file browser (i.e. Windows Explorer) to remove, delete or copy files from the flash drive.



Touch this icon to manually initiate upload of a selected file currently stored on the field computer via a SlingShot™ Field Hub and available wireless connection.

**Note:** Refer to Appendix D, Wireless Communications & Remote Service, for more information on transferring files using the Slingshot service.

### Transfer To Field Computer



Select the left icon to transfer a selected file to the field computer or the right icon to transfer all files of the selected type currently stored on the USB flash drive.



## CAN Diagnostics



Touch this icon to readdress product control nodes connected to the CANbus. Readdressing product control nodes may be necessary if a node is not detected by the field computer. Verify that the node is properly powered and connected to the CANbus communication lines before readdressing the product control nodes. See the *Readdressing the Nodes* section on page 31 for more information.



Select this icon to reset all product control nodes to their default values. Use the *Calibration Reference Sheet* section on page ix if necessary to record the required calibration values for system operation. To help record additional settings for each node, step through or review the *Product Control Setup Wizard* section on page 49. After resetting nodes, it is recommended to run the Product Control Setup Wizard to reconfigure each product node or control channel.



Touch this icon to retry CAN communications. If a node is not recognized when starting up the field computer, restarting CAN communication may allow the system to recognize the node without further troubleshooting steps. If a node is still not detected, additional troubleshooting or readdressing the CANbus may be required. Refer to the *CAN Troubleshooting* section on page 34 or *Readdressing the Nodes* section on page 31 for additional information.



Touch this icon to update CAN nodes via the field computer. Review Appendix E, *Updating CAN Nodes via the Envizio Pro or Envizio Pro II*, for more information on obtaining node update files and performing an update via the field computer.



Detailed node hardware information is available by selecting a node listed on the CAN Diagnostics screen and touching this icon. The hardware summary screen provides node operating information that may be helpful when contacting technical support or while troubleshooting CAN communication issues.

**Note:** *If the node is not capable of providing hardware information, the Hardware Summary screen will display “N/A” for the unavailable diagnostic values.*



The Raven product controller node is capable of providing up to four product control channels on an Envizio Pro or Envizio Pro II control system. By default, the product controller will make two control channels available to the field computer for controlling product application.

Select one of the product controller node channels and select the Select Channels icon (shown to the left) to set the number of control channels available via the node.

**Note:** *The Select Channels icon will display the current number of channels which the node is providing to the field computer. Each control channel must be configured separately via the Tools Menu.*

---

## Guidance Patterns

The following icons represent the available Guidance patterns available for use with the field computer.



The Enhanced Last Pass is well suited to provide guidance for irregular swaths due to irregular field boundaries, well heads or waterways, etc.



The Straight (A-B) Line pattern is useful for applications in fields with row crops.



The Pivot pattern is useful for applications in fields irrigated by a center pivot.



The Fixed Contour pattern is ideal for creating and saving swaths which follow irregular field boundaries, waterways, well heads, etc., or where the ability to skip swaths in an irregular pattern is necessary.

Refer to the *Using Guidance Patterns* section on page 65 for more information on using Guidance patterns.

---

## Guidance Screen

The following icons and tools are displayed on the Guidance screens.



The Vehicle Arrow represents the vehicle's position in the field. The Vehicle Arrow may also be used to toggle coverage mapping if the correct master switch option is selected. Refer to the *Product Control* section on page 98 for more information about this feature.



Touch the Menu icon in the lower right corner of the Guidance screen to display a menu of available views and tools.



Within the Menu, touch the Home icon to return to the Home screen. Any active jobs will continue in the background until the job is ended. Note that some Tools Menus will not be accessible while a job is in progress.

## Guidance Views

The following views may be selected for viewing the Guidance screen. To select the desired view, access the Menu on the Guidance screen and touch one of the following icons.



Touch this icon to display the Down Field view. The Down Field view is the view displayed when starting or resuming Guidance from the Home screen.



Touch this icon to switch to a Bird's Eye view. The Bird's Eye view is follows the vehicle's current position with a view looking down onto the vehicle indicator.



Touch this icon to switch to the field review mode. The field review mode can be used to review the entire as applied map.

## Field Review Mode Tools

The following icons appear in the field review mode.

### Pan Lock



When the pan lock is disabled, the display will automatically scroll to the vehicle indicator as the indicator moves out of the current view. Disable the pan lock to always display the vehicle indicator while in field review mode.



When the pan lock is enabled, the display is locked to the current view regardless of the vehicle indicator position. The operator can manually pan and zoom with the pan lock enabled to view specific portions of a field while in field review mode.

To Pan the display Manually, touch the Field Review screen. Touch the screen to pan the center of the field review display to the selected location.

### Show Overlaps



With the show overlaps feature disabled, the field review mode displays the covered areas (including overlaps) in a solid green color. Touch this icon to toggle the show overlaps feature.



When the show overlaps feature is enabled, application overlaps are displayed in red. Overlaps appear where application (i.e. active boom sections) cover previously applied areas. Note that the area covered will not display as an overlap unless product application has overlapped.

## Toggle Maps on the Guidance Screen

During a job with an active prescription or spray zone map, the field computer will display either map on the Guidance and Field Review screens. If both a prescription map and a spray zone map will be used, the operator may toggle which map to display on the guidance and field review screens by selecting the toggle maps icon.

To toggle the displayed map, touch:



The view spray zone map icon to view the loaded spray zone map.



The view prescription map icon to display the loaded prescription map on all guidance displays.

## A-B Path Tools

The following tools and features may be found in the Menu when the Straight Line, Fixed Contour or Pivot guidance patterns are active.

### Loading an A-B Line



If an A-B Line has been saved on the field computer, touch the Load A-B Line icon to load a saved line into the current job. This icon will not appear if an A-B Line has already been set. Reset the line to access the Load A-B Line tool.

**Note:** *The A-B Line must be stored in the field computer internal memory to be able to access and load the guidance path. Be sure to transfer all necessary files to the field computer before beginning a job.*

*A-B Lines stored on the field computer cannot begin with a space.*

### Setting A-B Points

To create a New A-B Line, the operator must set A and B points. The following icons and tools may be used to set a New A-B Line.



Touching the Set A icon will place the first, or A, point of the path at the vehicle's current location. Regardless of where the vehicle moves from this point, the field computer will use the selected pattern to connect this point with the next set point. After the Set A icon is selected, the Set B icon will appear.



Touch the Set B icon to place the second, or B, point of the guidance path. Once the B point has been set, the field computer will use the selected Pattern to create the Guidance Path displayed on the Guidance screen.

### Set B by Heading

The Set B by Heading feature is only available with the Straight Line Guidance Pattern. This feature allows the operator to set an A-B Line before completing the first swath.



Use the Set B by Heading feature to create a guidance path along a heading. Touch this icon and use the displayed keypad to enter a heading between 0° and 359° (with 0° being due North).

### A-B Path Configuration

The following tools are available in the Menu when a compatible A-B Line is displayed on the Guidance screen.



Select the A-B Tools icon to access additional tools for use with the current A-B Line.



Select the Reset A-B Line icon to clear the displayed path. If the displayed path will need to be recalled in the future, be sure to save the current path before selecting reset.



Touch the Save A-B Line icon to save the displayed path. Once saved, an A-B Line can be recalled at any time or loaded into other jobs. In addition, saved paths can be transferred from the field computer via the File Maintenance feature. See Chapter 8, *Software Updates and File Maintenance*, for details on the File Maintenance feature and transferring saved paths.



Use the Re-calibrate A-B Line tool to re-calibrate the displayed path to the machine's current position. Due to DGPS drift over time, this feature allows the operator to re-calibrate the A-B Line to a known position in a field.

### Nudge Feature

The Nudge Feature allows the operator to fine tune the displayed path for actual field conditions. The Nudge Feature works especially well with the Raven SmarTrax or SmartSteer assisted steering systems. Contact a local Raven dealer for more information about these systems.



During an active job, touch the Edit Nudge icon at the bottom of the Guidance screen to display the In Job Nudge Settings screen. This screen allows the operator to enable the on-screen nudge controls, adjust the nudge values and select the active nudge applied when the nudge icons are selected. See the *Nudge Feature* section on page 68 for more information on setting up and using the Nudge Feature.

## On-Screen Nudge Enabled

The following icons will be displayed on the Guidance screen if the on-screen nudge controls option is set to Enabled.



Touch the Nudge Right icon to move the displayed guidance path to the right. The distance which the path will be nudged is determined by the user defined value for the Active Nudge.



Touch the Nudge left icon to move the displayed guidance path to the left. The distance which the path will be nudged is determined by the user defined value for the active nudge.

## A-B Tools Menu Nudge

The following nudge icons appear in the Menu on the Guidance screen. Touch the Menu icon and select the A-B Tools icon to access the following nudge tools.



Touch the Nudge Right icon in the A-B Tools menu to move the guidance path to the right in 1 inch [2 cm] increments.



Touch the Nudge Left icon in the A-B Tools menu to move the guidance path to the left in 1 inch [2 cm] increments.

## Field Boundary Tools

The following icons will be used while creating a field boundary.



Touch the Boundary Tools icon to display boundary tools available for the current job.



A previously recorded boundary can be loaded into the current job file by selecting the Load Field Boundary icon in the Menu. A list of job files stored on the field computer is displayed. Select the job name to load the boundary recorded that field boundary into the current job.



Touch the Delete Boundary icon to reset the current field boundary. A field boundary must be present in the current job or this icon will not appear in the Menu.



Touch the Record Field Boundary icon to begin recording a new field boundary. While a field boundary is being recorded, the Pause and End Field Boundary icons are displayed on the Guidance screen.



## Pause, Resume and End Boundaries

The following icons will appear on the Guidance screen while a field boundary is being recorded.



Touch the Pause Boundary icon to pause recording of the field boundary. Use this feature when the vehicle's path will not reflect the boundary such as when re-filling tanks, etc. To resume recording, touch the Resume icon.



While paused, the Resume Boundary icon replaces the Pause and End Boundary icons on the Guidance screen. Touch this icon to resume recording of the current boundary.



To finish recording a boundary, touch the End Field Boundary icon. Note: The field computer draws a straight line from the boundary starting point to the vehicle's current location when closing a boundary.

---

## Alarms

Depending upon the alert or warning condition, the field computer may display one or more of the following icons:



The Product Control Alarm icon is displayed if an alarm condition such as a low bin or tank, or when product control cannot reach the target rate.



The AutoBoom Alarm icon is displayed if an alarm condition such as sensors too low or high, the pressure is higher than the set point or if a sensor has gone off line. Refer to Chapter 10, *Using AutoBoom™*, for more information about the optional Glide Series AutoBoom system and troubleshooting AutoBoom alarms.



Touch the Show All Alarms icon to view all current alarm conditions.



## AccuBoom™

The following tools and icons will be displayed when working in a job with the AccuBoom feature enabled.



Select the spray zone mapping tools to display AccuBoom and spray zone map tools available for the current job. Tools displayed in this menu may only appear if certain map features are present within the current job. Read the descriptions of the following tools for more information regarding when the tool or feature is available.



While editing spray zone maps, the Home button is replaced with the Accept button. To save the currently displayed map and restore normal Menu tools, select the Accept button.



Touch the Record No-Spray Zone icon to begin recording points along a no-spray zone boundary. The area inside of the completed boundary will become a no-spray zone.



Touch the Record Spray Zone icon to begin recording points along a spray zone boundary. The area inside of the completed boundary will become a spray zone.



Touch the Record Field Boundary icon to create a new AccuBoom field boundary. With spray zone mapping mode enabled, AccuBoom will assign a minimum of three boom widths outside of the completed boundary as a no-spray zone.

## On-Screen Tools

While recording a spray zone map feature, the following icons may be displayed on the Guidance screen.

### Pause

Select the Pause button displayed on the Guidance screen to temporarily interrupt recording the current spray zone map feature.

Pause No-Spray Zone



Pause Spray Zone



Pause Field Boundary



This feature is useful if the vehicle course will move away from the boundary path to refill a tank, etc.

### Resume

While Paused, a Resume button will replace the Pause and End buttons on the Guidance screen. Touch this button to resume recording the paused spray zone feature.

Resume No-Spray Zone



Resume Spray Zone



Resume Field Boundary



## Stop

When finished recording a Zone or Boundary, touch the Stop button to close Zone or Boundary.

Stop No-Spray  
Zone



Stop Spray  
Zone



Stop Field  
Boundary



**Note:** The field computer will draw a straight line from the starting point of the feature to the machine's current location when closing the spray zone map feature.

---

## AutoBoom™



The AutoBoom Off icon is displayed when the feature is turned off. Touch this icon to toggle AutoBoom On. Automatic boom height management cannot be Enabled if AutoBoom is Off.



The AutoBoom On icon is displayed when the feature is turned on. Touching this icon will toggle the feature Off. Important: Each boom must be Enabled before the Glide Series AutoBoom will automatically control boom height.

## AutoBoom™ Status Indicator



The AutoBoom Off indicator is displayed when the AutoBoom feature is turned off. Boom height management is not enabled.



The AutoBoom On/Disabled indicator is displayed when the AutoBoom feature is On but boom height management is not enabled.



The AutoBoom On/Left Enabled indicator displays when AutoBoom is On and boom height management is only Enabled for the left boom. AutoBoom will not adjust the height of the right boom.



The AutoBoom On/Right Enabled indicator displays when AutoBoom is On and boom height management is only Enabled for the right boom. AutoBoom will not adjust the height of the left boom.



The AutoBoom On/Enabled indicator displays when AutoBoom is On and boom height management is Enabled for both booms.

**Note:** If operating with an UltraGlide AutoBoom system, the set Sensor Height is displayed in the Status Display. If an optional center rack sensor is installed, the actual height of the center rack will be displayed in this area.

**A****A-B Path Tools** 76**AccuBoom™** 149

- Creating a Spray Zone Map 159
- Enable Override Popup 153
- Enabling 154
- Examples of Spray Zone Maps 162
- Loading a Field Boundary 157
- Look Ahead 153
- Mapping Tools 158
- Modes of Operation 156
- On Override 150
- Setup 150
- Spray Zone Maps 157
- Turn Off Percent 153

**Alarm Settings** 112**Alarms** 87**Applying Software Updates** 146**AutoBoom™** 165

- Operation 166
- PowerGlide Plus 165
- Status Display 166
- Turning On the AutoBoom™ Feature 166
- UltraGlide 166

**B****Boom Cal** 178, 183**Boom Sections** 132**C****Calibration**

- Additional Data 186
  - Entering Tank Volume 186
  - Volume/Area Display Information 186
- Granular Applications
  - Product Density 184
  - Rate Cal 184
  - Spreader Constant 183

**Calibration Settings** 105**Calibration Values**

- Boom Cal 132, 178, 183
- Calculating 175
- Fan or Pump Cal 106
- Granular Applications 183
- Liquid Applications 178
- Meter Cal 179
- Meter Cal or Product Density 105
- Pressure 1 and 2 Cal 107
- Rate Cal 106, 180
- Speed Cal 100, 175
- Spinner RPM 185
- Spreader Constant 107
- Valve Cal 101, 179

**CAN (Controller Area Network)**

- Connections 25
- Troubleshooting 34, 173

**CAN Diagnostics** 30, 98**CAN Nodes**

- Diagnostics 30
- Off-line Errors 34
- Programming 33
- Readdressing 31

Restart CAN Communication 32

Version Information 31

**CANbus Diagnostics** 27**Care and Use** 9**Computer Menu** 124

- Applying Software Updates 146
- Demo Mode 128
- Display 124
- File Maintenance 128
- Region 126
- Updates 127, 145

**Configuring Section Labels** 135**Connecting External DGPS Receiver Systems** 21**Creating a Spray Zone Map** 159**D****Demo Mode** 128**Display** 124**E****Edit Mode** x**Electrical**

Safety 2

**Enabling AccuBoom™** 154**Enhanced Last Pass** 66**Envizio Pro**

- Dual Product (Liquid/Granular) CAN Control System Diagram 29
- Single Product CAN Control System Diagram 28
- Startup 36

**Envizio Pro and Envizio Pro II Features***See Features***Error Messages** 171

- GPS 172
- Job 171

**F****Features** 4

- Front Panel 6
- Internal DGPS Receiver 5
- On-Screen Guidance 4
- Optional Features 6
- Rear Panel 8
- Speed Compensated Product Control and Datalogging 4

**Field Boundaries** 81**Field Boundary Tools** 82**Field Review Mode Tools** 79**File Maintenance** 128, 140

- File Outputs 140
- Performing 141

**File Structure** 143**Fixed Contour** 67**G****GPS Menu** 115

- Differential 119
- e-Dif 120
- GPS Health 116
- Output 121

## Index

---

- Source 122
  - GPS Status** 54
  - Guidance Patterns**
    - Enhanced Last Pass 60
    - Fixed Contour 61, 67
    - Last Pass 66
    - Pivot 61, 68
    - Straight (A-B) Line 61, 67
  - Guidance Screen** 64
    - Features 64
      - AutoBoom™ Status Display 166
      - Menu 75
      - On-Screen Rate Bump buttons 74
      - Pressure or Fan Speed Display 74
      - Product Rate Display 72
      - SmarTrax Status 65
      - Tank or Bin Level Indicator 71
  - Guidance Views** 75
    - Field Review Mode 78
  - Guidance Width** 129
- ## H
- Height** 132
  - Home** 75
  - Home Screen** 53
  - Hydraulic**
    - Safety 2
- ## I
- Important Safety Information** 1
    - Electrical 2
    - Hydraulics 2
  - In Job Product Configuration** 72
  - Initial Setup** 35
  - Initial Startup**
    - Wizard 38
  - Installation** 11
    - DGPS Antenna 20
    - External DGPS Receiver Systems 21
    - Mounting the Field Computer 16
    - Optional Equipment 22
      - AutoBoom™ 25
      - Light Bar 23
      - Serial Console 24
      - SmarTrax™, SmartSteer™, QuickTrax™ 24
      - TM-1 Tilt Sensor 23
    - Overview 11
  - Introduction**
    - Unit Definitions and Conversions x
    - Unit of Measure Conversions x
    - Unit of Measure Definitions x
- ## J
- Job Error Messages** 171
  - Job Files** 57
  - Jobs**
    - AccuBoom™ Setup 62
    - AutoBoom™ Setup 64
    - Guidance Pattern Setup 60
    - Product Setup 62
    - Resume an Existing Job 60
    - Setting up a Job 58
    - Start a New Job 60
    - Starting a Job 57
- ## K
- Kit Contents** 12
- ## M
- Master Pressure** 152
  - Menu** 75
  - Meter Cal** 105, 179
  - Mounting the Field Computer** 16
- ## N
- Node Version Information** 31
- ## O
- Overview of the Installation Process** 11
- ## P
- Performing File Maintenance** 141
  - Pivot** 68
  - Prescription (Rx) Settings** 108
  - Prescription Maps** 84
    - Applying Rx Maps 85
    - Loading Rx Maps 84
    - Using Prescription Maps 86
  - Pressure 1 and 2 Cal** 107
  - Product Control Features** 70
  - Product Control Options** 94
  - Product Density** 105
  - Product Rate Display** 72
  - Programming CANbus Nodes** 33
  - Pump or Fan Cal** 106
- ## R
- Rate Bump** 107
  - Rate Cal** 180
  - Rate Cal** 106
  - Readdressing the Nodes** 31
  - Reference of Icons**
    - A-B Path Tools 211
    - AccuBoom™ 215
    - Alarms 214
    - AutoBoom™ 216
    - Field Boundary Tools 213
    - Field Review Mode Tools 210
    - GPS Status 205
    - Guidance Patterns 209
    - Guidance Screen 209
    - Guidance Views 210
    - Home Screen 204
    - Navigation 203
    - Tools Menu 206
  - Region** 126
  - Restart CAN Communication** 32
-

**Rx Settings**

See Prescription (Rx) Settings

**S****Screens**Guidance Screen 64  
Home Screen 53**Section Assignments** 114**Serial Port Configuration** 97**Setup Wizard Menu** 44AutoBoom™ Setup Wizard 52  
Product Control Setup Wizard 49  
Section Setup Wizard 46**Speed Cal** 100, 175**Spreader Constant** 107**Straight (A-B) Line** 67**System Menu** 93AccuBoom™ 114  
AutoBoom™ 114  
Control Interface 93  
Light Bar 125  
Product Control 98**T****Tank or Bin Level Indicator** 71**Test Speed** 100**Testing Cables**Flow Meter 188  
Speed Sensor 187**Tiered Boom Settings** 107, 181**Time Zone Settings** 126**Tools Menu**Computer Menu 124  
GPS Menu 115  
Navigation 91  
Show All 137  
System Menu 93  
Tilt Sensor 123  
Vehicle Menu 129**Touch Screen Calibration** 37**Troubleshooting** 169Coverage Map Issues 171  
General Issues 169  
Job Issues 170  
Setup Issues 170**U****Updates** 127, 145

Time Zone Settings 126

**Updating** 201**Using Guidance Patterns** 65**Using Spray Zone Maps** 157**V****Valve Cal** 179**Valve Cal** 101**Variable Rates** 84**Vehicle Menu** 129Boom Sections 132  
Section Setup 133

Guidance Width 129

Height 132

Offsets 130

**Verifying Flow Rate Limits** 106**Volume**

Tank or Bin 109

**Volume and Area Settings** 109



**RAVEN**

# **RAVEN INDUSTRIES**

## **Limited Warranty**

---

### ***What Does this Warranty Cover?***

This warranty covers all defects in workmanship or materials in your Raven Applied Technology Division product under normal use, maintenance, and service.

### ***How Long is the Coverage Period?***

Raven Applied Technology Division products are covered by this warranty for 12 months after the date of purchase. This warranty coverage applies only to the original owner and is nontransferable.

### ***How Can I Get Service?***

Bring the defective part and proof of purchase to your Raven dealer. If your dealer agrees with the warranty claim, the dealer will send the part and proof of purchase to their distributor or to Raven Industries for final approval.

### ***What Will Raven Industries Do?***

Upon confirmation of the warranty claim, Raven Industries will, at our discretion, repair or replace the defective part and pay for return freight.

### ***What is not Covered by this Warranty?***

Raven Industries will not assume any expense or liability for repairs made outside our facilities without written consent. Raven Industries is not responsible for damage to any associated equipment or products and will not be liable for loss of profit or other special damages. The obligation of this warranty is in lieu of all other warranties, expressed or implied, and no person or organization is authorized to assume any liability for Raven Industries.

Damages caused by normal wear and tear, misuse, abuse, neglect, accident, or improper installation and maintenance are not covered by this warranty.

**R A V E N**

Envizio Pro™ & Envizio Pro II™  
(Software Version 3.2)  
Installation & Operation Manual  
(P/N 016-0171-148 Rev H 6/11 E17846)

*Simply improving your position.™*



Raven Industries  
Applied Technology Division  
P.O. Box 5107  
Sioux Falls, SD 57117-5107

Toll Free (U.S. and Canada): (800)-243-5435  
or Outside the U.S. :1 605-575-0722  
Fax: 605-331-0426  
[www.ravenprecision.com](http://www.ravenprecision.com)

Notice: This document and the information provided are the property of Raven Industries, Inc. and may only be used as authorized by Raven Industries, Inc. All rights reserved under copyright laws.