




396-2887Y1


Plumbing Discharge Kit Installation Instructions

Kit Number: 520-00-103500

Kit Description: *Discharge Kit, 2" or 1-1/2" Fill, Tower 3/4" Outlet*

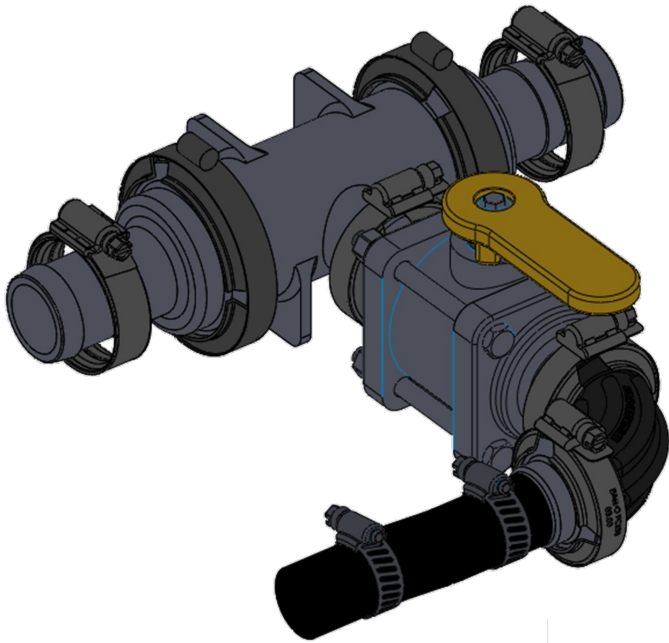

For use with 1-1/2" Fill Line

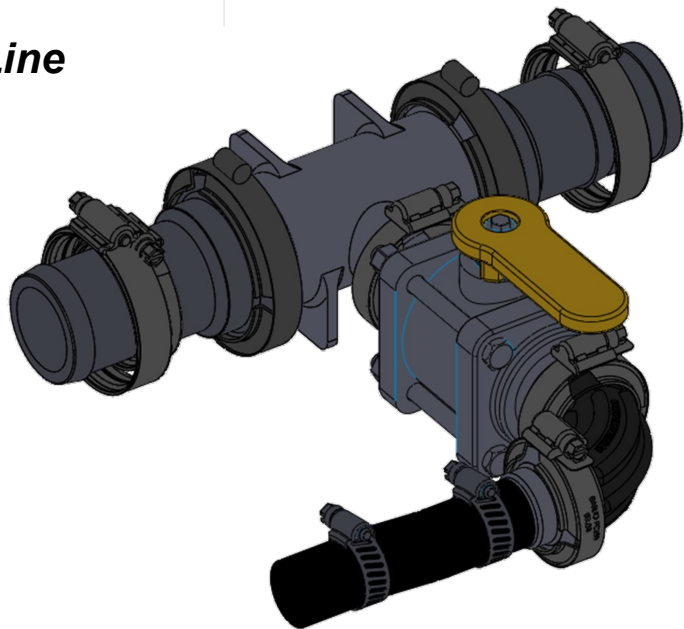


For use with 2" Fill Line



Parts List and Exploded View

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	100-075PLUG	3/4" Pipe Plug	1
2	100-125PLUG	1-1/4" Pipe Plug	1
3	102-100MVCF	1" Manifold Standard Port Poly Valve	1
4	105-100075BRB	1" Manifold x 3/4" HB	1
5	105-100075BRB90	1" Manifold x 3/4" HB—90 Degree	1
6	105-100G-H	1" EPDM Manifold Gasket	3
7	105-100SWP90	1" Manifold Sweep - 90 Degree	1
8	105-150G-H	1 1/2" EPDM Gasket	2
9	105-200100TEE	2" Manifold x 1" Manifold Tee	1
10	105-200150BRB	2" Manifold X 1-1/2" HB	2
11	105-200BRB	2" Manifold x 2" HB	2
12	105-FC100	1" Manifold Clamp	3
13	105-FC200	2" Manifold Clamp	2
14	280-075-AG200	3/4" AG200 Hose	20'
15	350-1208	SS Hose Clamp - Size 12 - 1-1/4" Diameter	2
16	350-PS238	Pressure Seal HD Clamp, Size 238 - 1.625" - 2.125" (1-1/4" - 1-1/2" ENF, WBS or AG200)	2
17	350-PS288	Pressure Seal HD Clamp, Size 288 - 2.125" - 2.625" (2" ENF or WBS Hose)	2


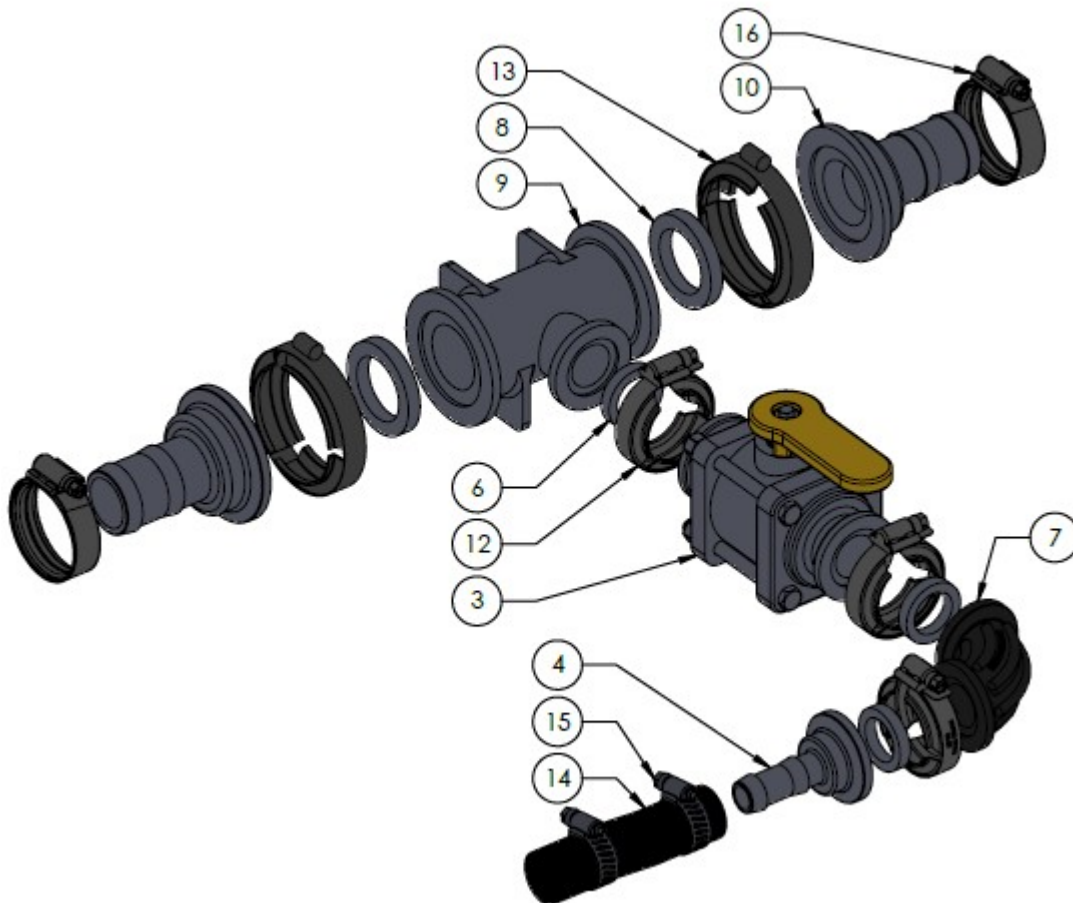




Step by Step Instructions

1. Assemble Discharge Kit as shown on previous page.
2. Using the correct size hose barbs for your fill kit, cut 2" or 1-1/2" fill line and insert the two hose barbs of the discharge kit into fill line. Tighten with hose clamps provided.
3. Included 3/4" and 1-1/4" plugs can be used as necessary to plug unused fill/discharge bung on tank.
4. Route provided 3/4" hose to SurePoint Ag Tower system. Tighten with hose clamps provided.

NOTE: Splice into the fill line where it will be convenient to close the valve while filling the tank.

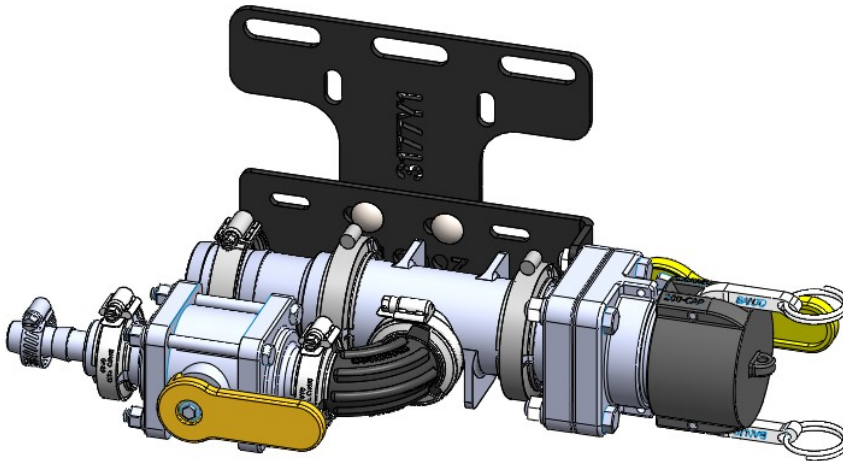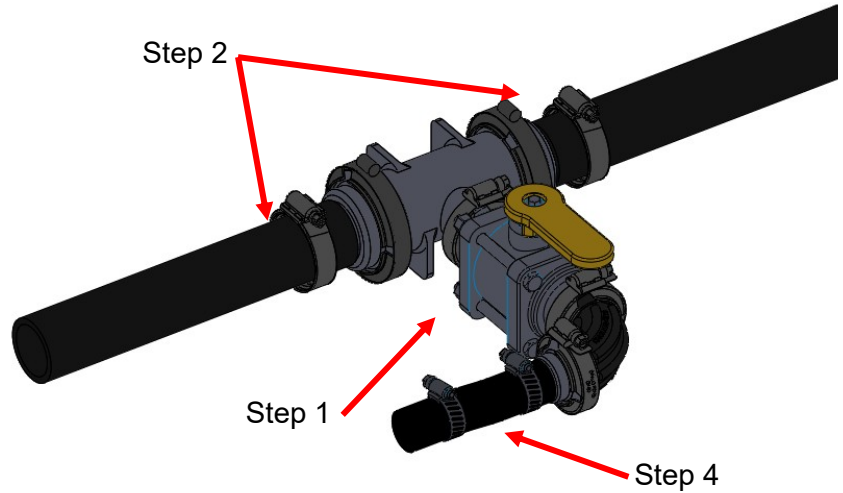

Shown above is recommended install if both Fill and Discharge are SurePoint kits.