


396-5190Y1 4x4 PumpRight Mount Extension Bar Mounting Instructions

Kit Number: 515-03-2016

Kit Description: PumpRight 4x4 Extension Mounting Bracket Kit

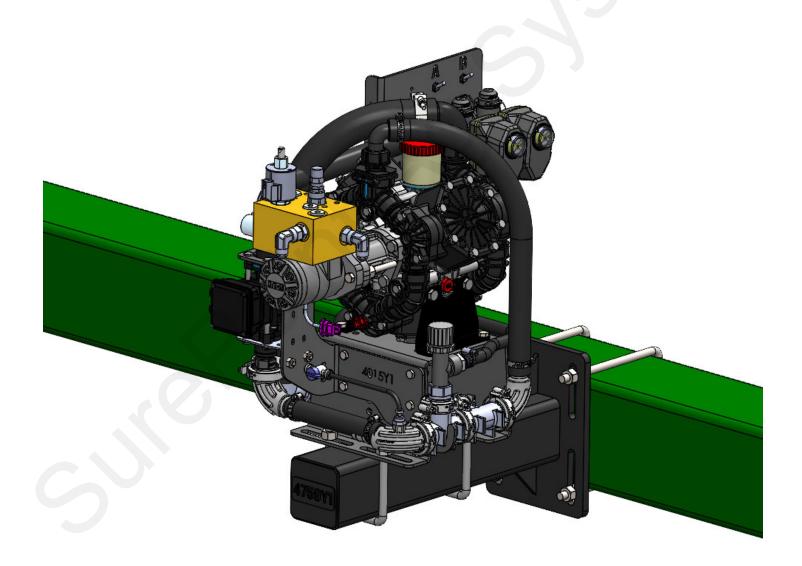



Parts List and Instructions

ITEN NO.		DESCRIPTION	QTY.
1	380-1023	1/2" U-bolt Kit - fits 4" x 4" - (4" opening) includes flange nuts	2
2	400-4759Y1-BK	Saddle Tank Pump Mounting Bracket - 4x4 Tube	1
		U-bolt may vary	
[10.50in 266.70m		[4.00in] 101.60mm (17.50in] (17.50in] (20.50in] (20.50in] (20.50in] (20.50in] (20.50in] (20.50in] (20.50in]	
1.	tallation Instructions: Mount the 400-4759Y1 r using u-bolt kit as specif Note: The u-bolt size wil model or configuration. Mount the PumpRight pr provided 4x4 u-bolts.	fied. Il vary by implement	Step 1