



396-2872Y1


John Deere 2510H

Nutrient Applicator

300 Gallon Oval Tank

Mounting Instructions

Kit Number: 528-01-050150

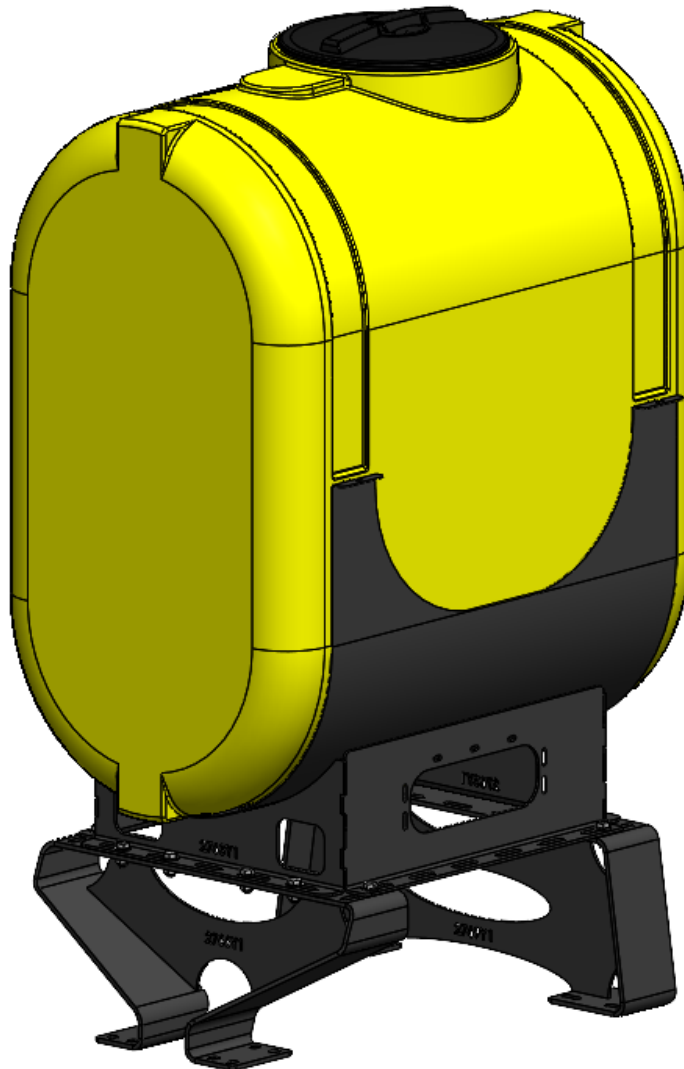



SurePoint Ag Systems Fertilizer Tank Safety and Warnings



SurePoint Ag Systems does not recommend transporting your implement with full fertilizer tanks. Doing so can result in damage to brackets and implement.



Remember to wear proper PPE (*Personal Protective Equipment*) when installing SurePoint Ag Systems fertilizer tank kits. Proper PPE includes gloves, foot and eye protection, and hearing protection.



SurePoint Ag Systems fertilizer application systems require winterization when not in use. Refer to your product manual for winterization procedures.


Failure to follow the above warnings can result in personal injury, damage to your SurePoint Ag Systems products, and damage to your implement.




Parts List and Exploded View

528-01-050150


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	727-08-OT0300-31-Y	Yellow 300 Gallon Oval Tank with 1 of 3/4" and 1 of 1/4" Bung	1
2	421-2763Y1	300 Gallon Oval Tank Cradle	1
3	420-2769Y1	JD 2510H Rear Tank Stand	1
4	420-2766Y1	JD 2510H Front Tank Stand	1
5	300-100108-5	5/8" x 1-1/2" Hex Head Bolt	12
6	330-10	5/8" Flat Washer	12
7	323-10	5/8" Flange Nut	12
8	380-1041	5/8" U-Bolt Kit - fits 4" x 6" tube (4" opening)	8
9	525-2055	Tank Strap Kit, 2" Wide, 300 Gal & Under	2
10	521-00-100280	Tank Overflow Assembly Bag for 150 -300 Gallon Tanks	1
11	280-075-AG200	3/4" AG200 Bulk	10'

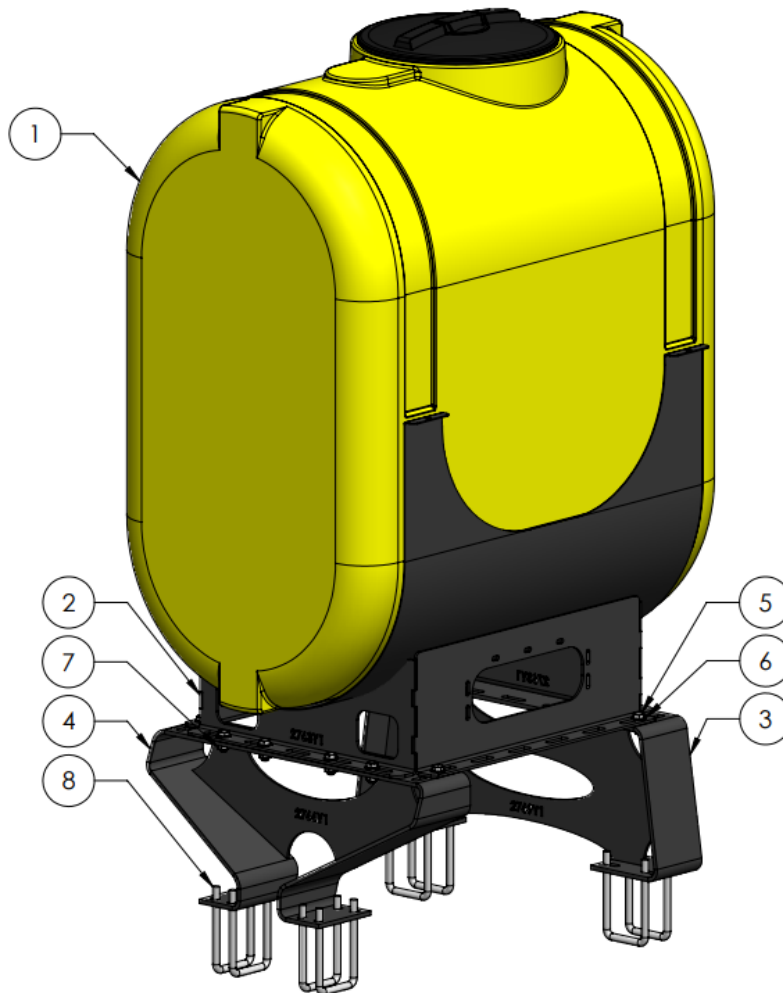

Step by Step Instructions

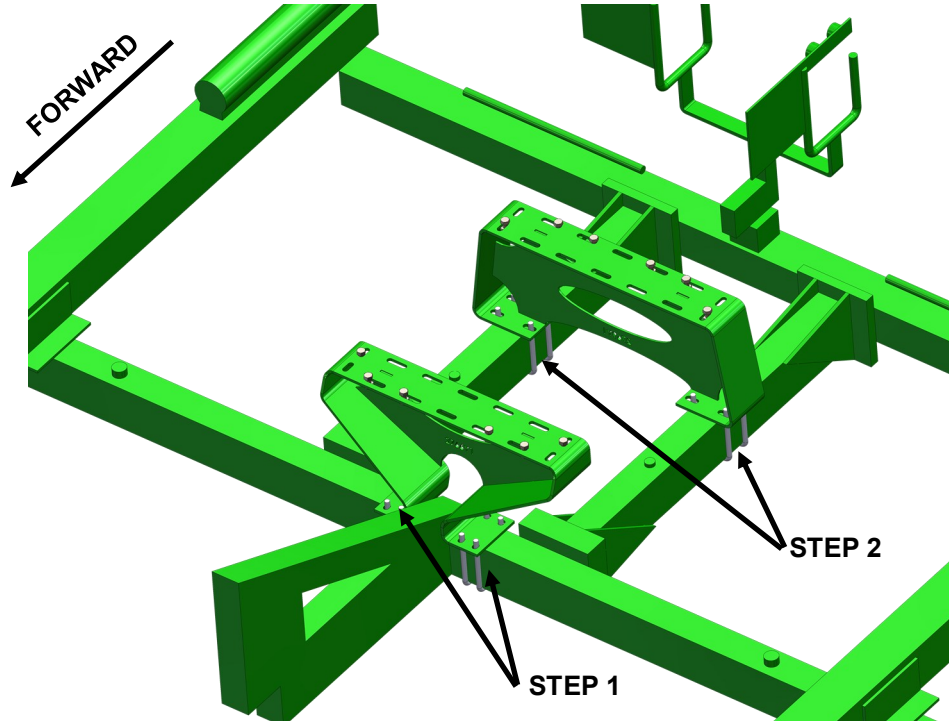

1. Mount the Front Tank Stand (420-2766Y1) with the supplied Square Bend U-bolts (380-1041) as shown in picture above. Fully tighten U-bolts.
2. Mount the Rear Tank Stand (420-2769Y1) with the supplied Square Bend U-bolts (380-1041) as shown in picture above. Do not fully tighten U-bolts to allow for adjustment when mounting the Tank Cradle in Step 3.

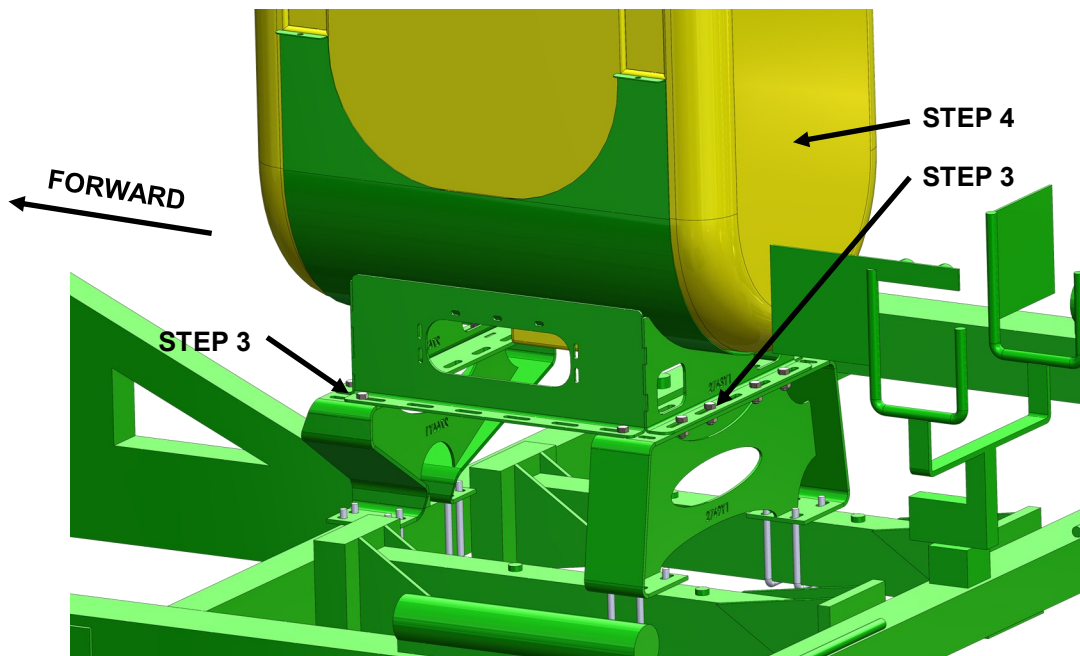

3. Mount the Tank Cradle (421-2763Y1) to the Tank Stands as shown in picture above with the provided 5/8" Bolts (300-100108-5) and Flange Nuts (323-10). Fully tighten all Nuts and U-bolts.
4. Insert the tank into the Cradle and fasten it to the Cradle using the 2" Strap Kit (525-2055). The Tank Straps will possibly need to be re-tightened after re-filling the tank due to expansion and contraction.